Toyota RAV4

Support more models

Toyota Corolla、Camry、Prado、Levin etc.,

VVDI

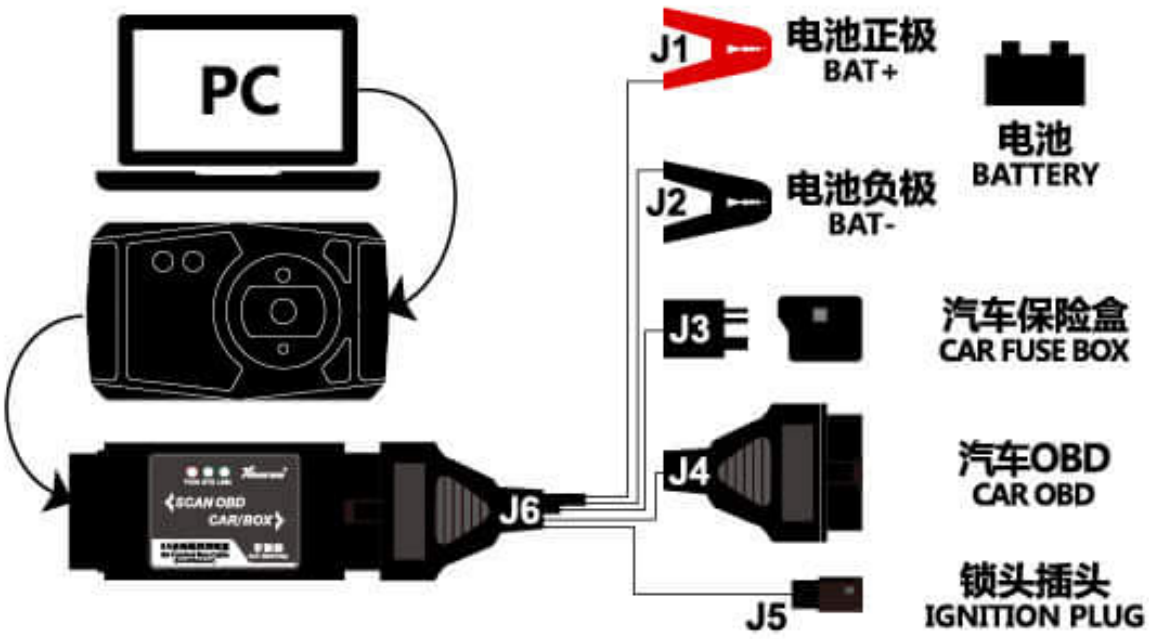
PC
J1
电池正极
BAT+
电池
BATTERY
J2
电池负极
BAT-
J3
汽车保险盒
CAR FUSE BOX
J4
汽车OBD
CAR OBD
J6
SCAN OBD
CAR/BOX
J5
锁头插头
IGNITION PLUG

KEY TOOL MAX & MINI OBD

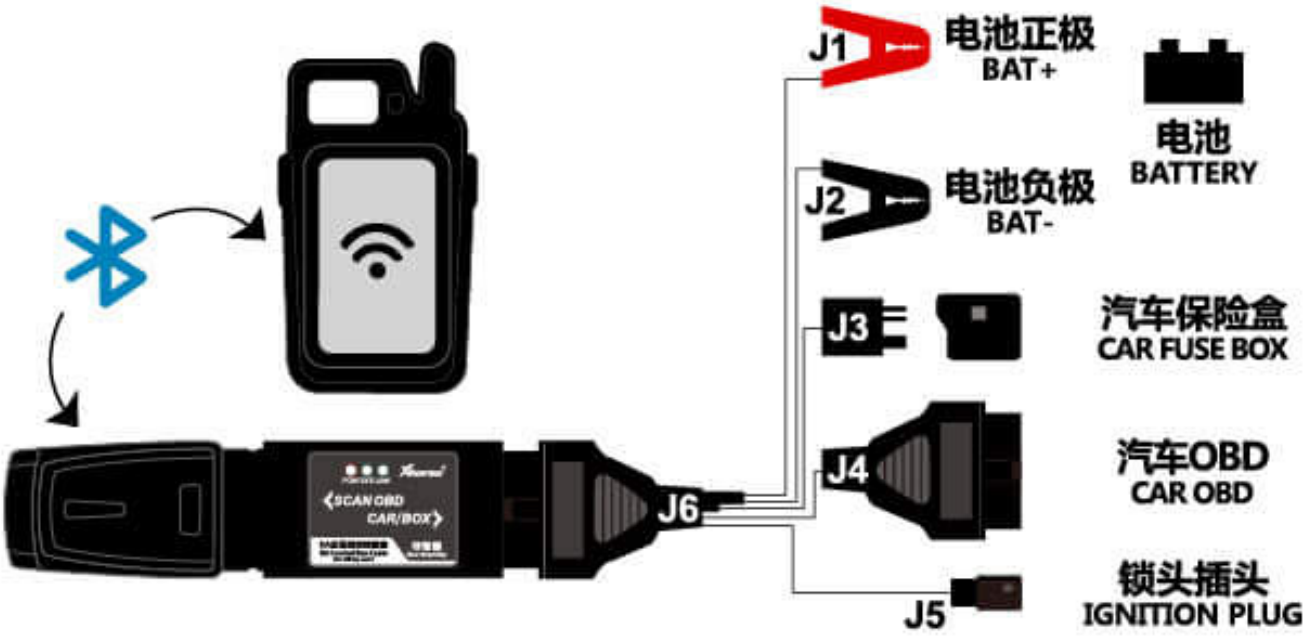
J1
电池正极
BAT+
电池
BATTERY
J2
电池负极
BAT-
J3
汽车保险盒
CAR FUSE BOX
J4
汽车OBD
CAR OBD
J5
锁头插头
IGNITION PLUG
J6
SCAN OBD
CAR/BOX

ⓘ Please update device to latest version for this function

During the process don't insert the key, please keep ignition off

① Disconnect the positive pole of the car battery to protect the connector and avoid short circuits

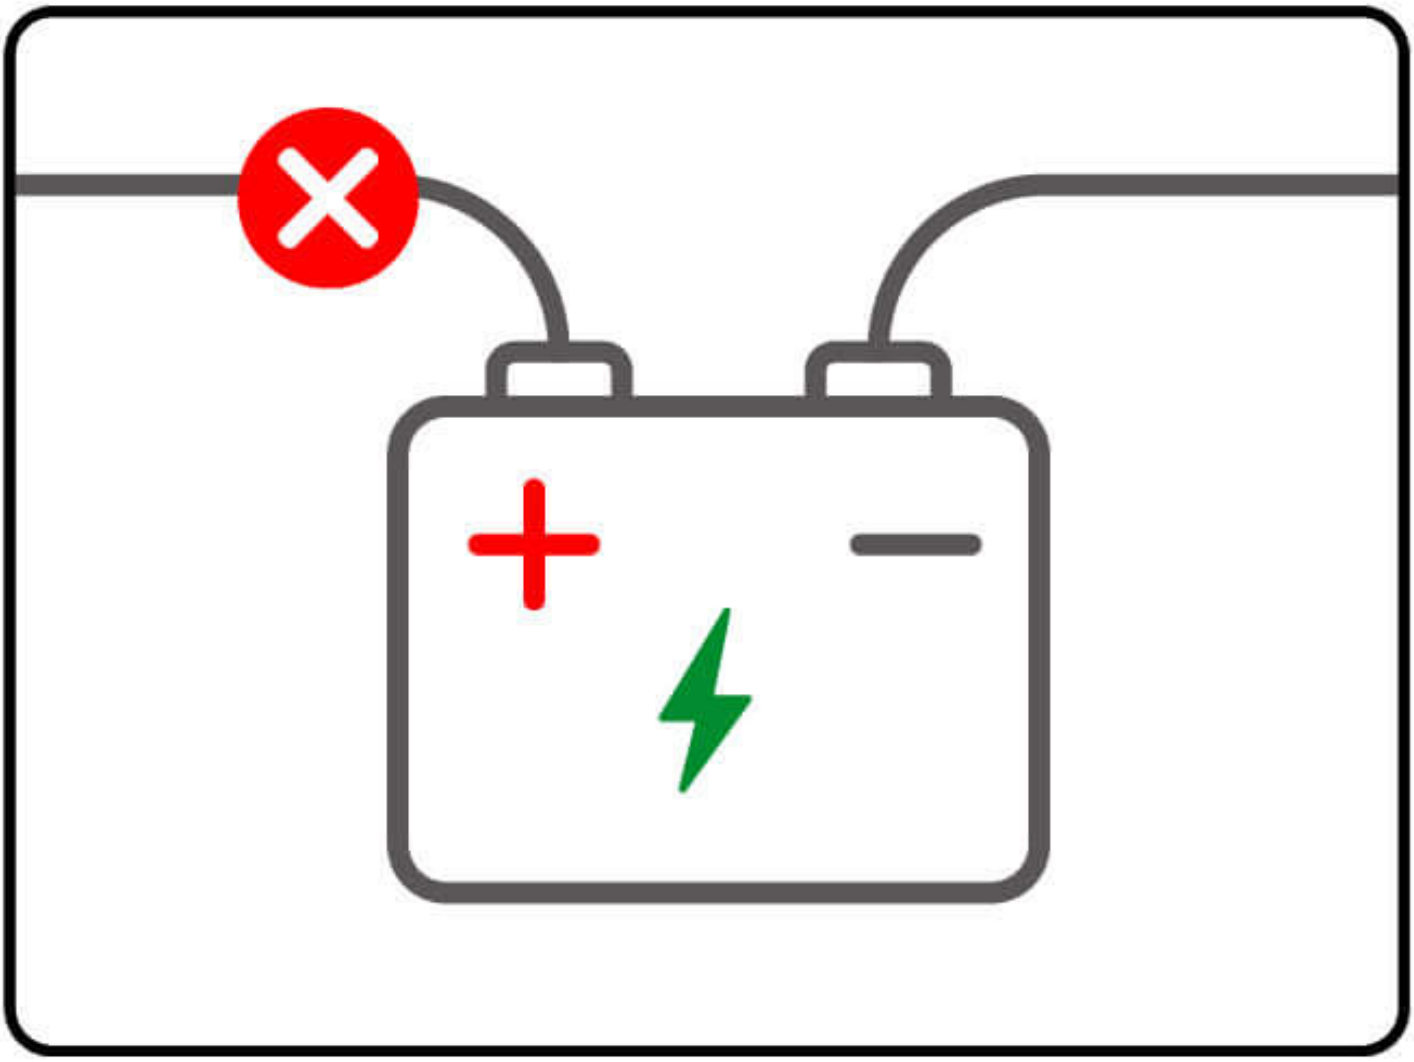

② Please connect to fuse box as the image

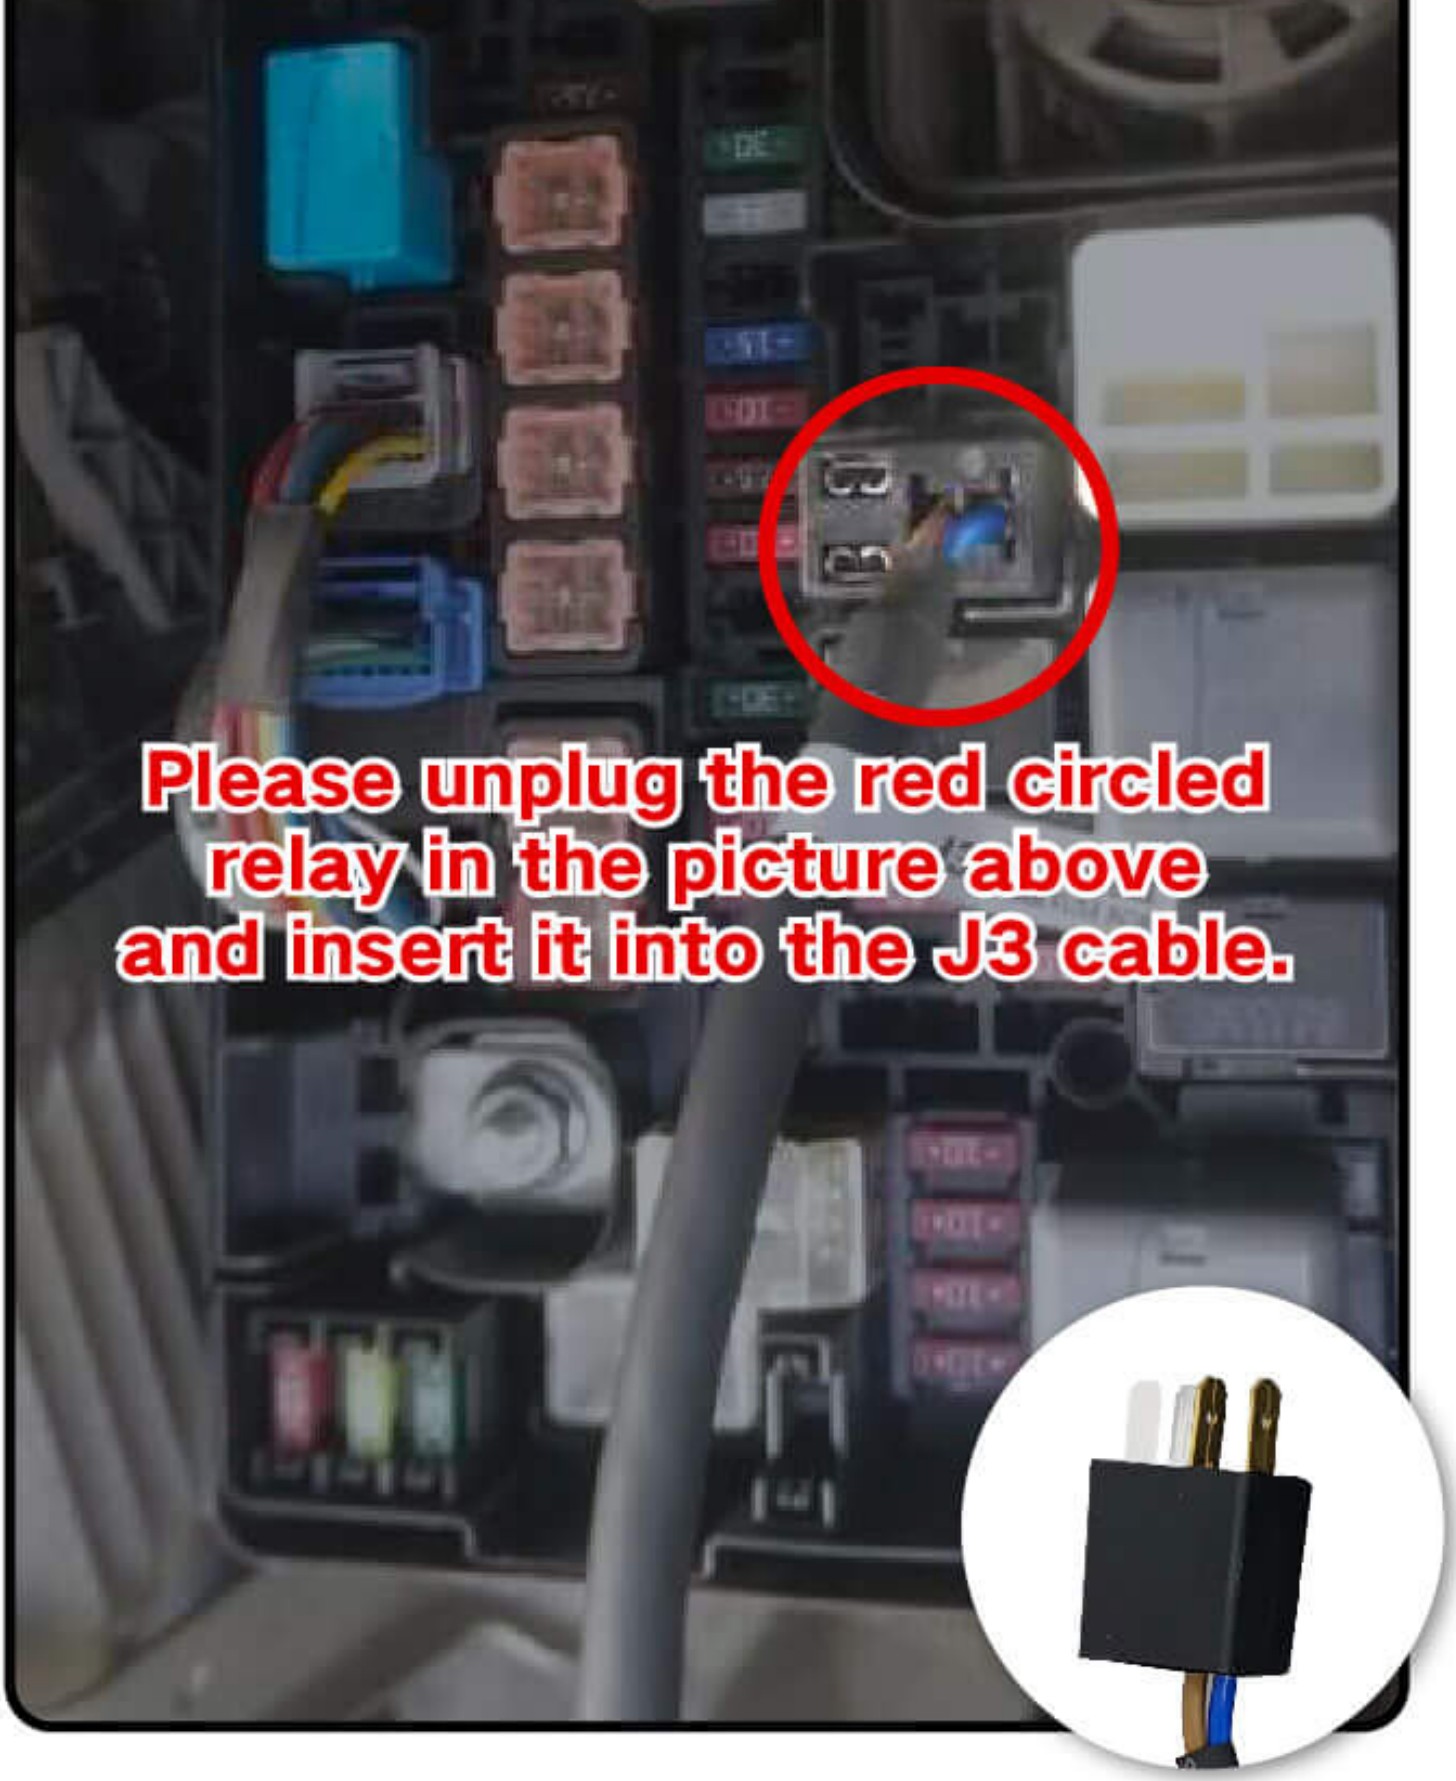

Please unplug the red circled relay in the picture above and insert it into the J3 cable.

J3 lock plug

③ Please connect the ELV wires as shown

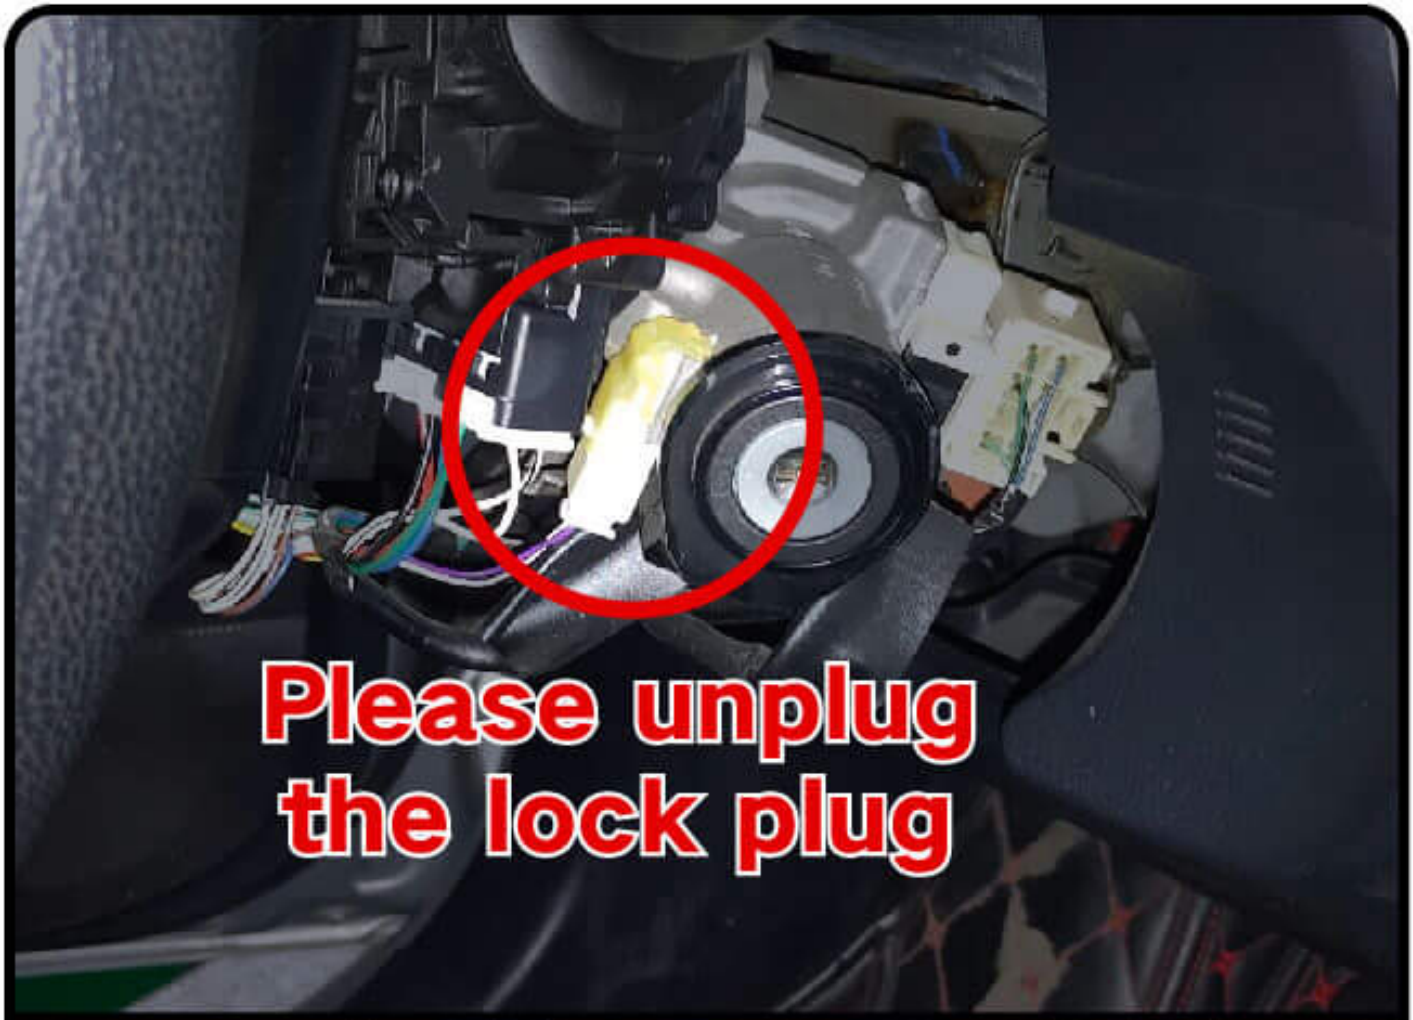
Please unplug
the lock plug

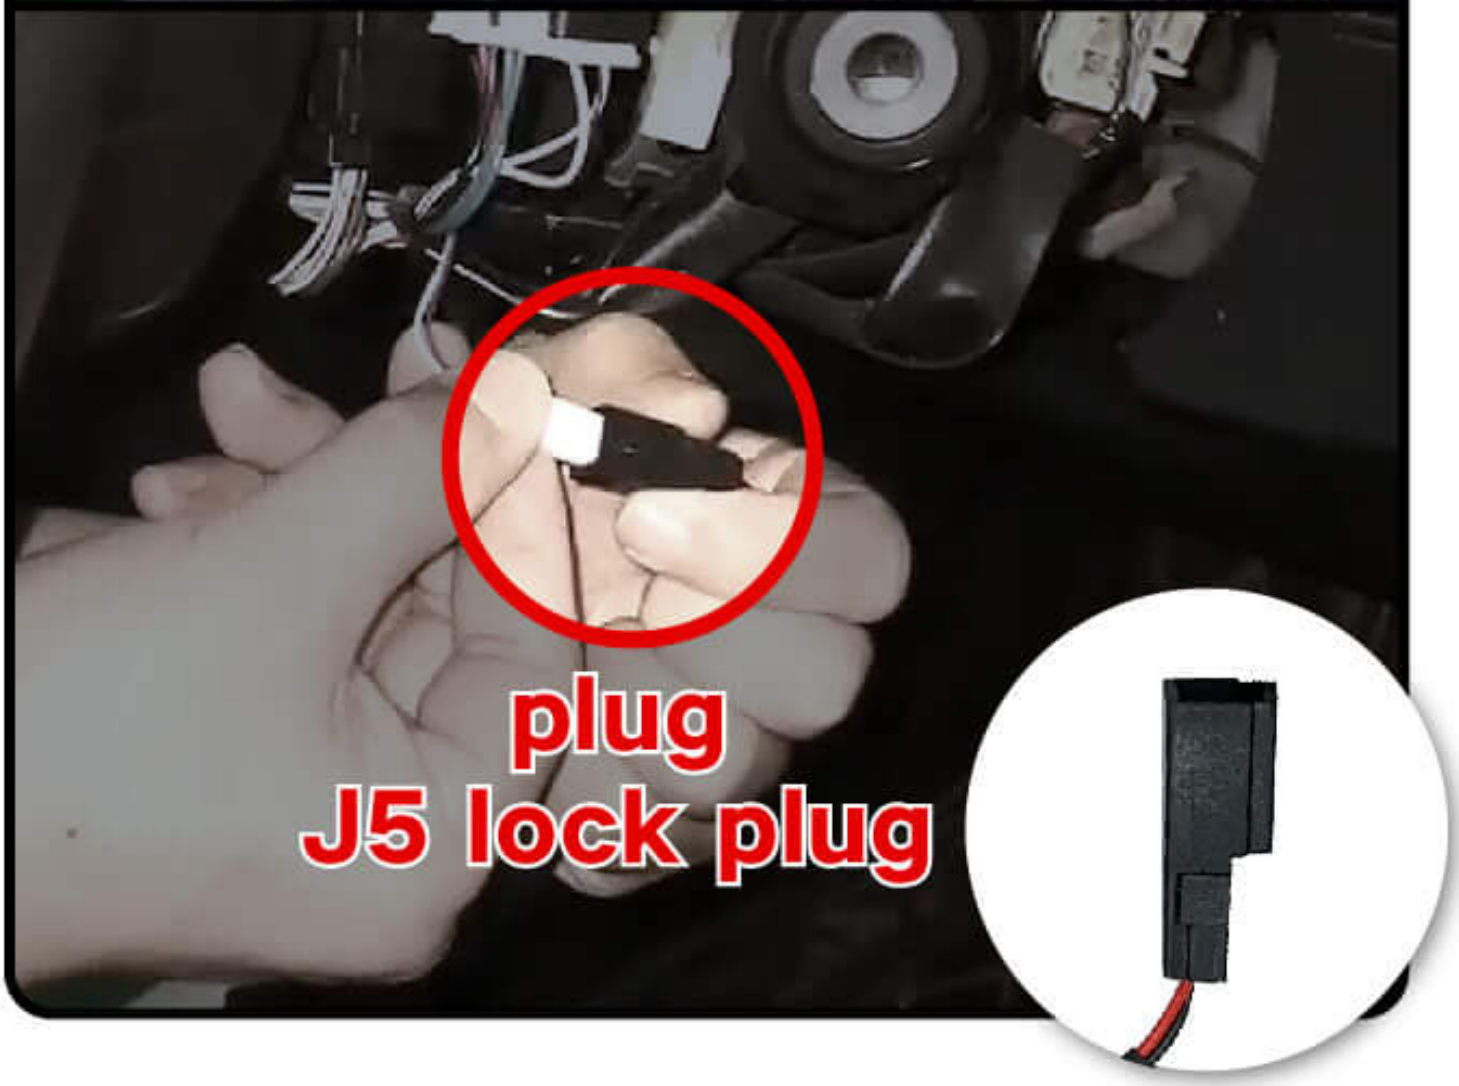
plug
J5 lock plug

J5 lock plug

④ Please connect to car OBD,

all key lost cables and car battery

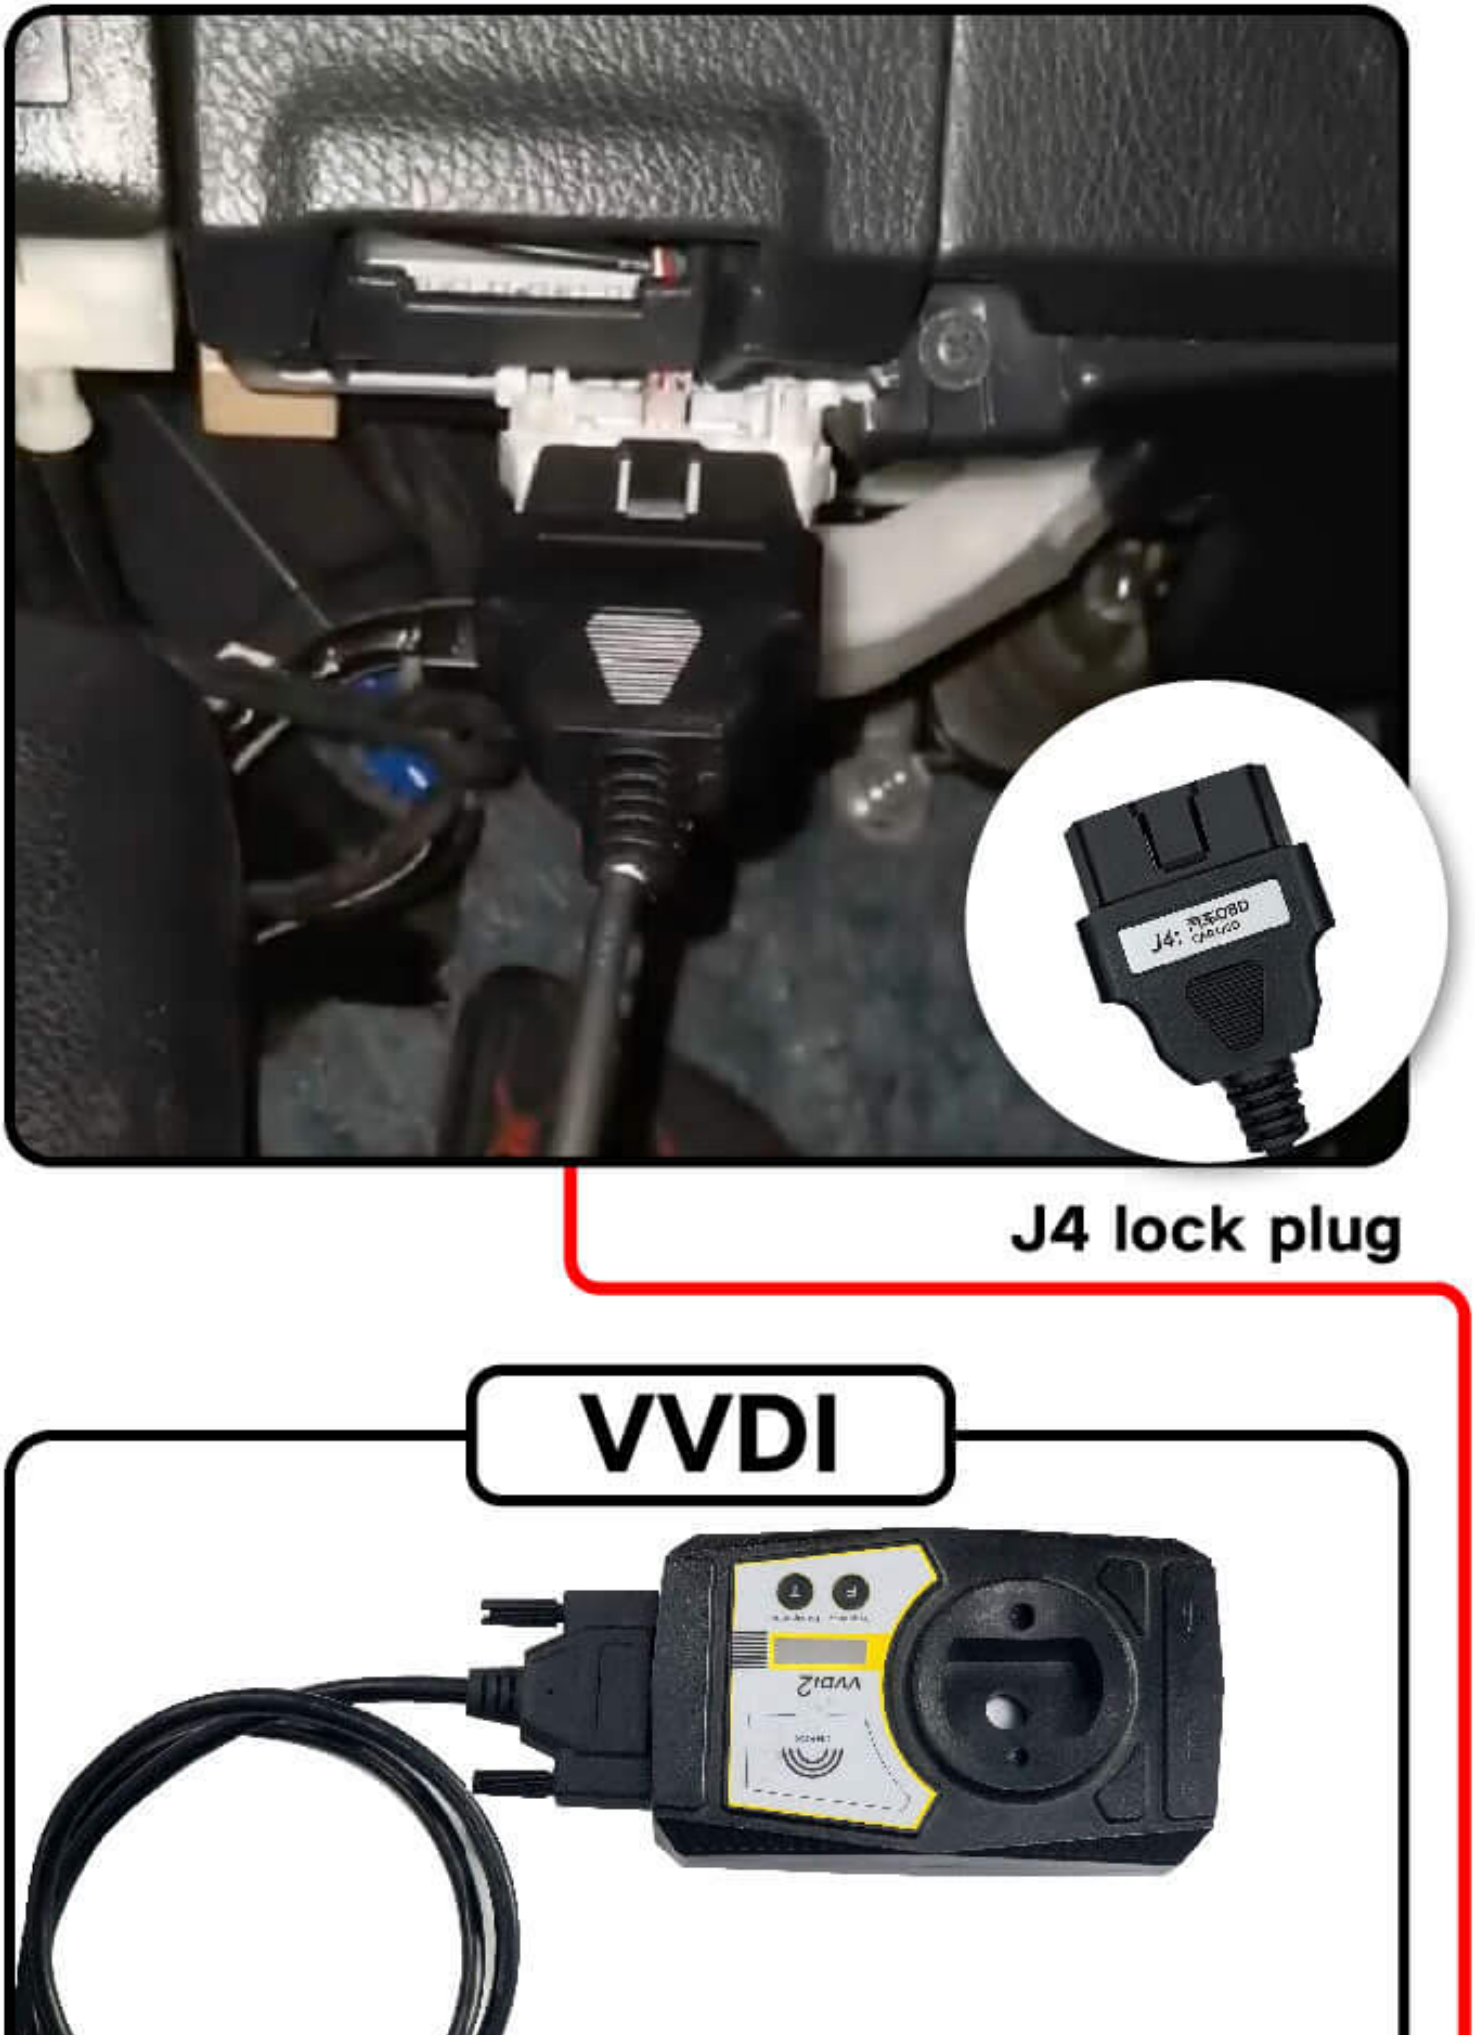
J4: 汽车OBD
J4 lock plug
VVDI
VVDI2

J6 lock plug

KEY TOOL MAX &MINI OBD



J6 lock plug

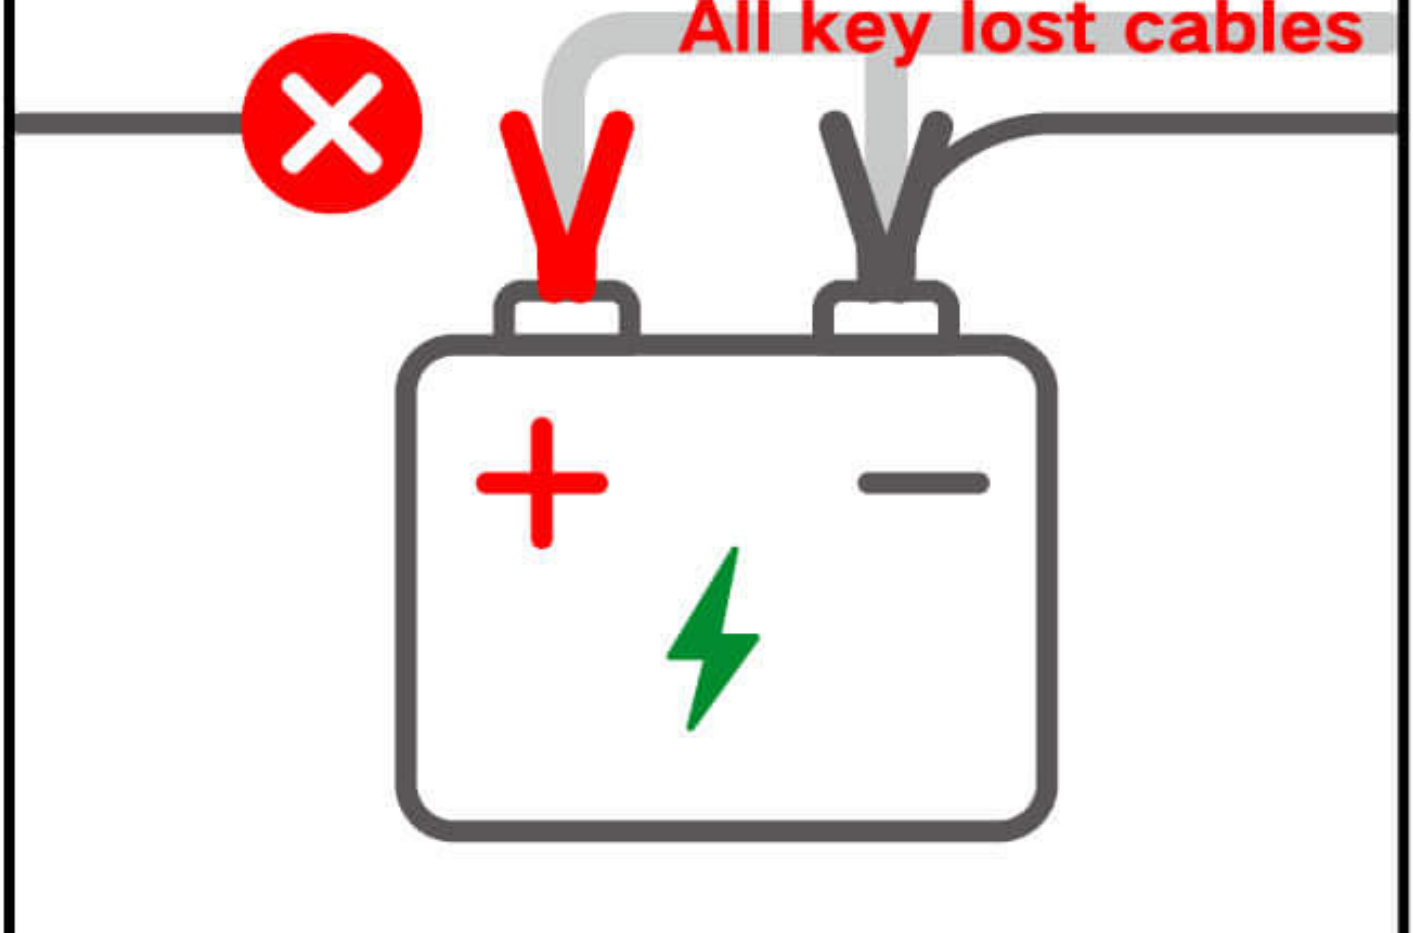
All key lost cables
+
−

⑤ Please generate start chip referring to software interface

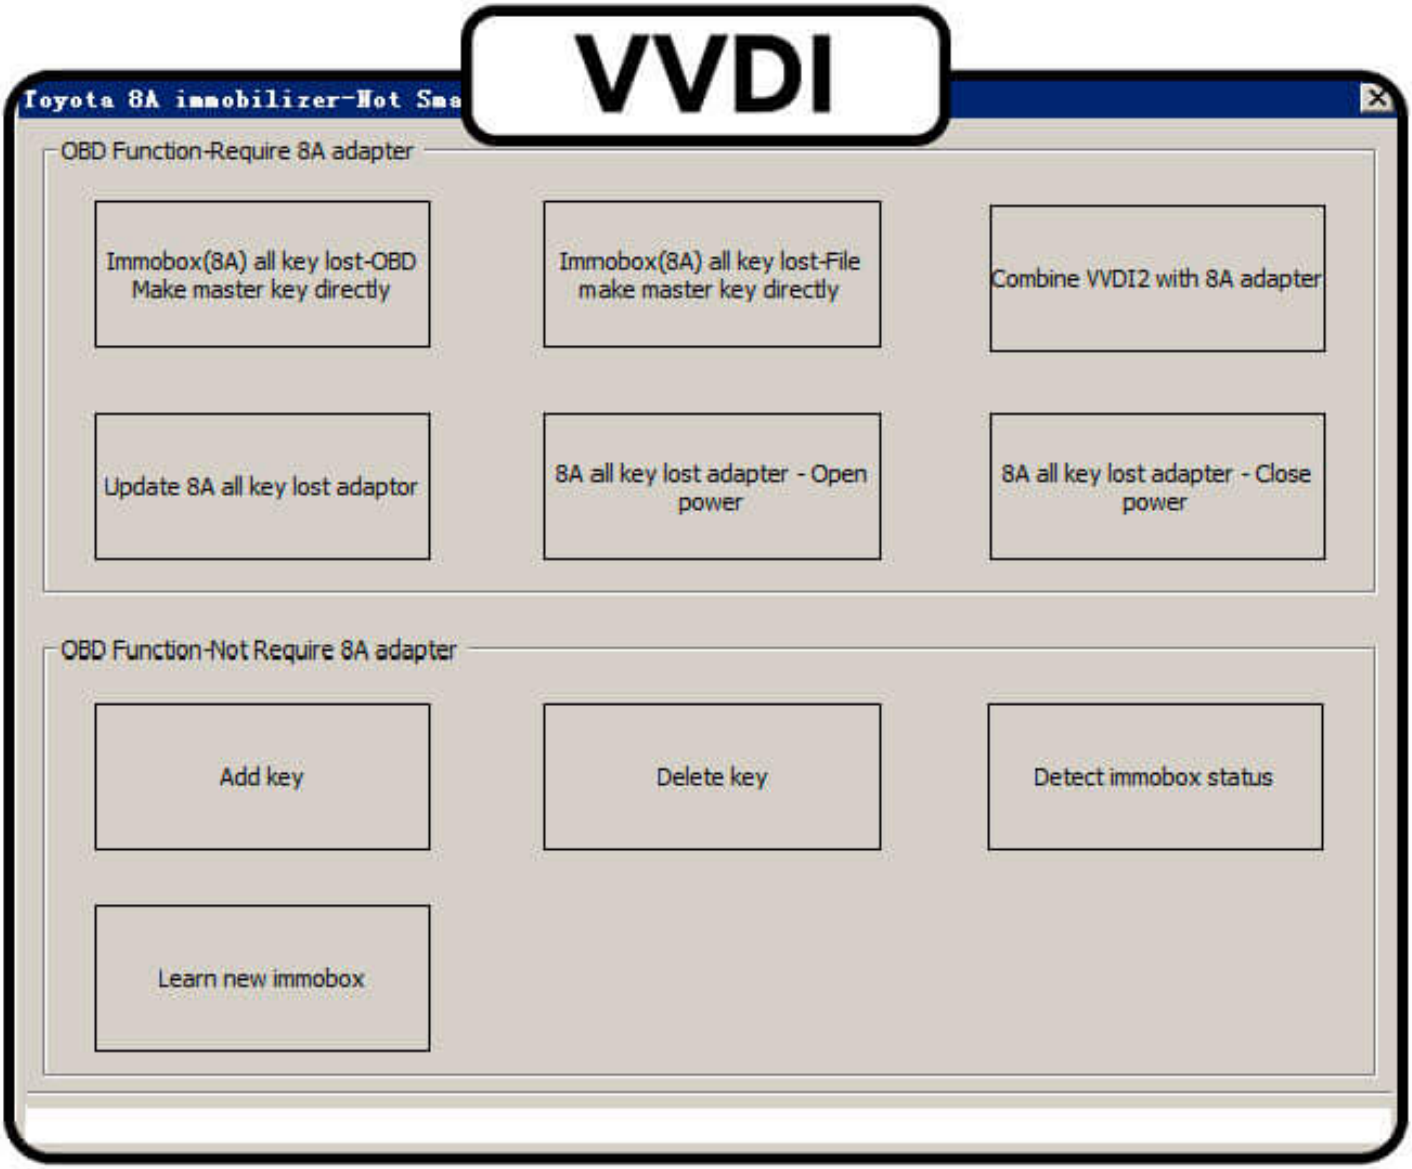

VVDI

Toyota 8A immobilizer-Hot Sma
OBD Function-Require 8A adapter
Immobox(8A) all key lost-OBD Make master key directly
Immobox(8A) all key lost-File make master key directly
Combine VVDI2 with 8A adapter
Update 8A all key lost adaptor
8A all key lost adapter - Open power
8A all key lost adapter - Close power
OBD Function-Not Require 8A adapter
Add key
Delete key
Detect immobox status
Learn new immobox

KEY TOOL MAX &MINI OBD

9:27
8A all key lost

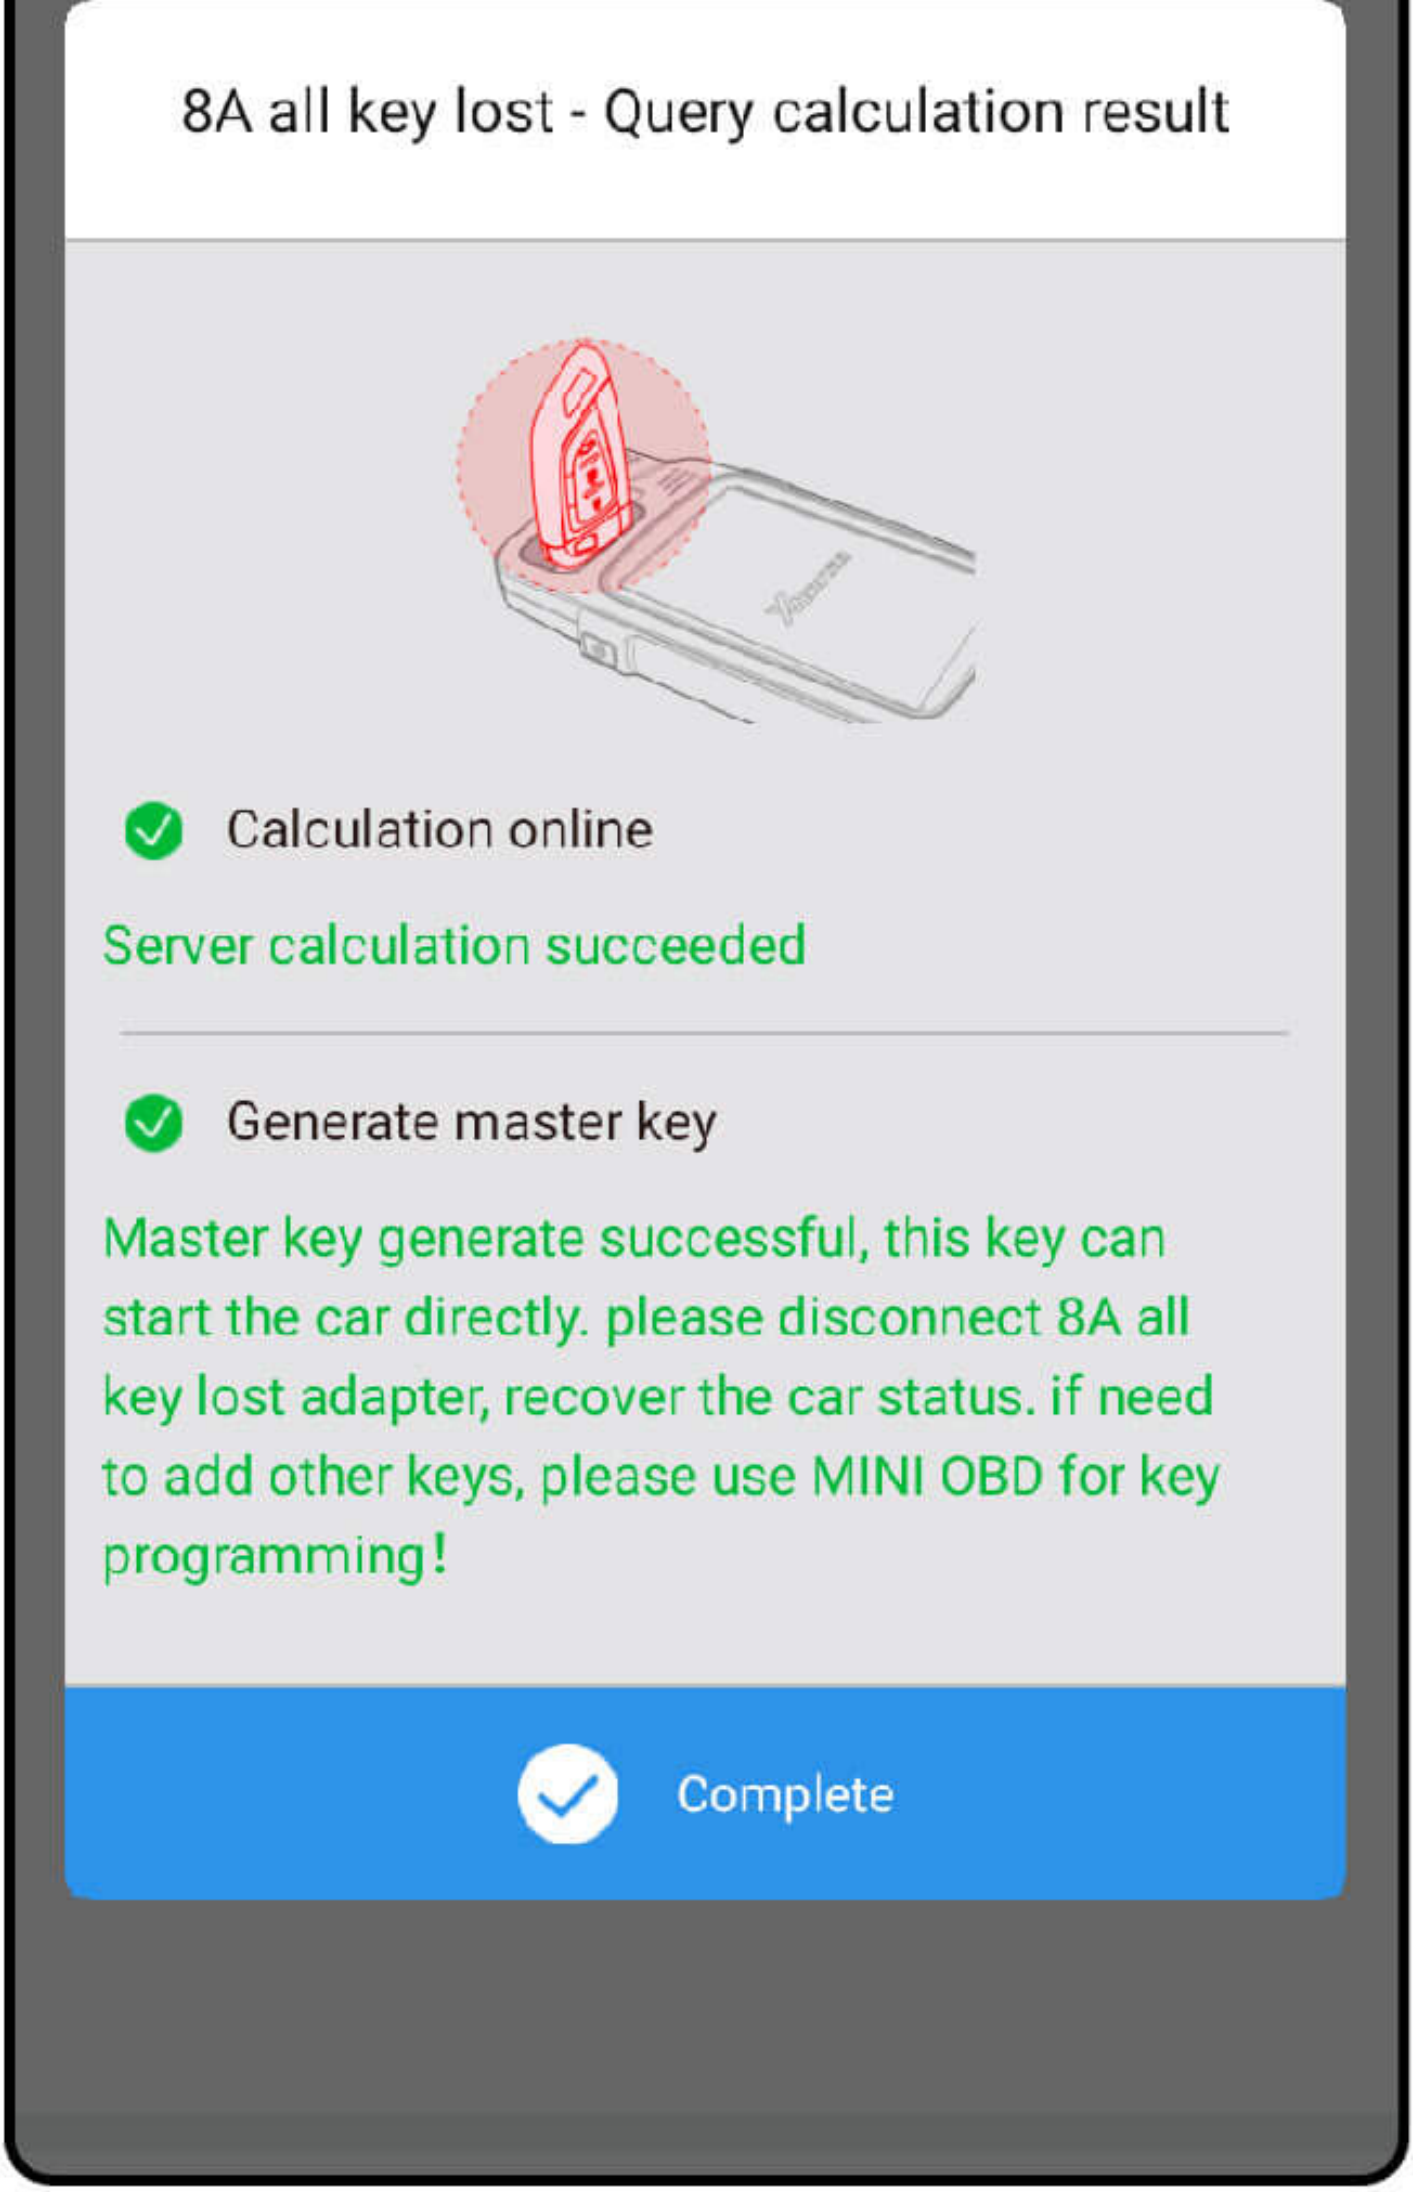

8A all key lost - Query calculation result

✓ Calculation online

Server calculation succeeded

✓ Generate master key

Master key generate successful, this key can start the car directly. please disconnect 8A all key lost adapter, recover the car status. if need to add other keys, please use MINI OBD for key programming!

⑥ Please disconnect all cables,recover all connection wires as car original status

If the connection wires not recovery to original status and start the car directly, the fuse boxe and device will be burnt

⑦ Test generated transponder

Toyota Highlander

Support more models

Toyota Corolla、Camry、Levin、RAV etc.,

VVDI

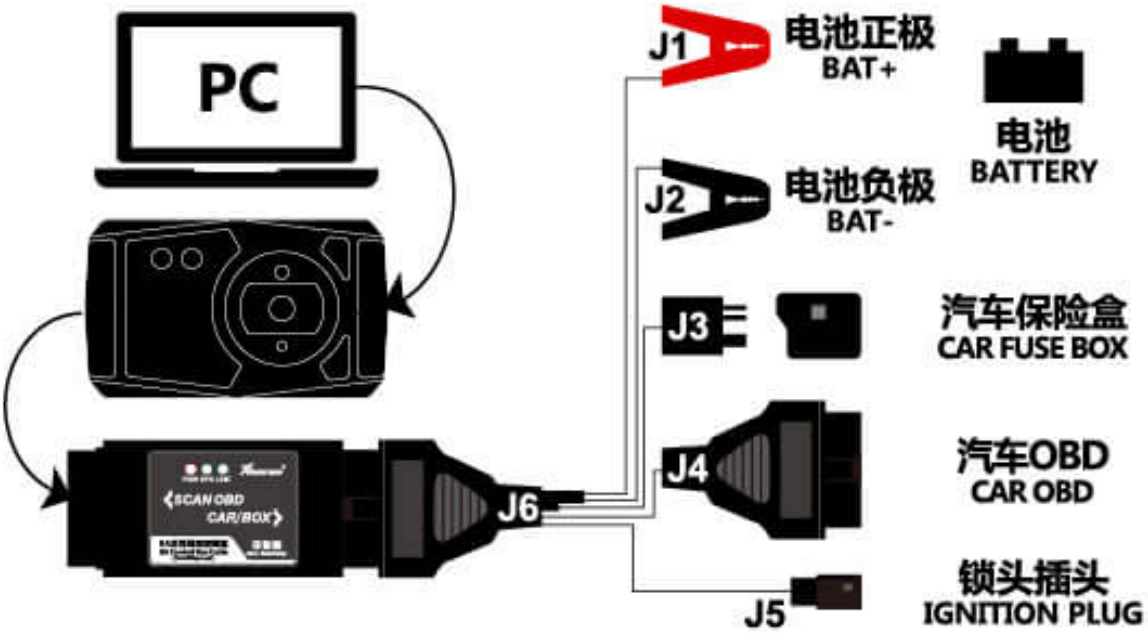
PC
J1
电池正极
BAT+
电池
BATTERY
J2
电池负极
BAT-
J3
汽车保险盒
CAR FUSE BOX
J4
汽车OBD
CAR OBD
J6
SCAN OBD
CAR/BOX
J5
锁头插头
IGNITION PLUG

KEY TOOL MAX & MINI OBD

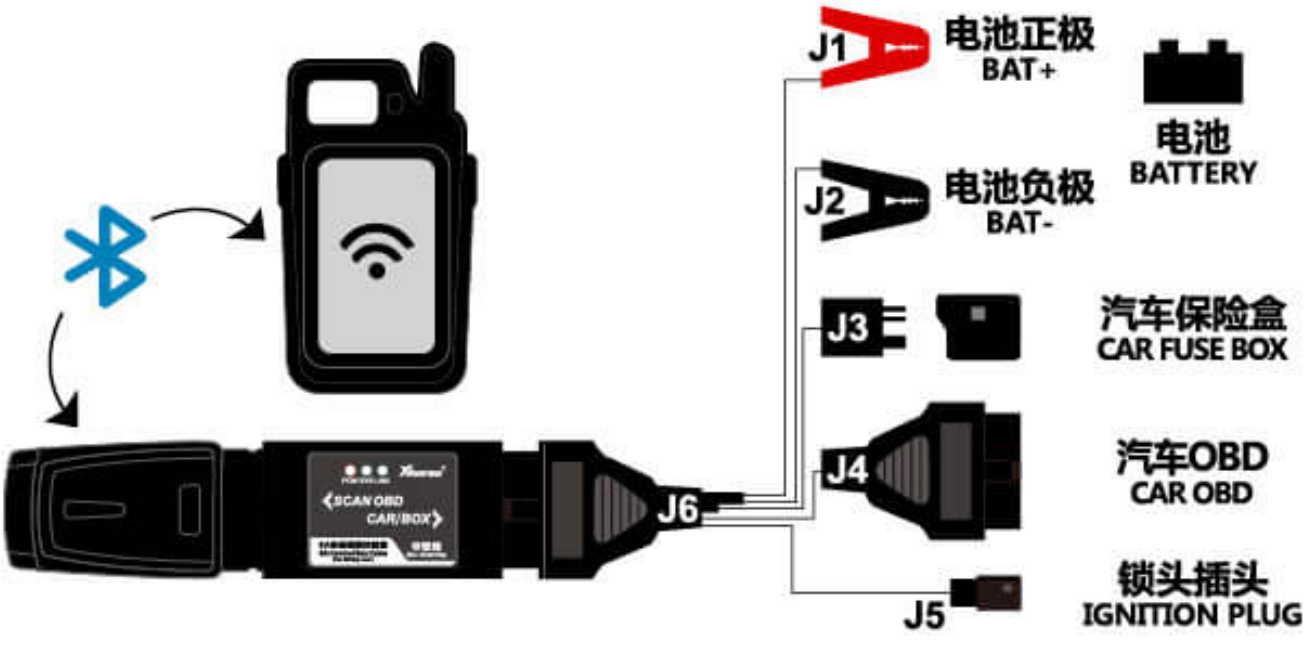
J1
电池正极
BAT+
电池
BATTERY
J2
电池负极
BAT-
J3
汽车保险盒
CAR FUSE BOX
J4
汽车OBD
CAR OBD
J5
锁头插头
IGNITION PLUG
J6
SCAN OBD
CAR/BOX

ⓘ Please update device to latest version for this function

During the process don't insert the key, please keep ignition off

① Disconnect the positive pole of the car battery to protect the connector and avoid short circuits

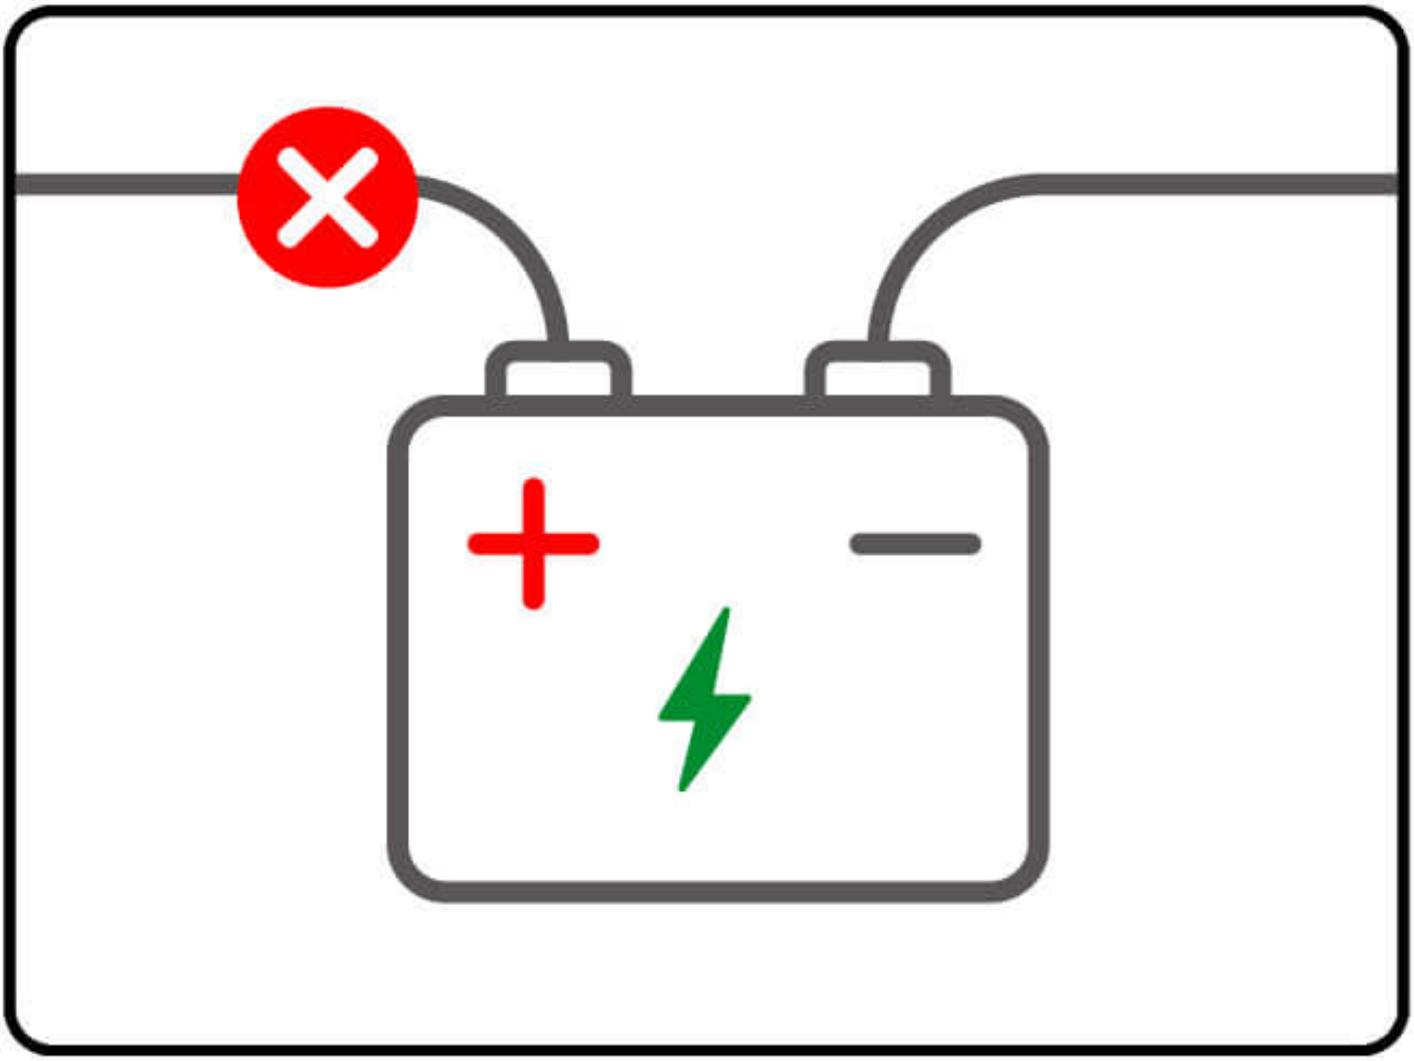

② Please connect to fuse box as the image

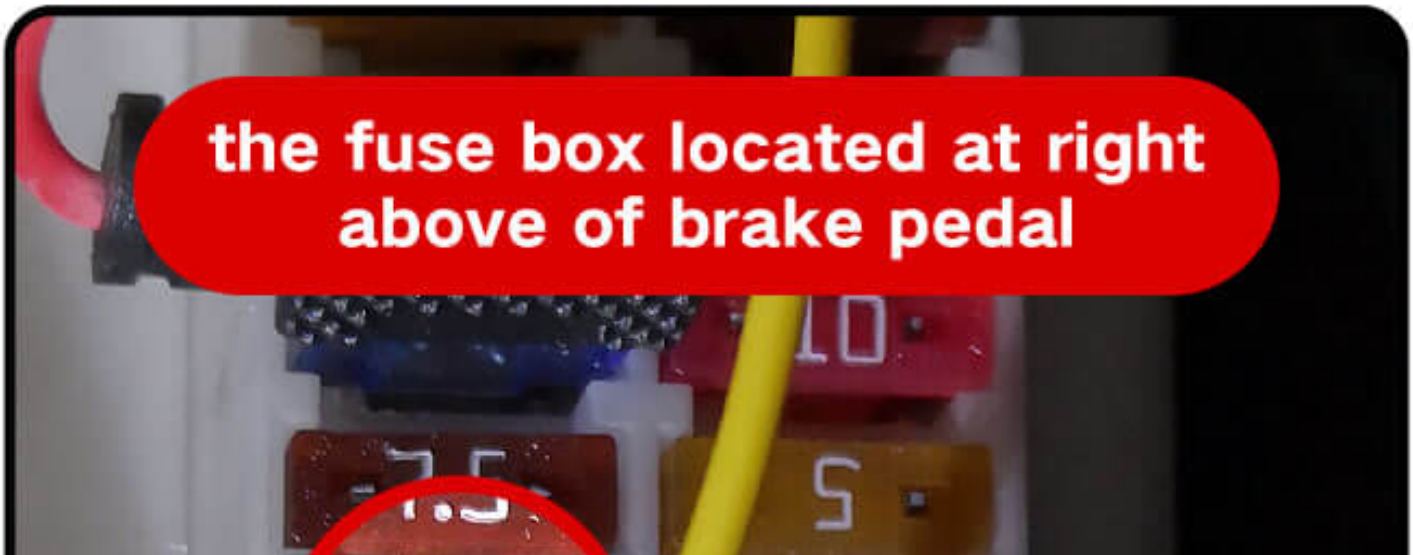
the fuse box located at right above of brake pedal

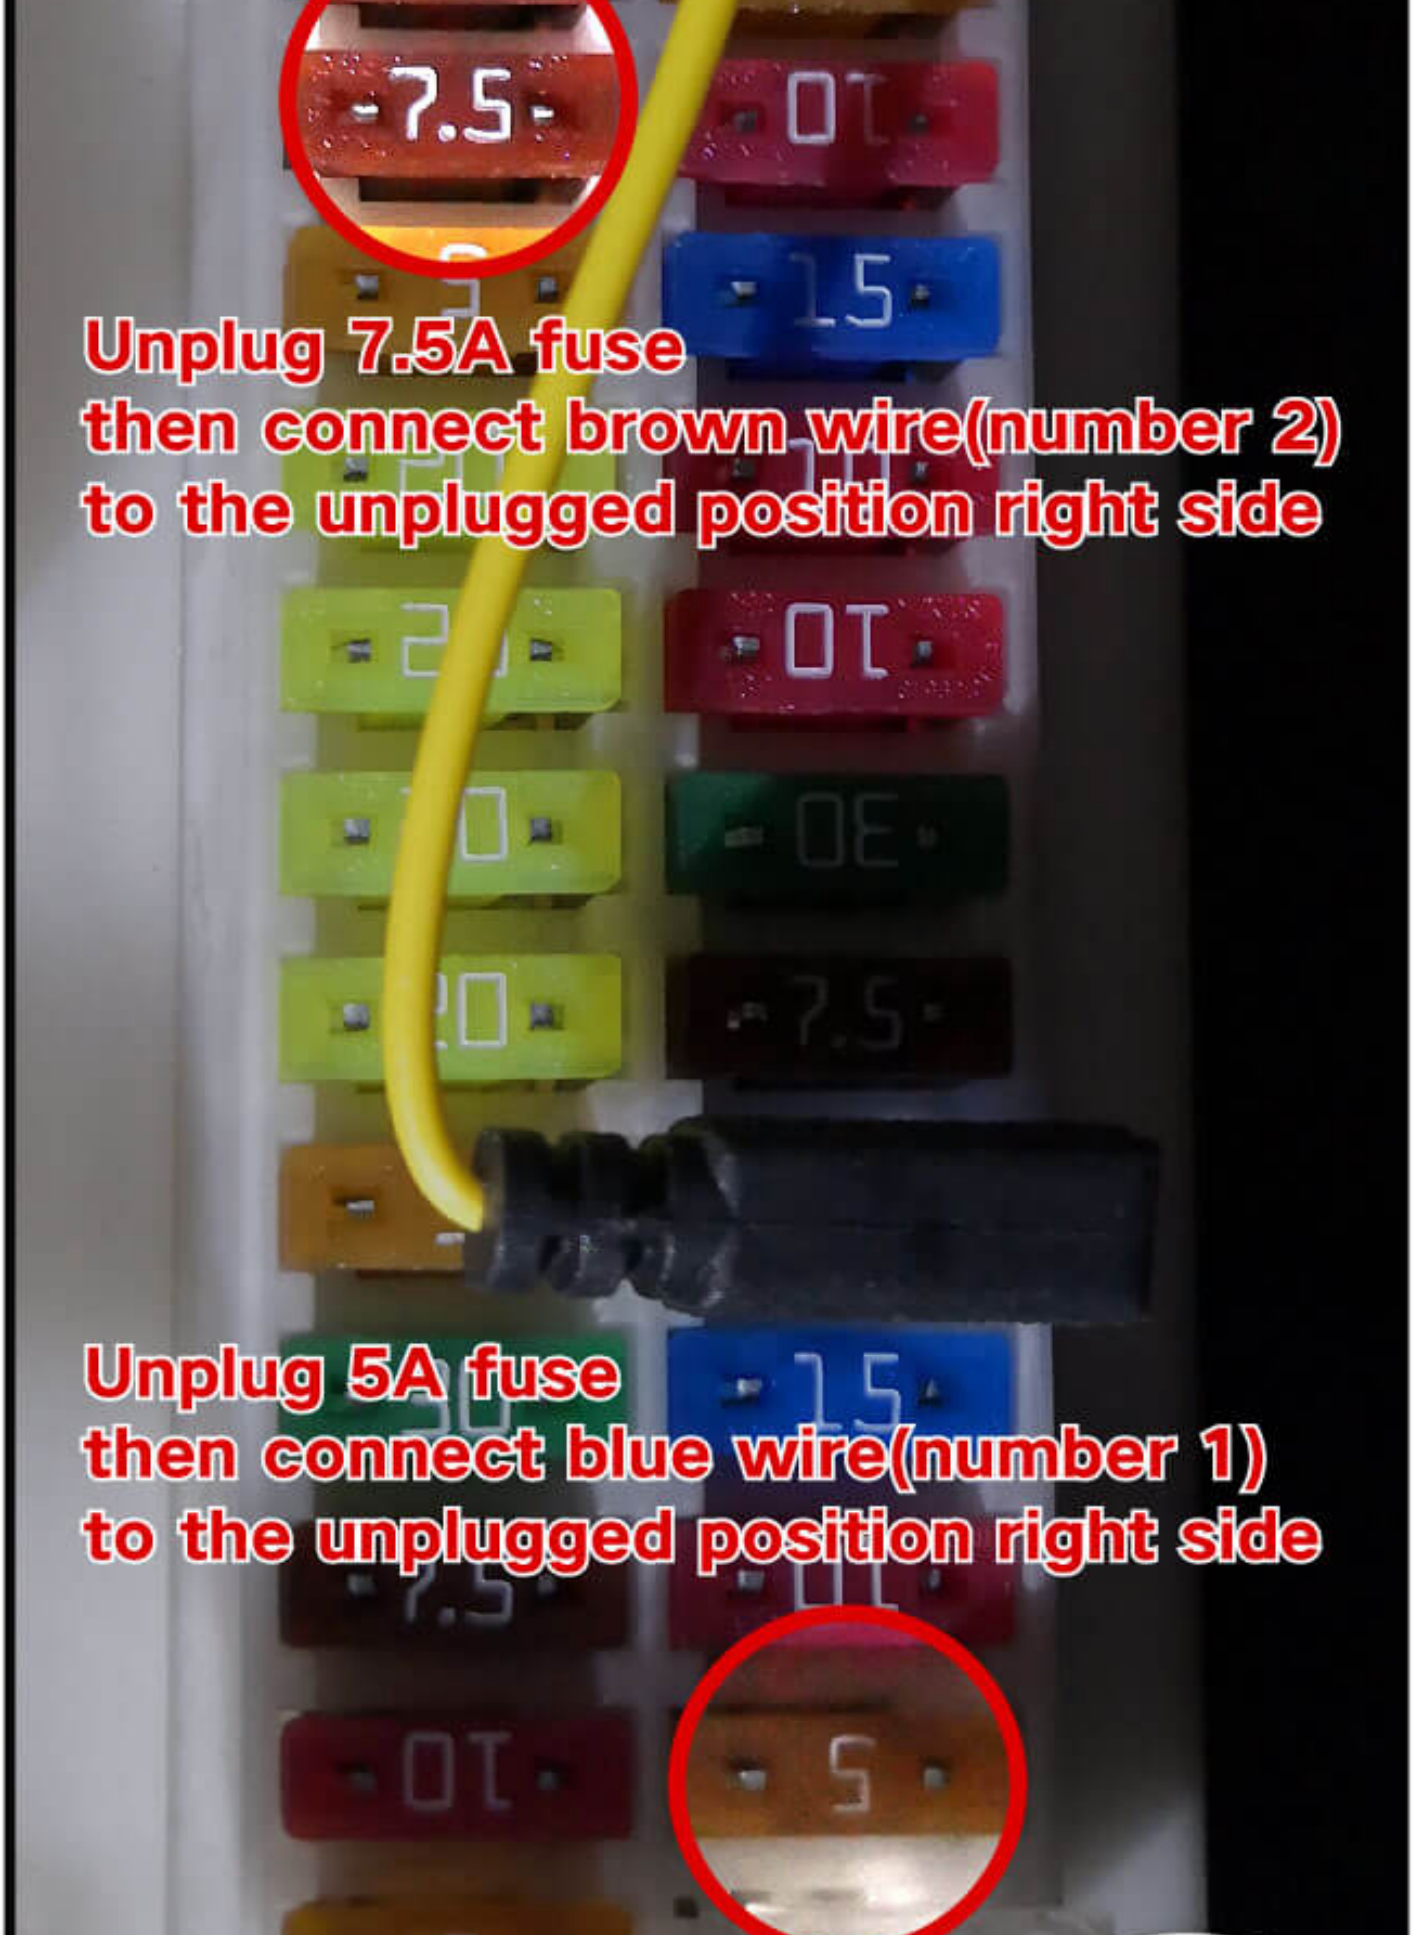

Unplug 7.5A fuse then connect brown wire(number 2) to the unplugged position right side

Unplug 5A fuse then connect blue wire(number 1) to the unplugged position right side

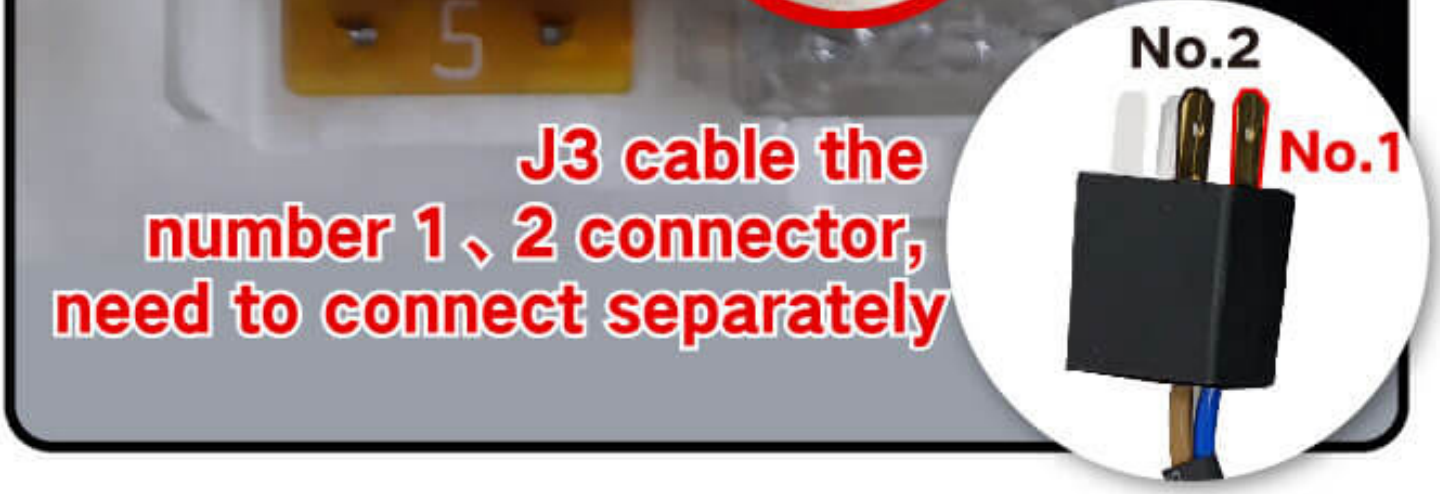

J3 cable the number 1、2 connector, need to connect separately

J3 lock plug

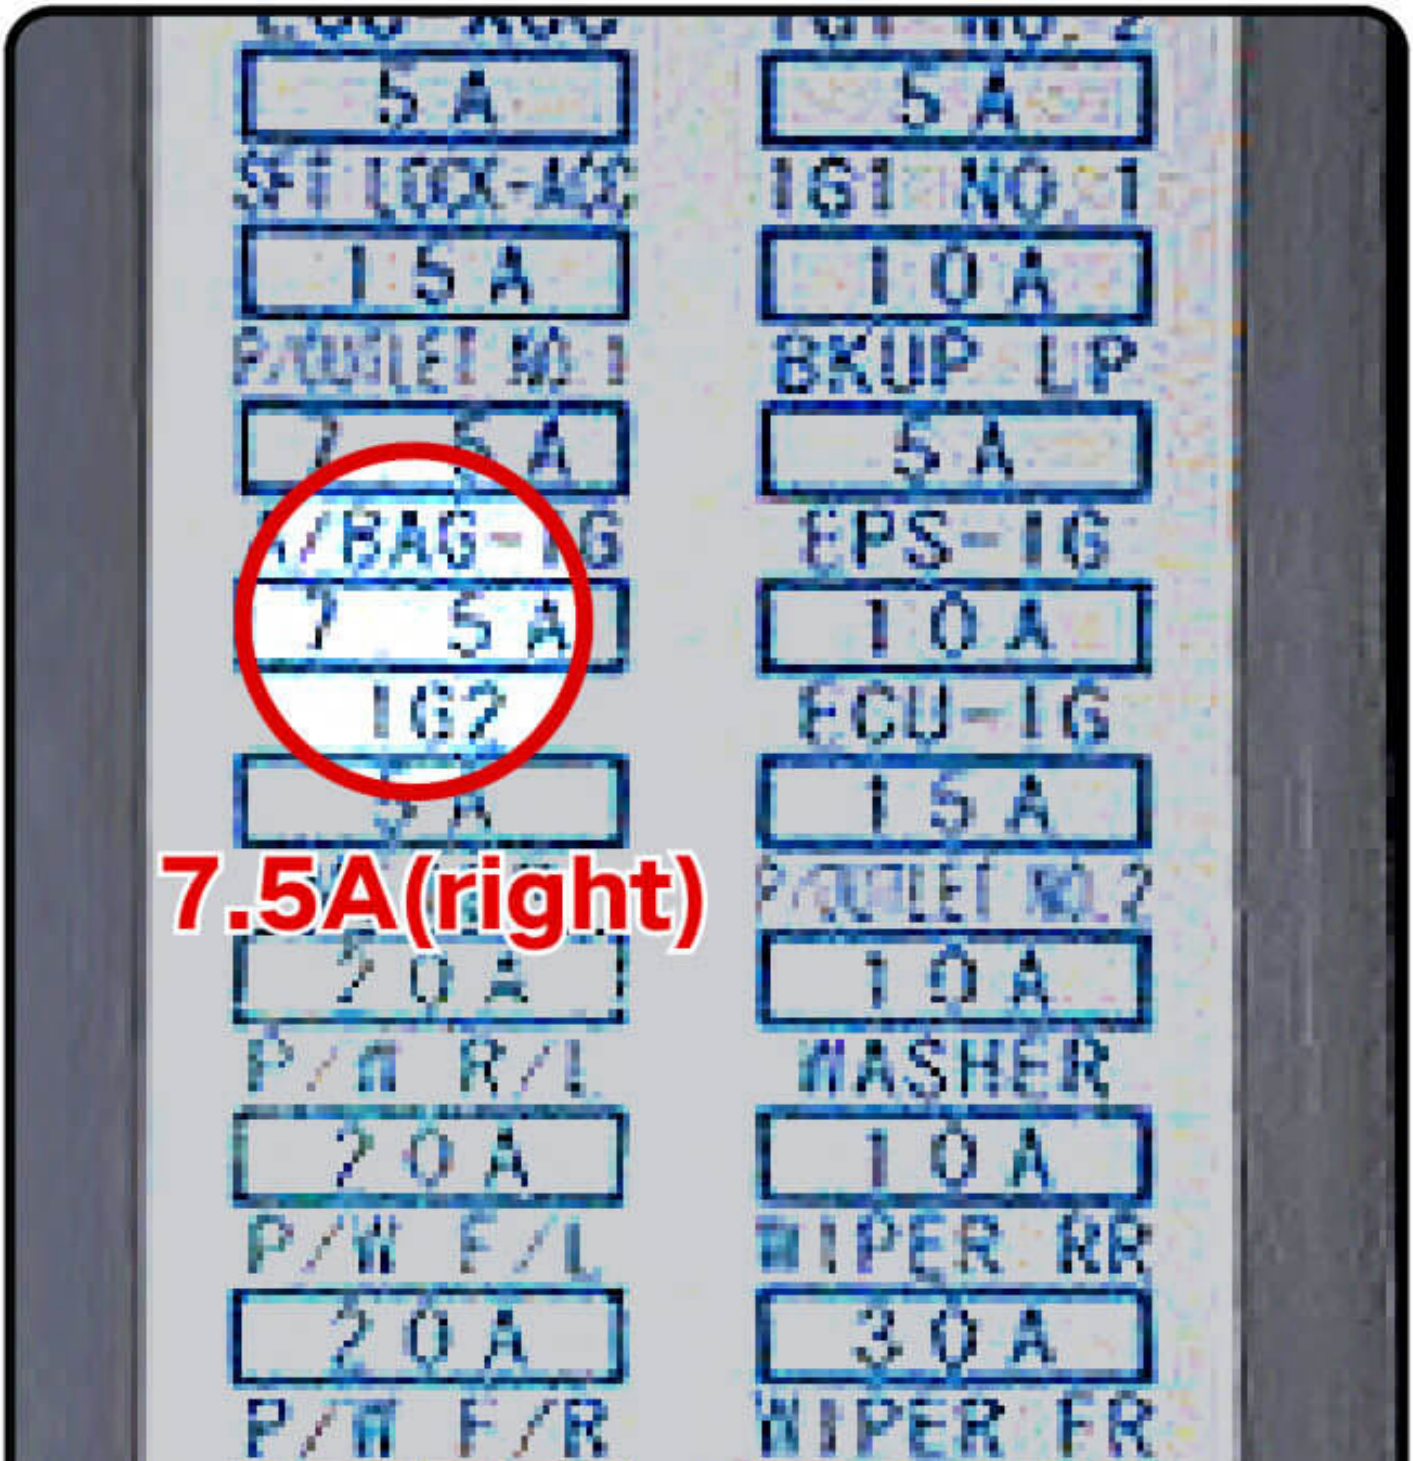
5A
5A
SFT LOCK-ACC
IG1 NO.1
15A
10A
P/OUTLET NO.1
BKUP LP
7.5A
5A
A/BAG-IG
EPS-IG
7.5A
10A
IG2
ECU-IG
5A
15A
P/OUTLET NO.2
20A
10A
P/W R/L
WASHER
20A
10A
P/W F/L
WIPER RR
20A
30A
P/W F/R
WIPER FR

7.5A(right)

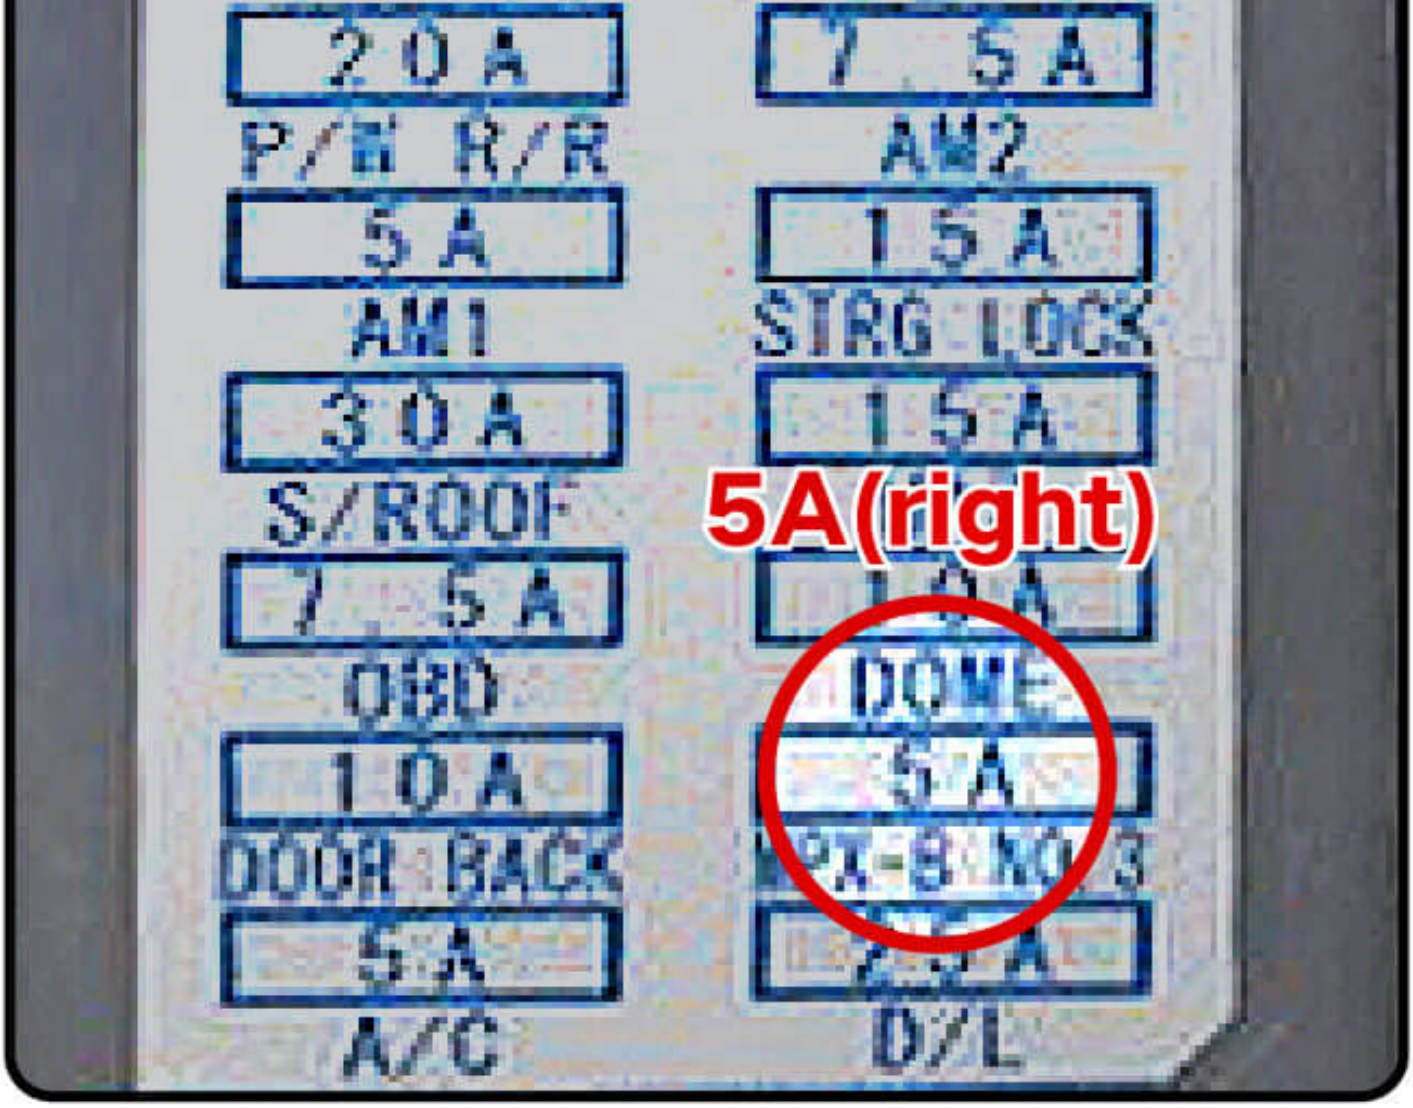
20A
P/W R/R
5A
AM1
30A
S/ROOF
7.5A
OBD
10A
DOOR BACK
5A
A/C
7.5A
AM2
15A
STRG LOCK
15A
10A
DOME
5A
PX-B NO.3
25A
D/L

5A(right)

③ Please connect the ELV wires as shown

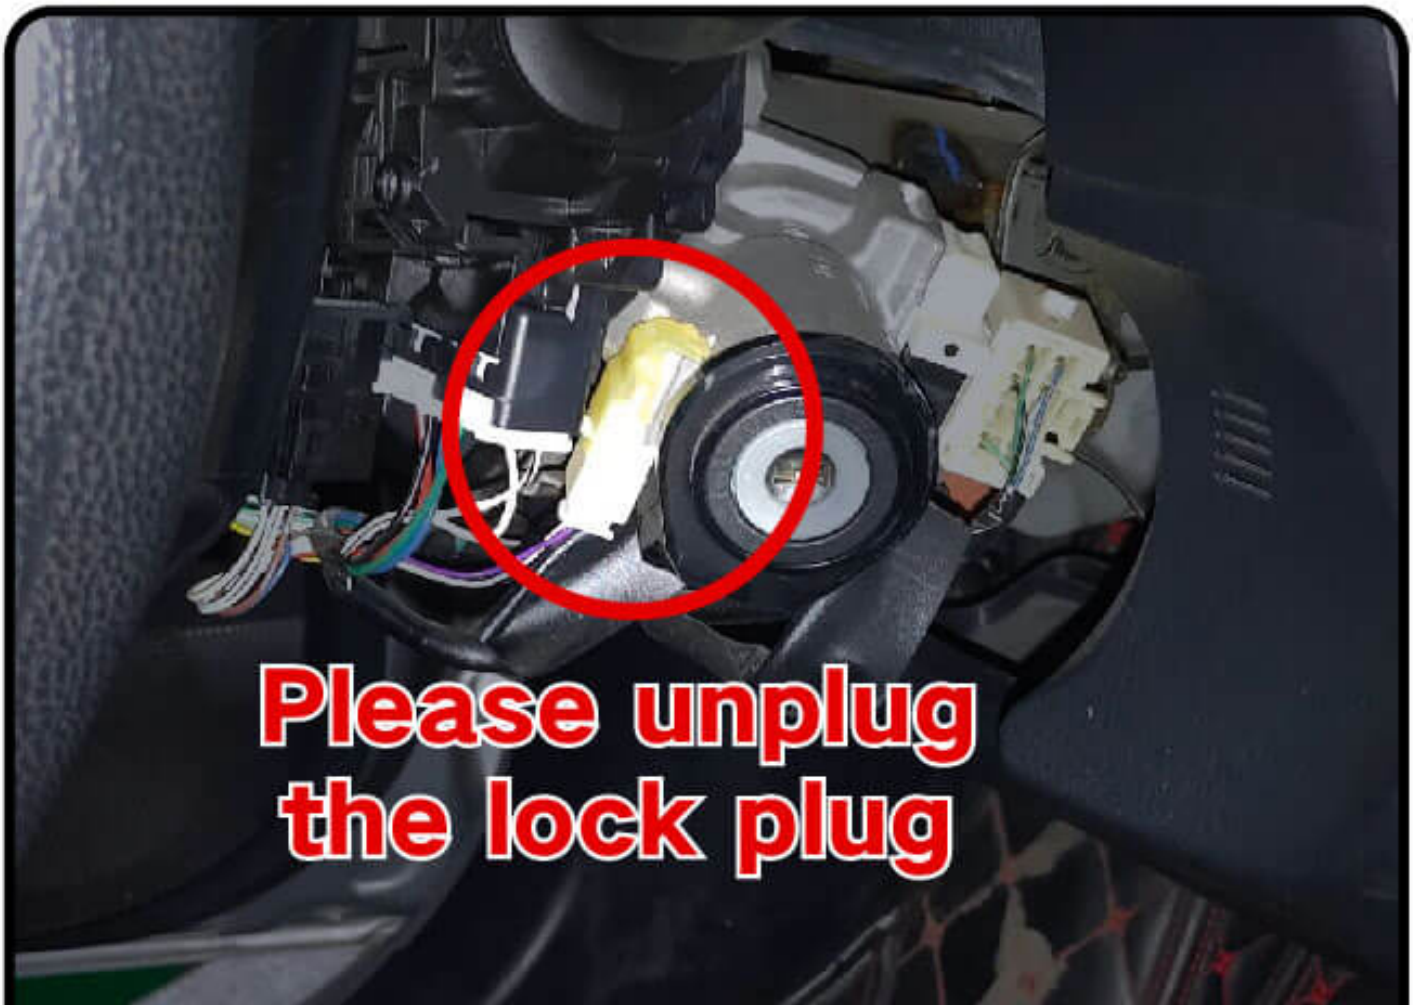

Please unplug the lock plug

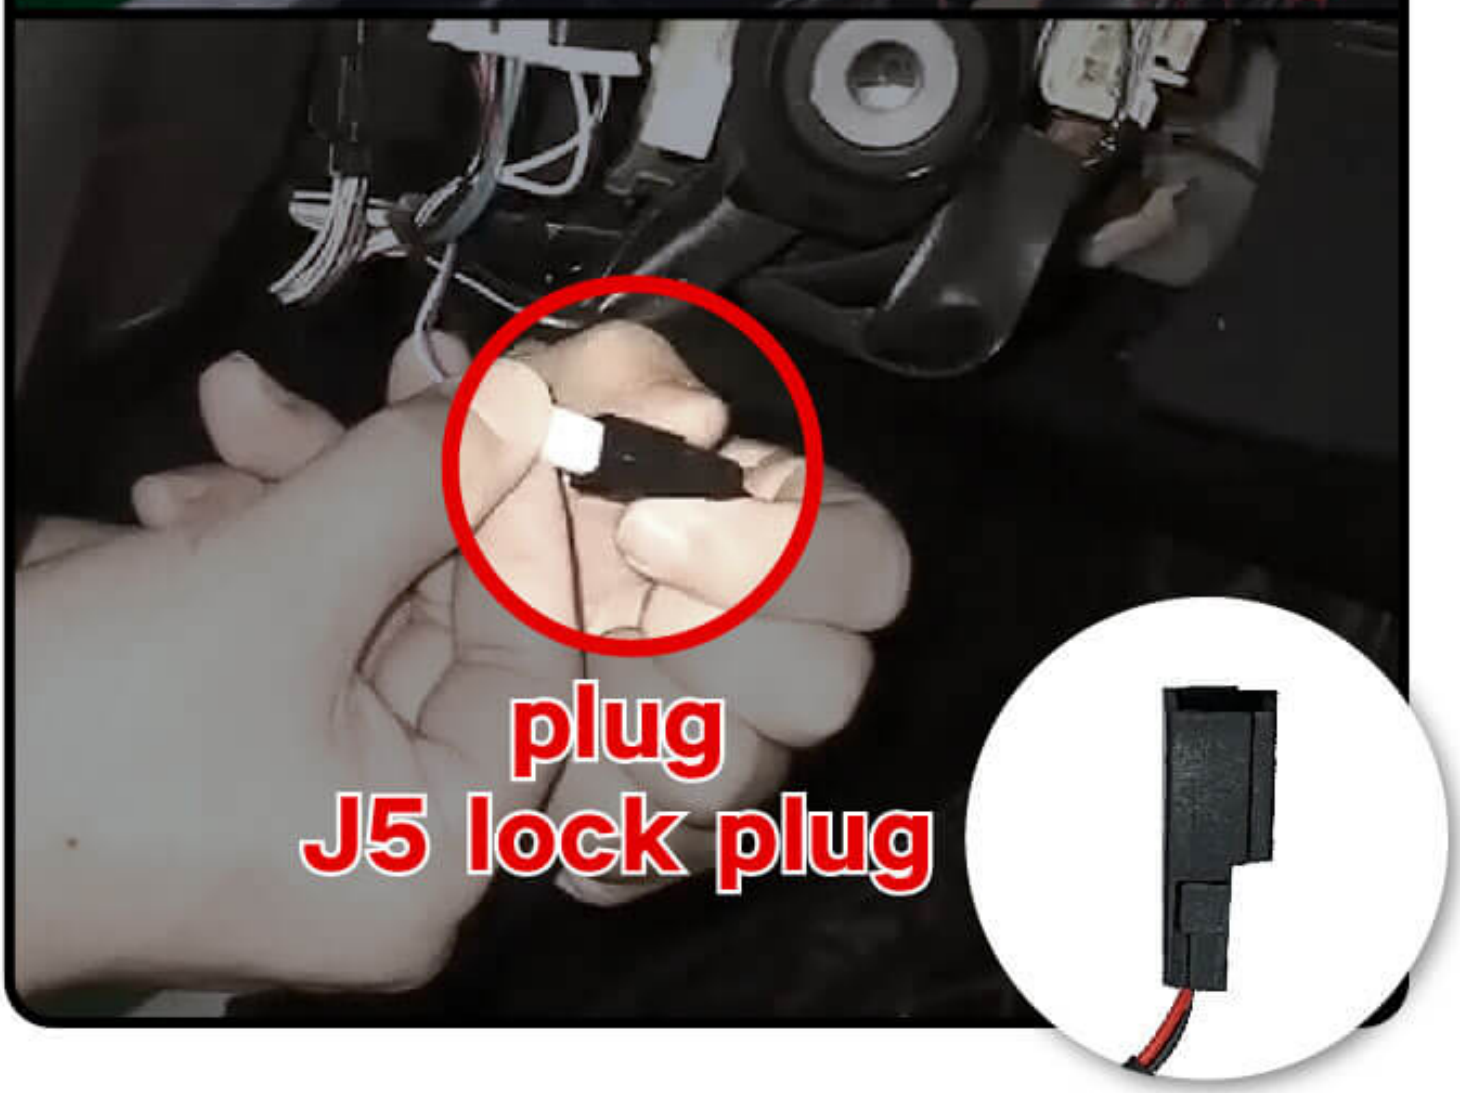
plug
J5 lock plug

J5 lock plug

④ Please connect to car OBD,
all key lost cables and car battery

J4: PCtoOBD
CAN OBD

J4 lock plug

VVDI

J6 lock plug

KEY TOOL MAX

&MINI OBD


J6 lock plug

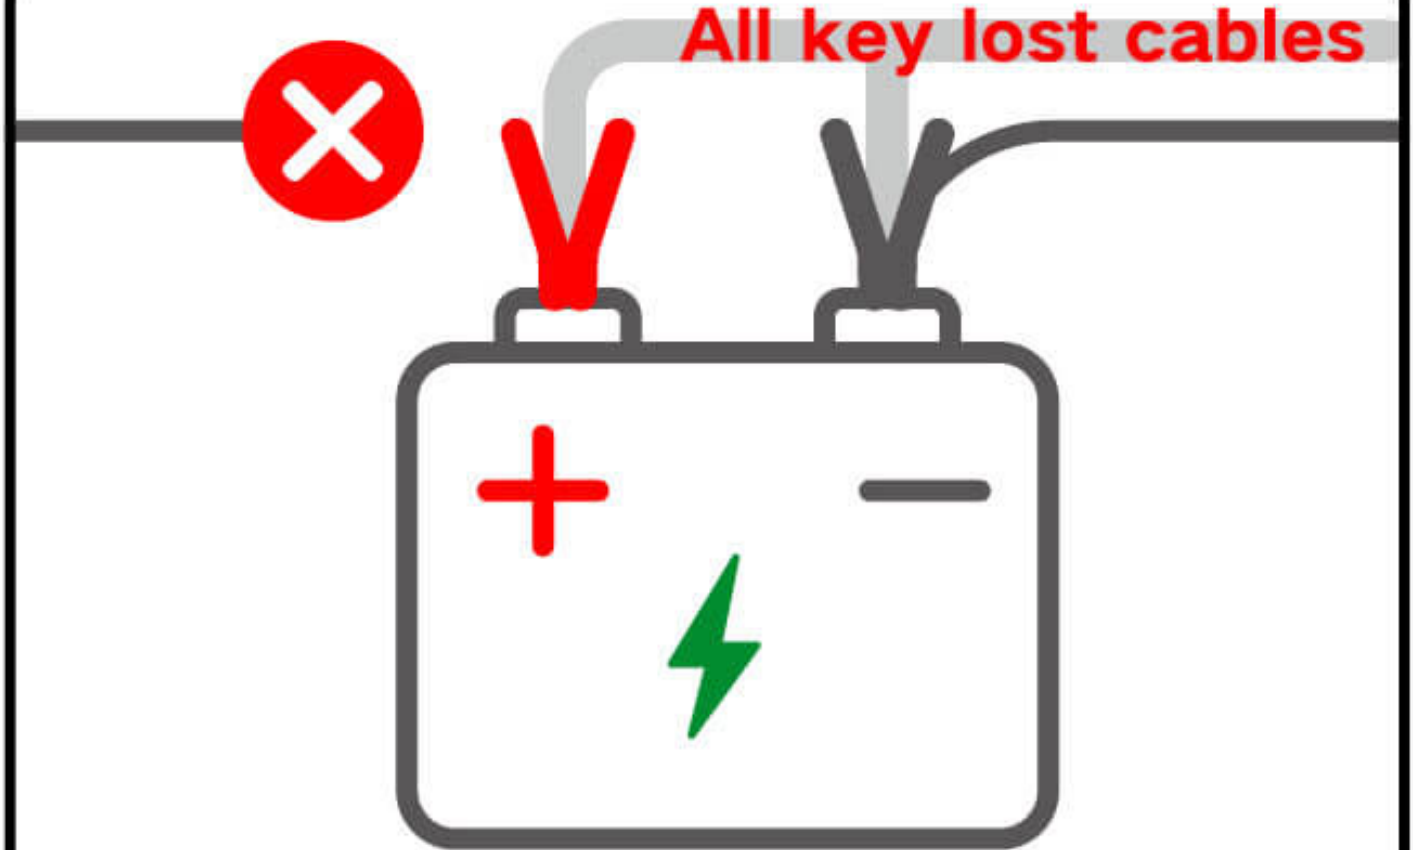
All key lost cables

⑤ Please generate start chip referring to software interface

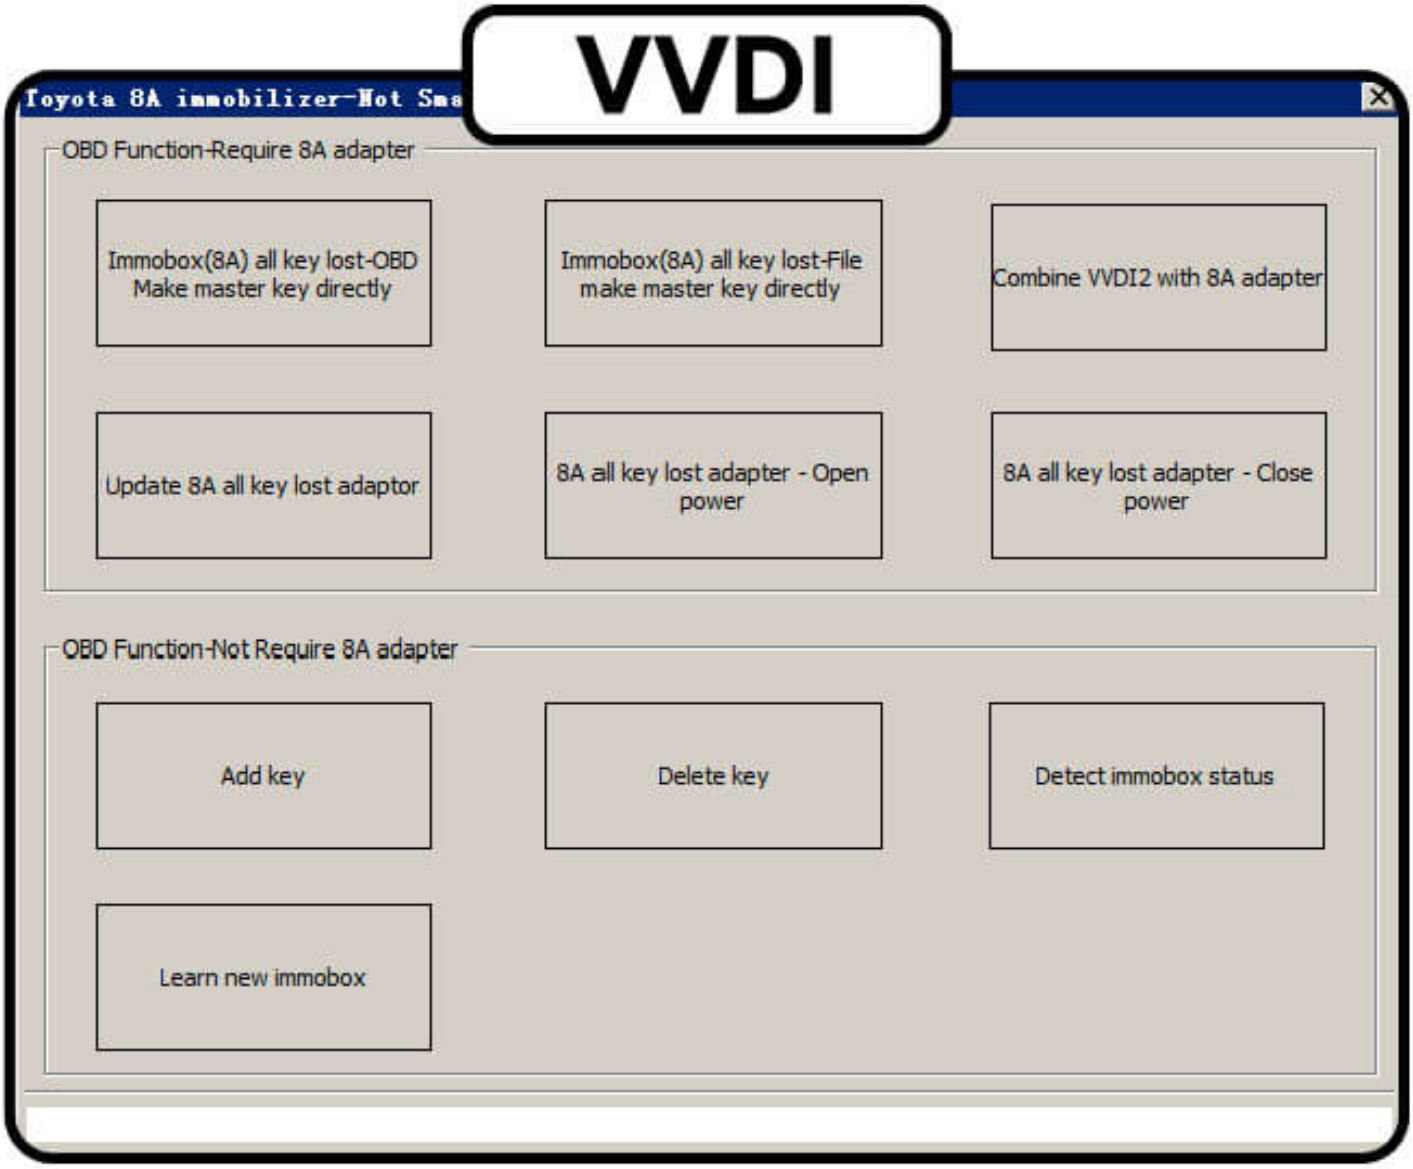

VVDI

Toyota 8A immobilizer-Hot Sma
OBD Function-Require 8A adapter
Immobox(8A) all key lost-OBD Make master key directly
Immobox(8A) all key lost-File make master key directly
Combine VVDI2 with 8A adapter
Update 8A all key lost adaptor
8A all key lost adapter - Open power
8A all key lost adapter - Close power
OBD Function-Not Require 8A adapter
Add key
Delete key
Detect immobox status
Learn new immobox

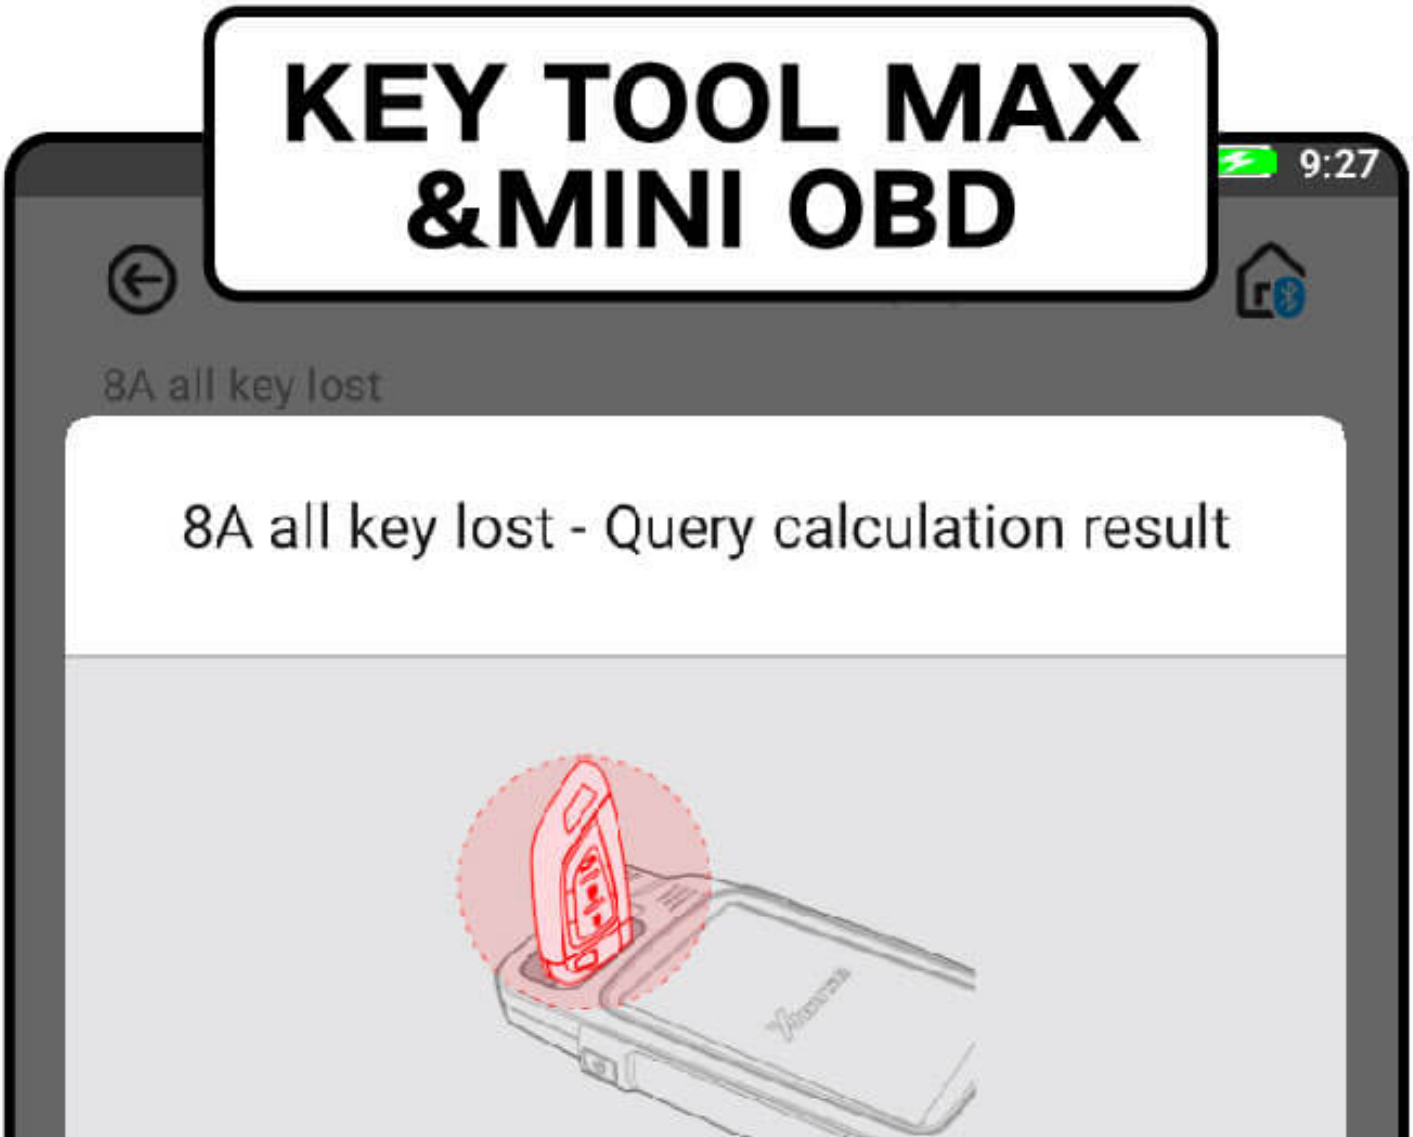

KEY TOOL MAX &MINI OBD

9:27
8A all key lost

8A all key lost - Query calculation result

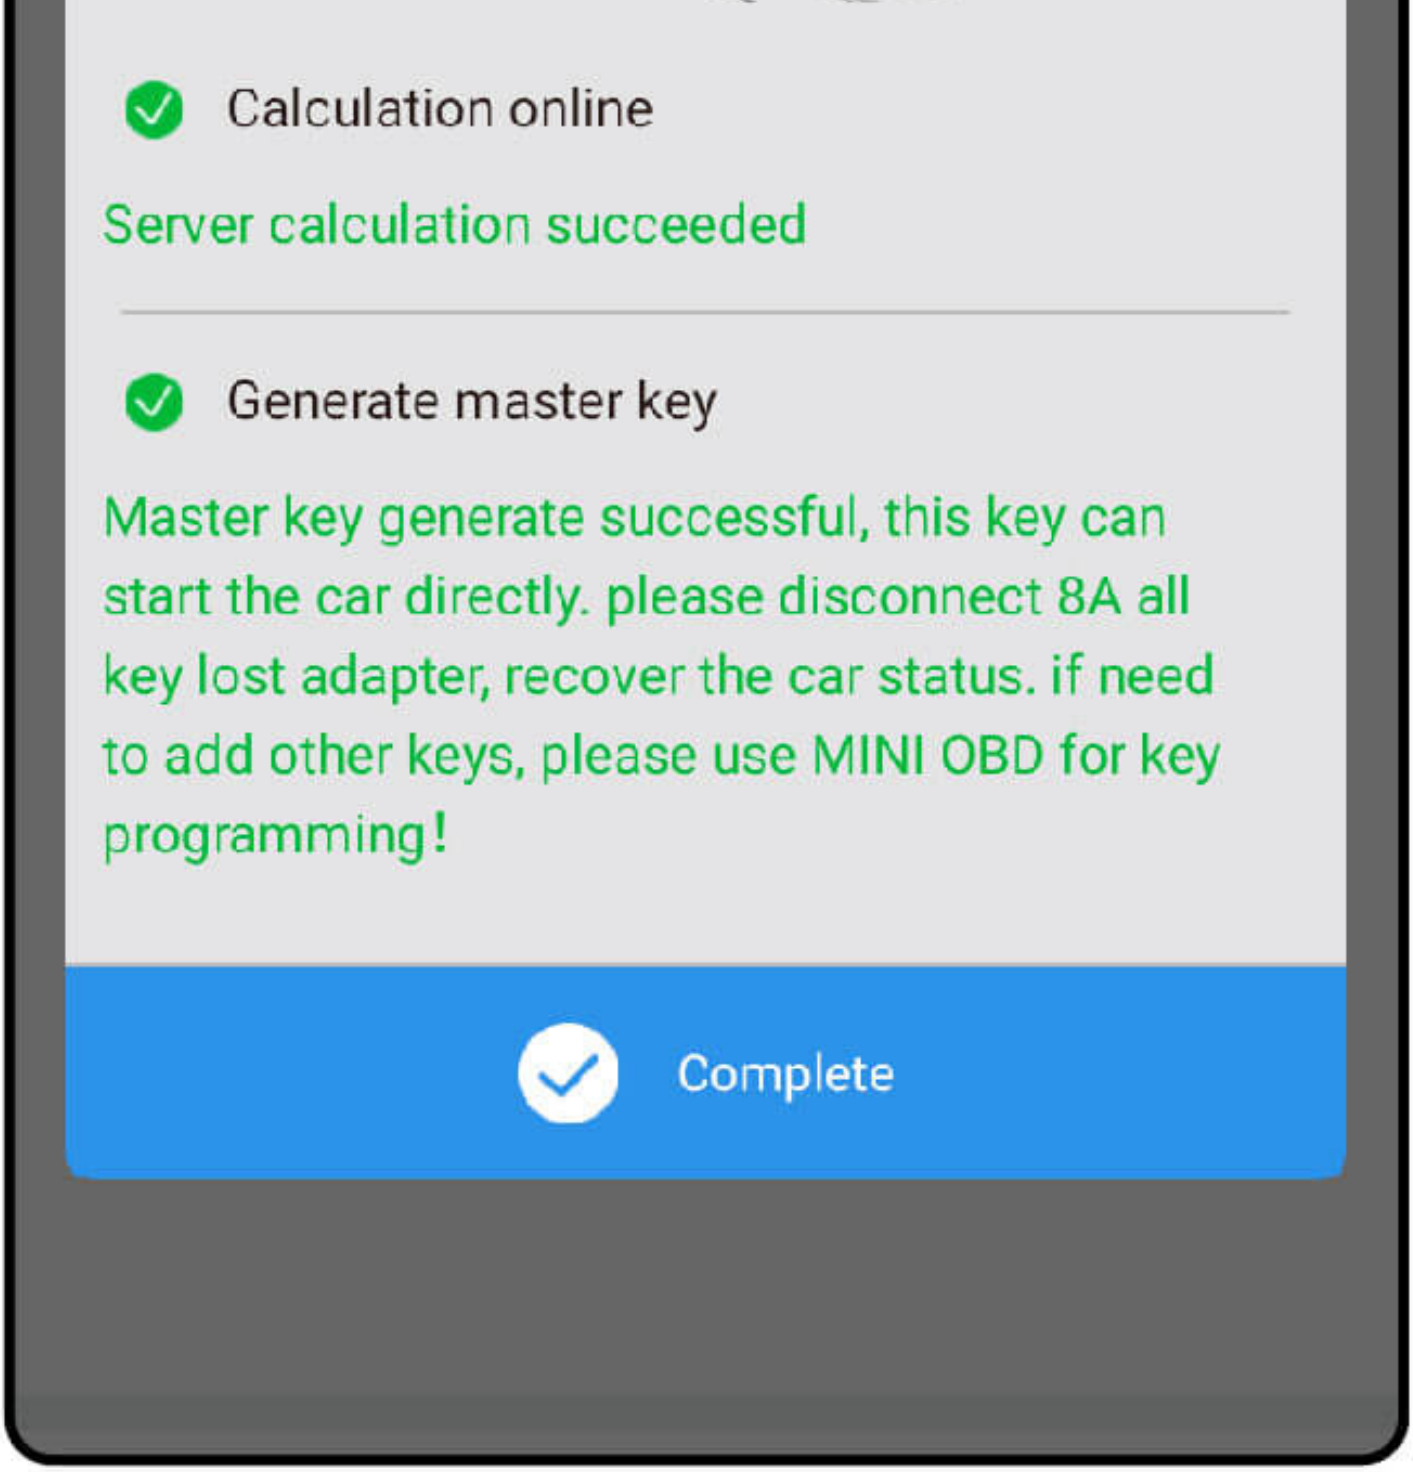

Calculation online

Server calculation succeeded

Generate master key

Master key generate successful, this key can start the car directly. please disconnect 8A all key lost adapter, recover the car status. if need to add other keys, please use MINI OBD for key programming!

⑥ Please disconnect all cables,recover all connection wires as car original status

If the connection wires not recovery to original status and start the car directly, the fuse boxe and device will be burnt

⑦ Test generated transponder

Toyota Prado
(17/18YEARS)

Support more models

Toyota Corolla、Camry、Levin、RAV etc.,

VVDI

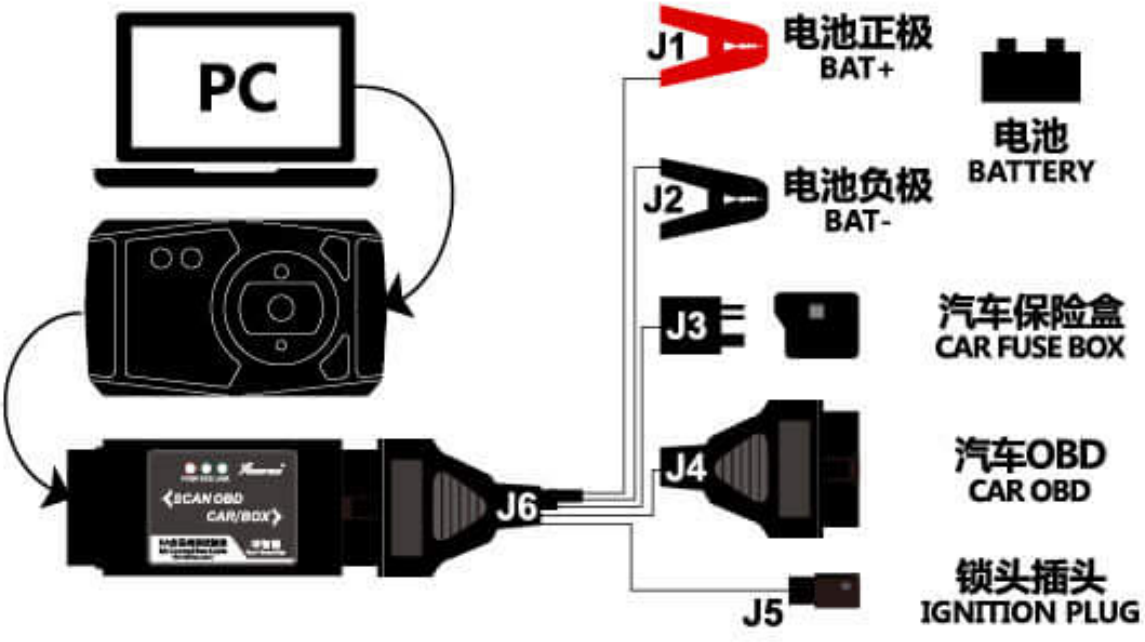
PC
J1
电池正极
BAT+
电池
BATTERY
J2
电池负极
BAT-
J3
汽车保险盒
CAR FUSE BOX
J4
汽车OBD
CAR OBD
J6
SCAN OBD
CAR/BOX
J5
锁头插头
IGNITION PLUG

KEY TOOL MAX & MINI OBD

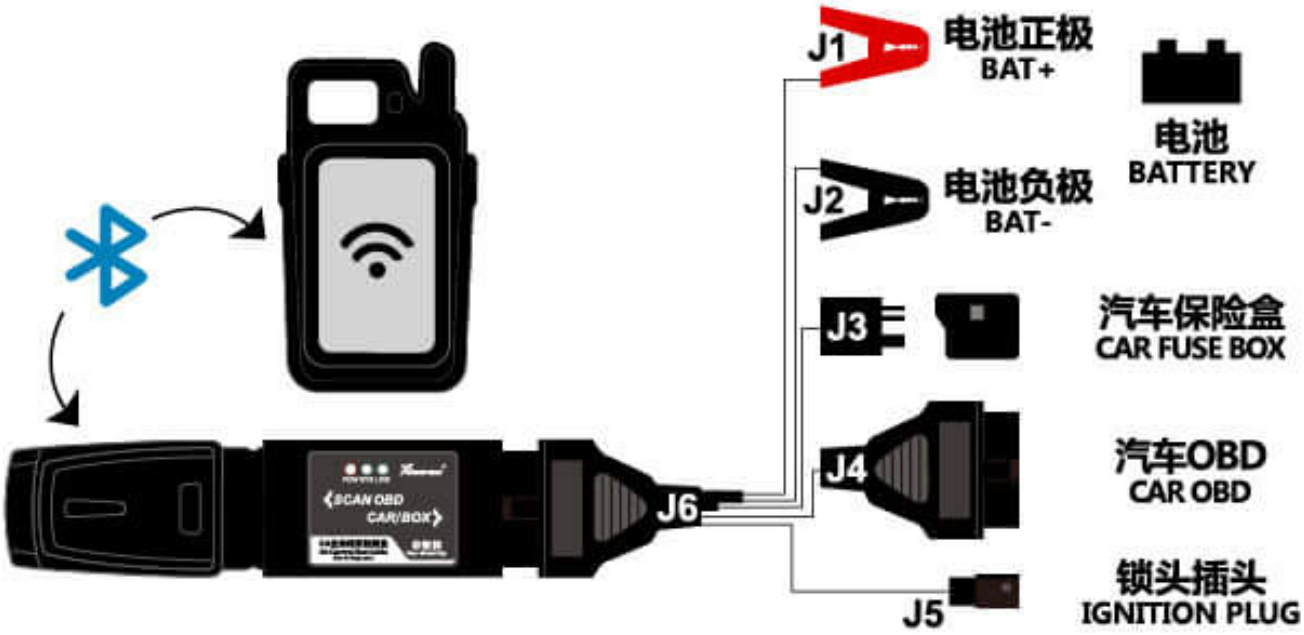
J1
电池正极
BAT+
电池
BATTERY
J2
电池负极
BAT-
J3
汽车保险盒
CAR FUSE BOX
J4
汽车OBD
CAR OBD
J5
锁头插头
IGNITION PLUG
J6
SCAN OBD
CAR/BOX

ⓘ Please update device to latest version for this function

During the process

don't insert the key, please keep ignition off

① Disconnect the positive pole of the car battery to protect the connector and avoid short circuits

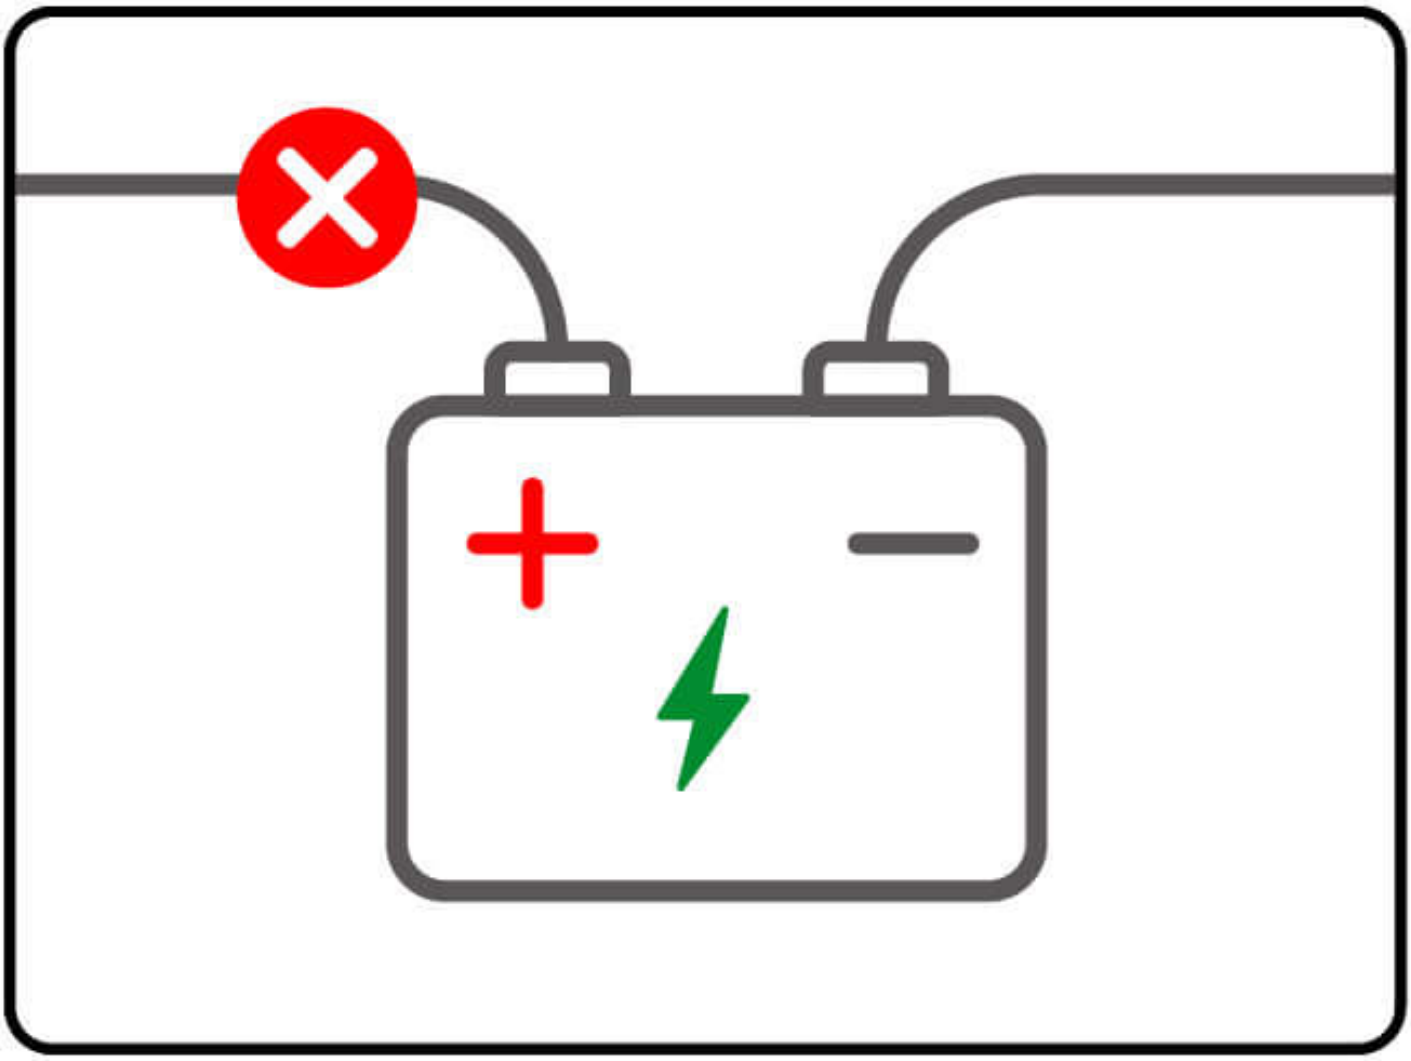

② Please connect to fuse box as the image

17 YEARS

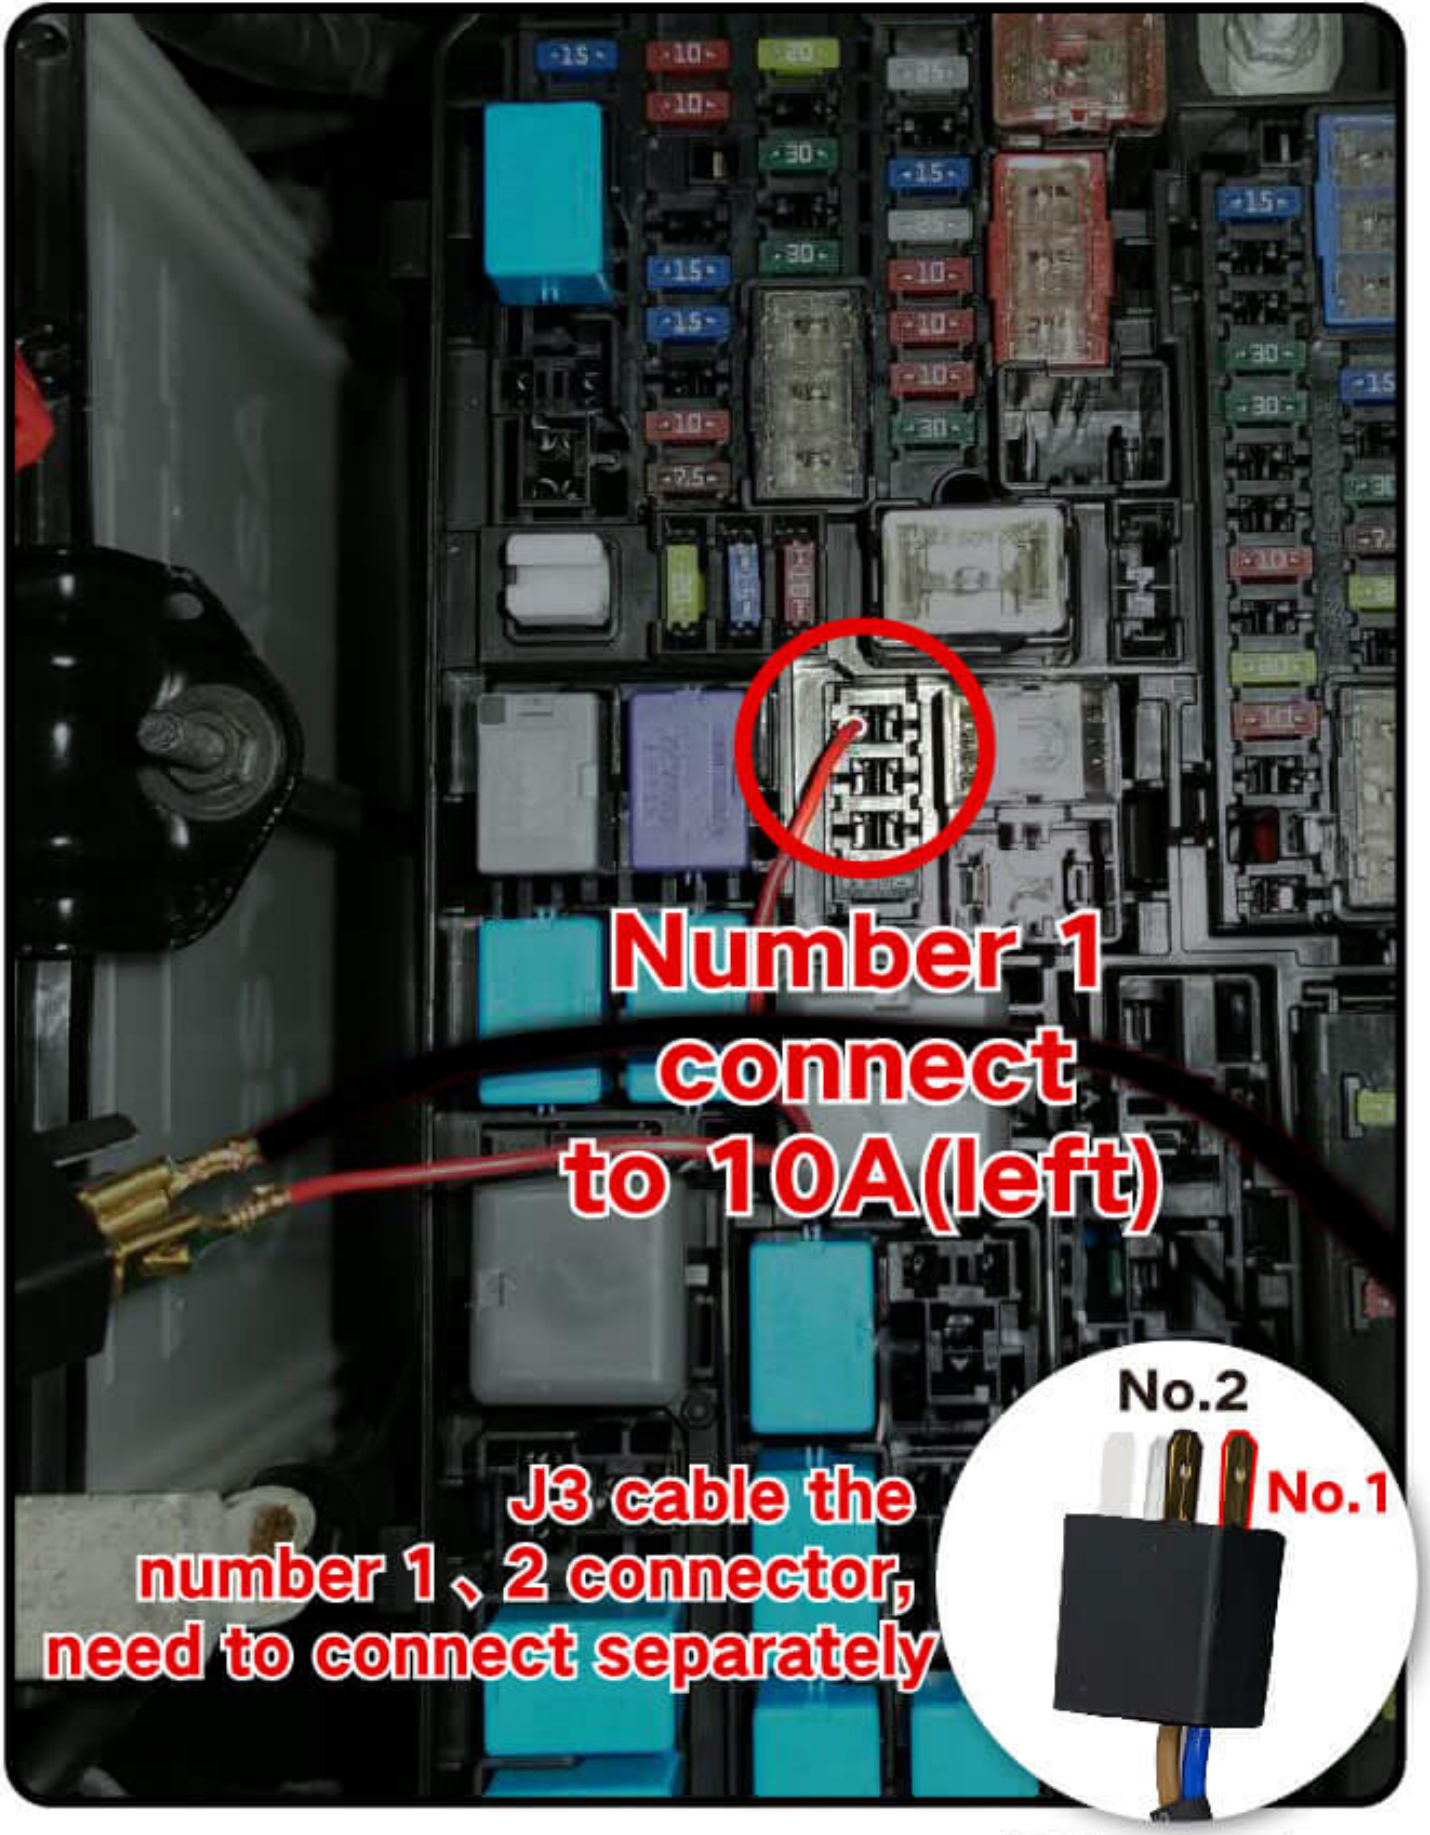

Number 1 connect to 10A(left)

J3 cable the number 1、2 connector, need to connect separately

J3 lock plug

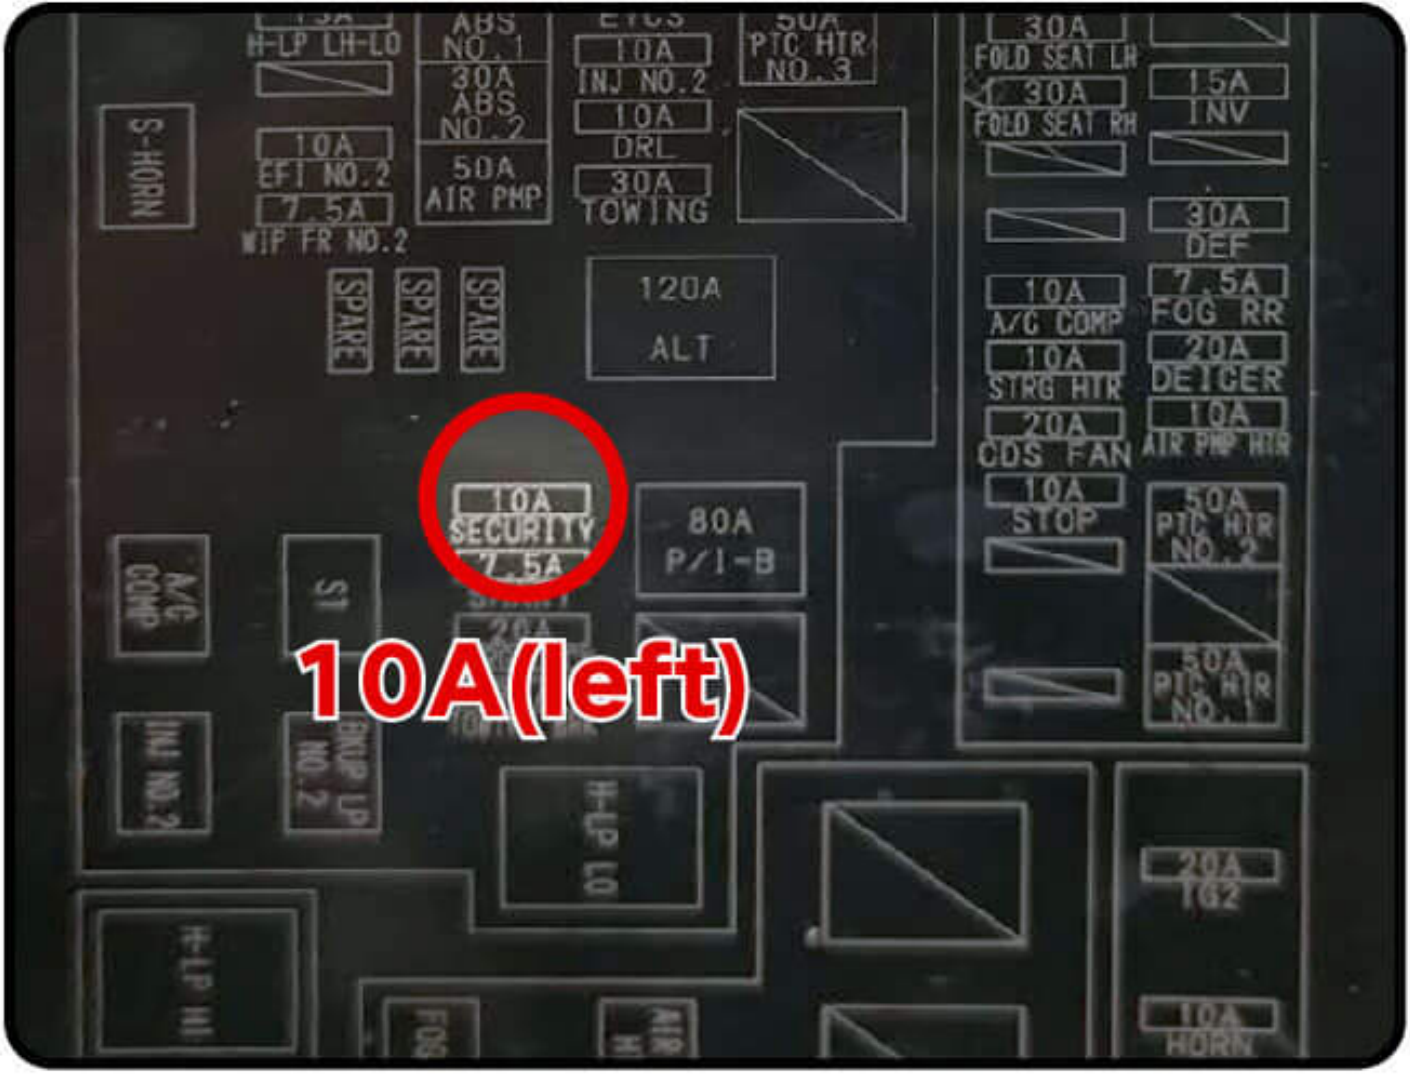
H-LP LH-LO
ABS NO.1
10A INJ NO.2
PTC HTR NO.3
30A FOLD SEAT LH
15A INV
S-HORN
30A ABS NO.2
10A DRL
30A FOLD SEAT RH
10A EFI NO.2
50A AIR PMP
30A TOWING
7.5A WIP FR NO.2
30A DEF
SPARE
SPARE
SPARE
120A ALT
10A A/C COMP
7.5A FOG RR
10A STRG HTR
20A DEICER
20A CDS FAN
10A AIR PMP HTR
10A SECURITY
7.5A
10A STOP
50A PTC HTR NO.2
A/C COMP
ST
80A P/I-B
50A PTC HTR NO.1
INJ NO.2
BKUP LP NO.2
H-LP LO
20A IG2
H-LP HI
FOG
AIR HTR
10A HORN

10A(left)

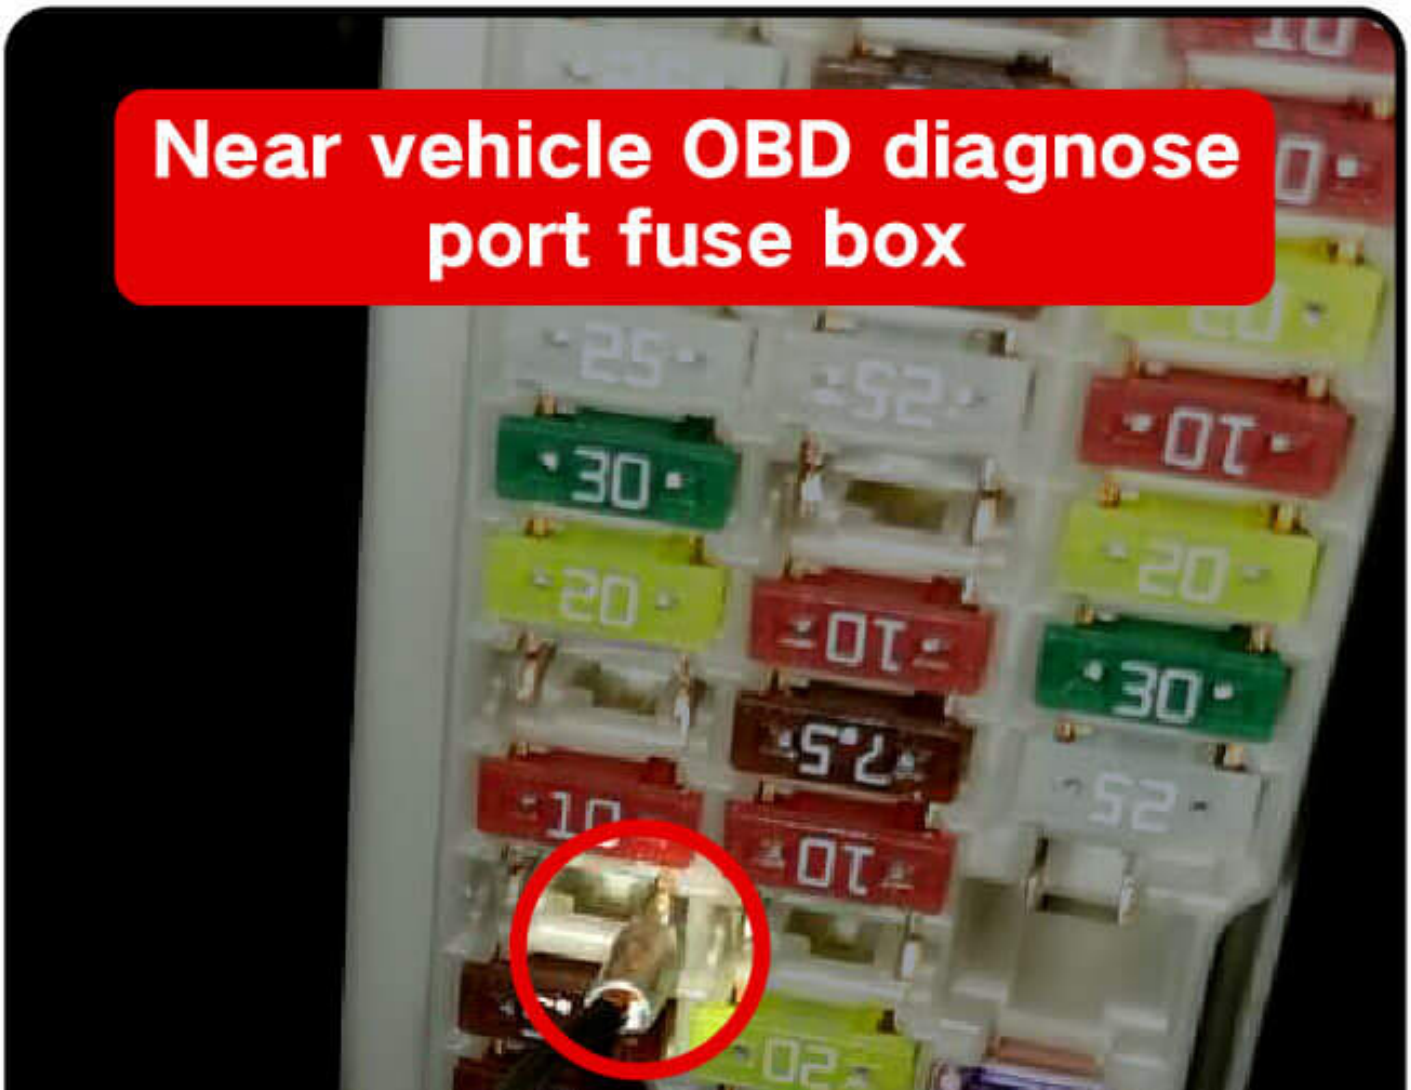
25
25
30
20
10
10
20
30
7.5
10
25
10
20

Near vehicle OBD diagnose port fuse box

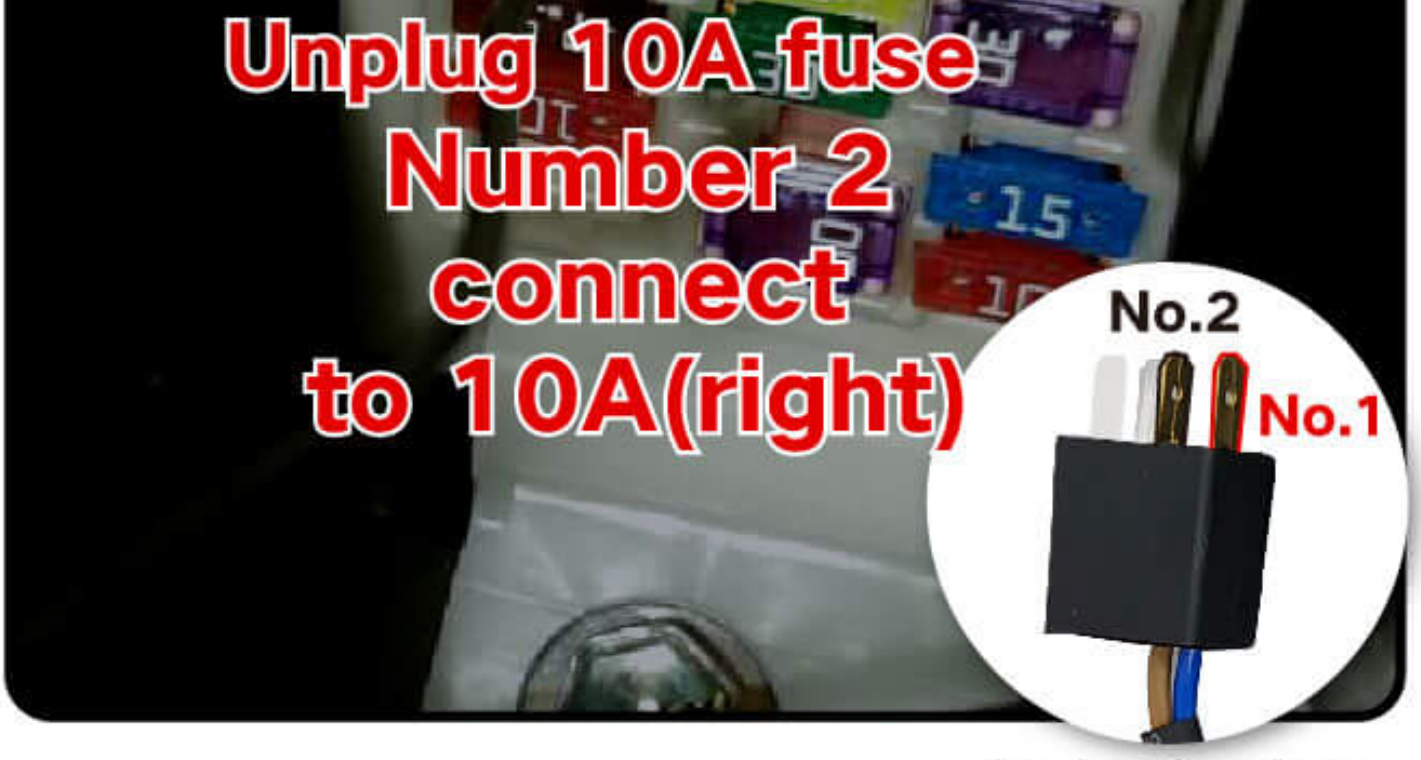

Unplug 10A fuse
Number 2
connect
to 10A(right)

J3 lock plug

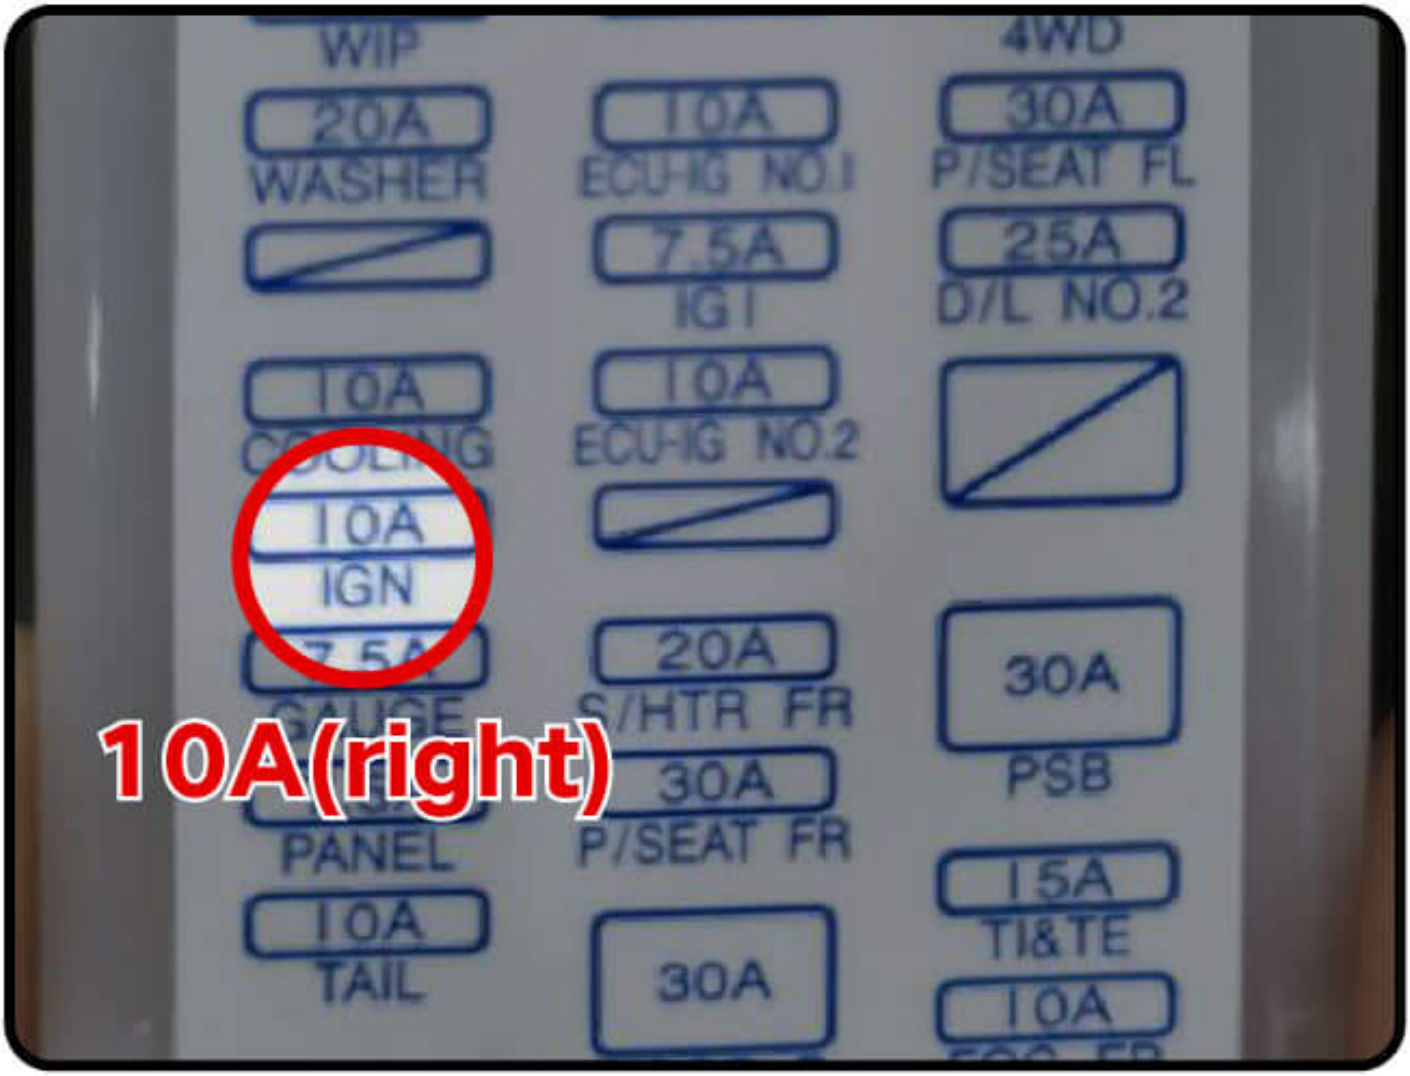

10A(right)

WIP
4WD
20A
WASHER
10A
ECU-IG NO.1
30A
P/SEAT FL
7.5A
IG1
25A
D/L NO.2
10A
COOLING
10A
ECU-IG NO.2
10A
IGN
7.5A
GAUGE
20A
S/HTR FR
30A
PSB
30A
P/SEAT FR
PANEL
10A
TAIL
30A
15A
TI&TE
10A

18 YEARS

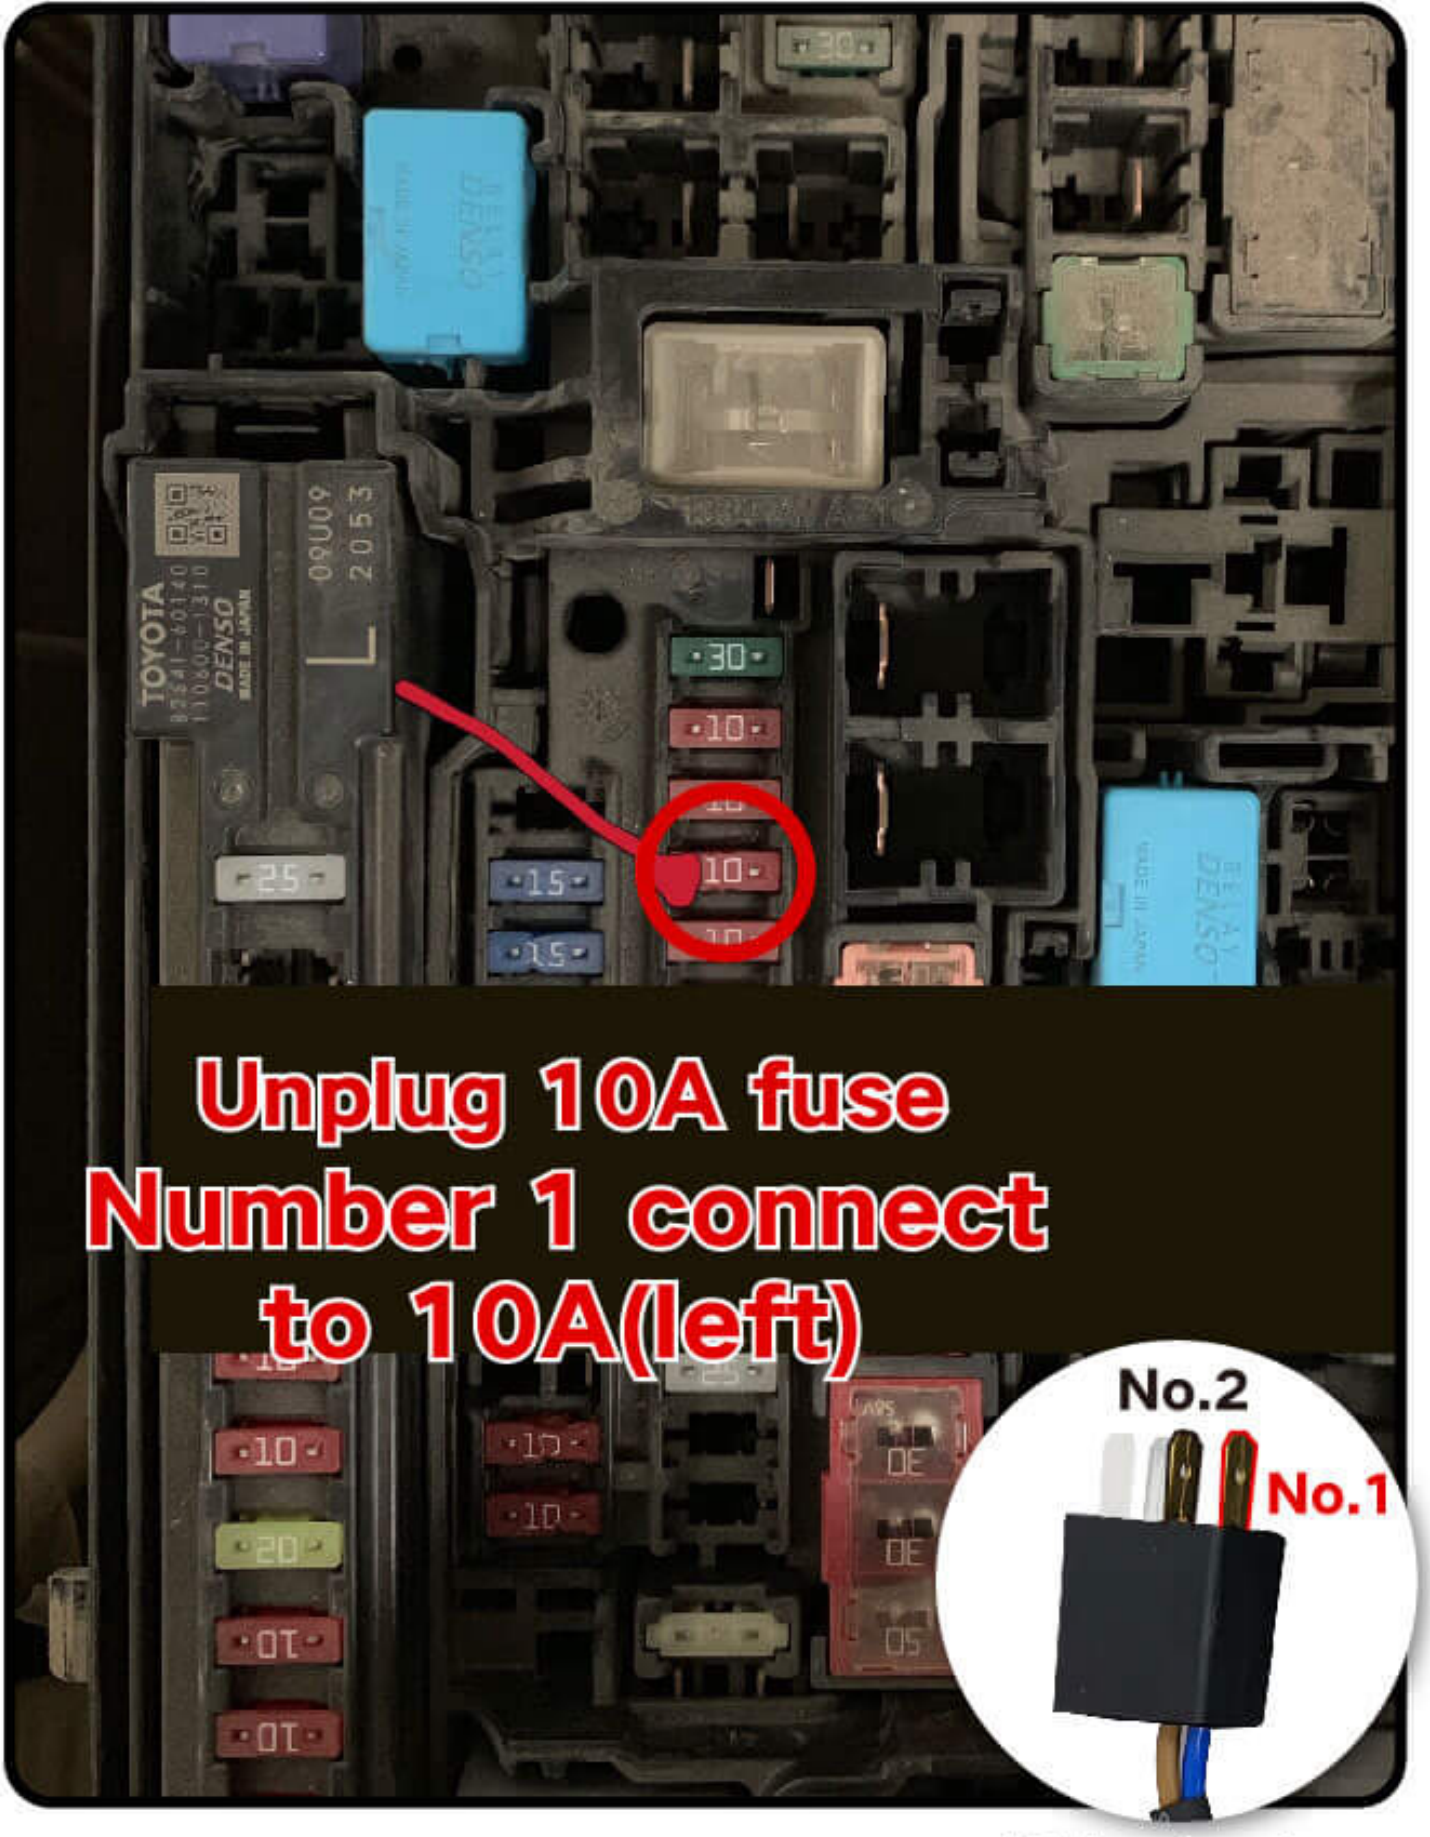

Unplug 10A fuse
Number 1 connect
to 10A(left)

J3 lock plug

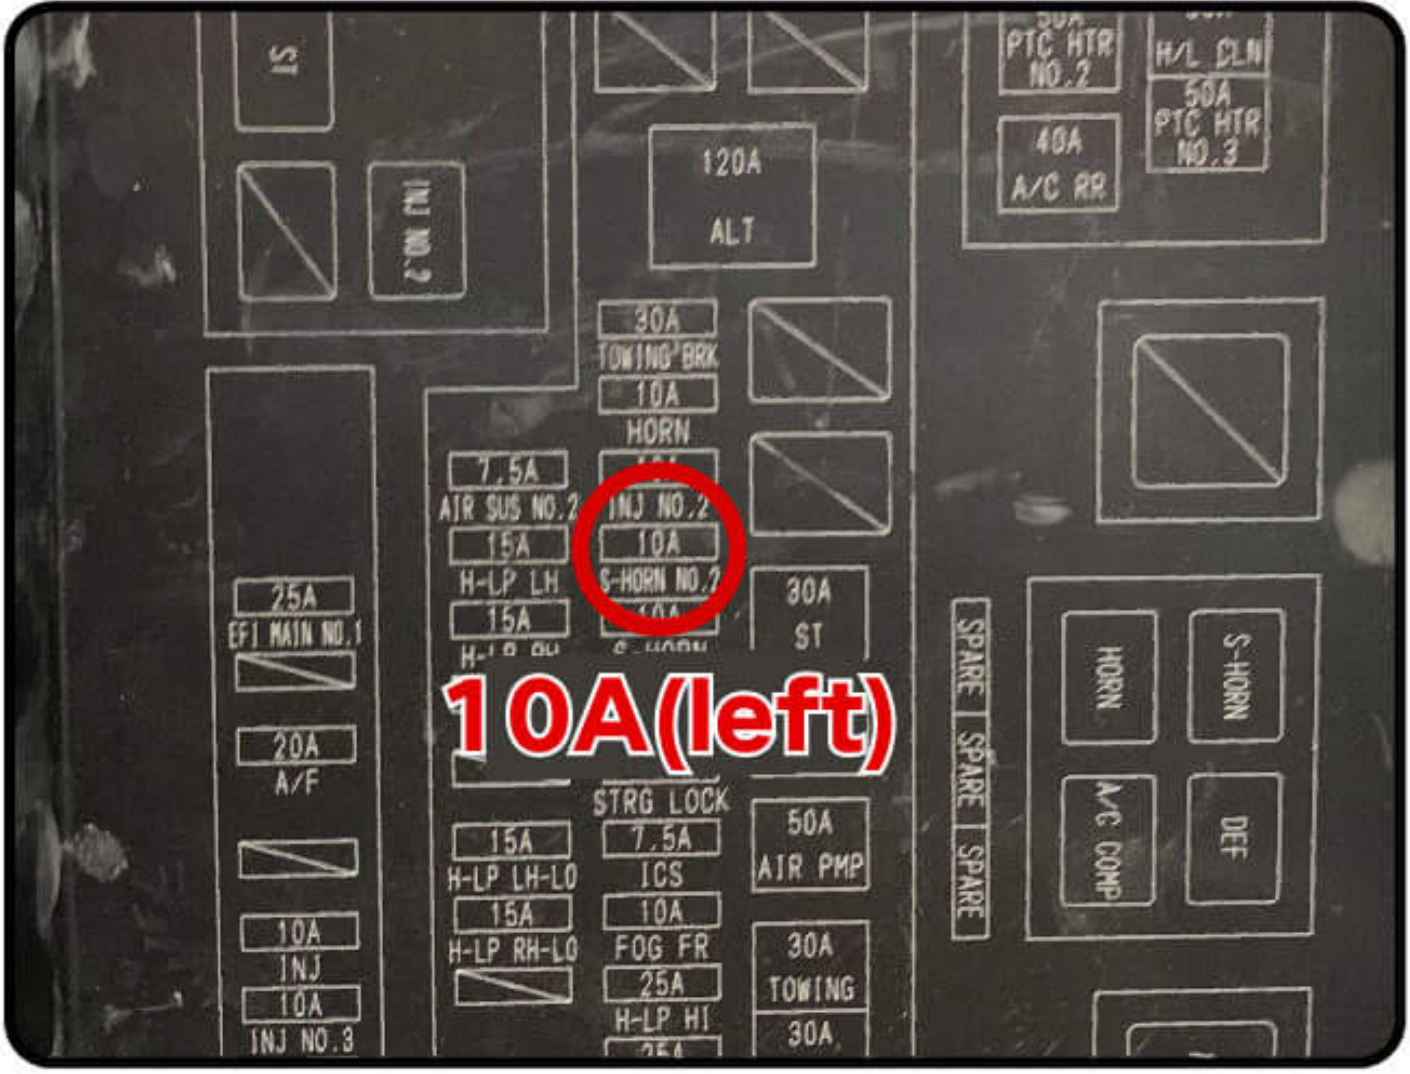

PTC HTR NO.2
H/L CLN
50A
PTC HTR NO.3
40A
A/C RR
120A
ALT
ST
INJ NO.2
30A
TOWING BRK
10A
HORN
7.5A
AIR SUS NO.2
INJ NO.2
15A
10A
H-LP LH
S-HORN NO.2
15A
30A
ST
25A
EFI MAIN NO.1
20A
A/F
STRG LOCK
15A
7.5A
50A
H-LP LH-LO
ICS
AIR PMP
15A
10A
H-LP RH-LO
FOG FR
10A
INJ
25A
30A
H-LP HI
TOWING
10A
INJ NO.3
30A
SPARE
SPARE
SPARE
HORN
S-HORN
A/C COMP
DEF

10A(left)

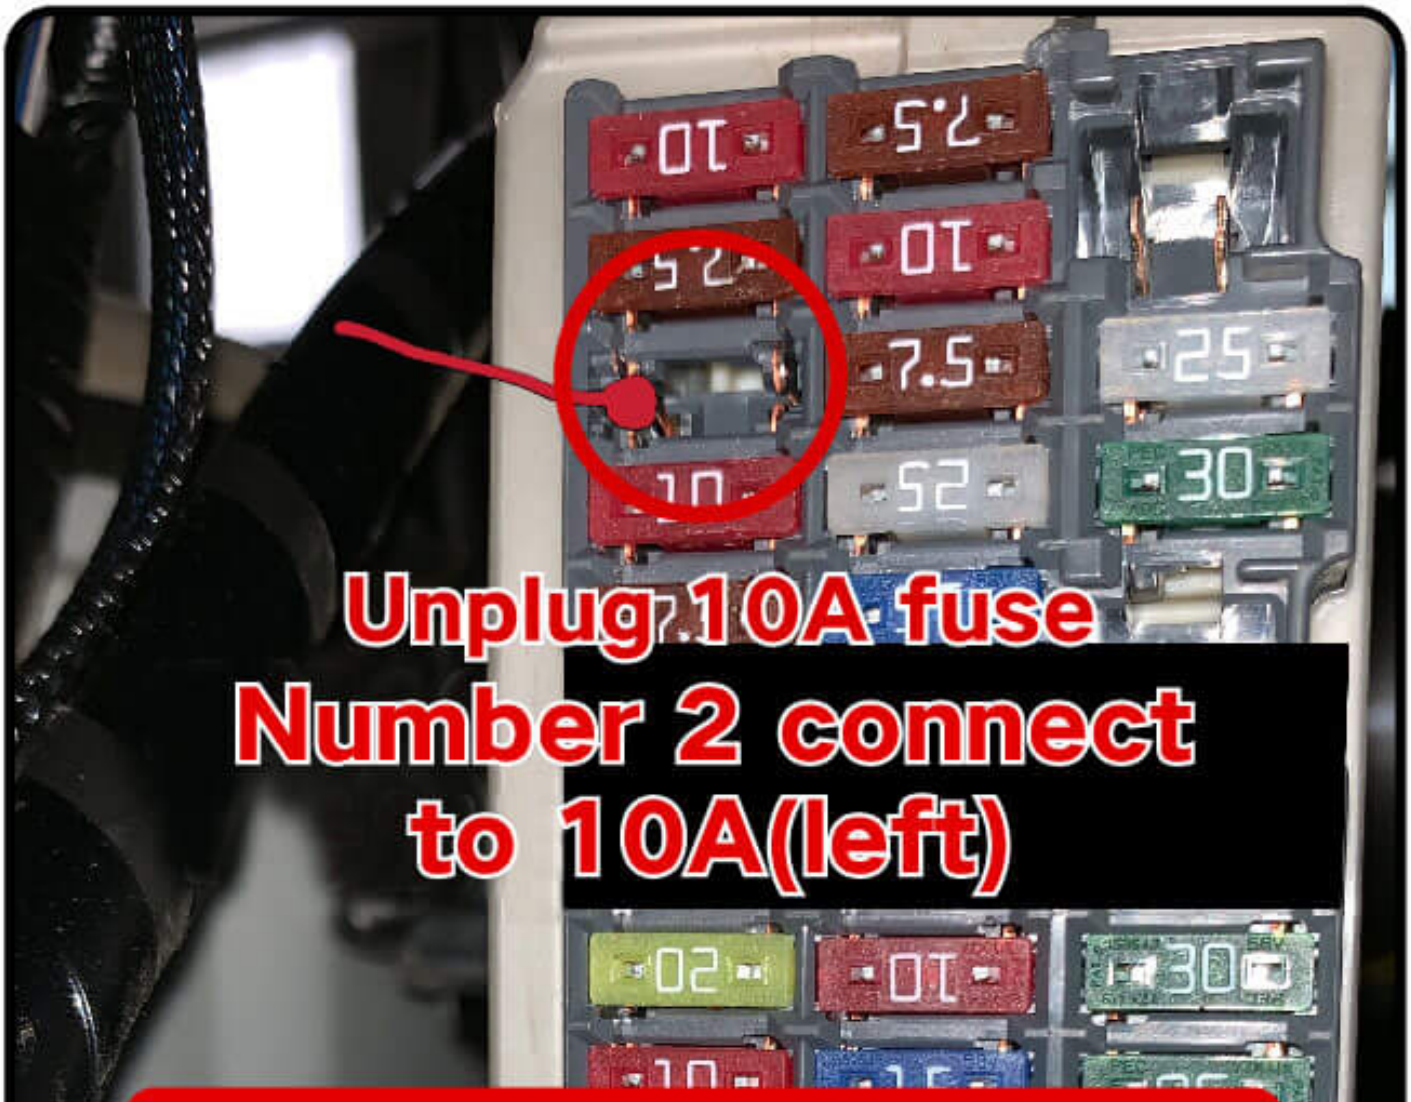

10
7.5
7.5
10
7.5
25
10
25
30
20
10
30

Unplug 10A fuse

Number 2 connect to 10A(left)

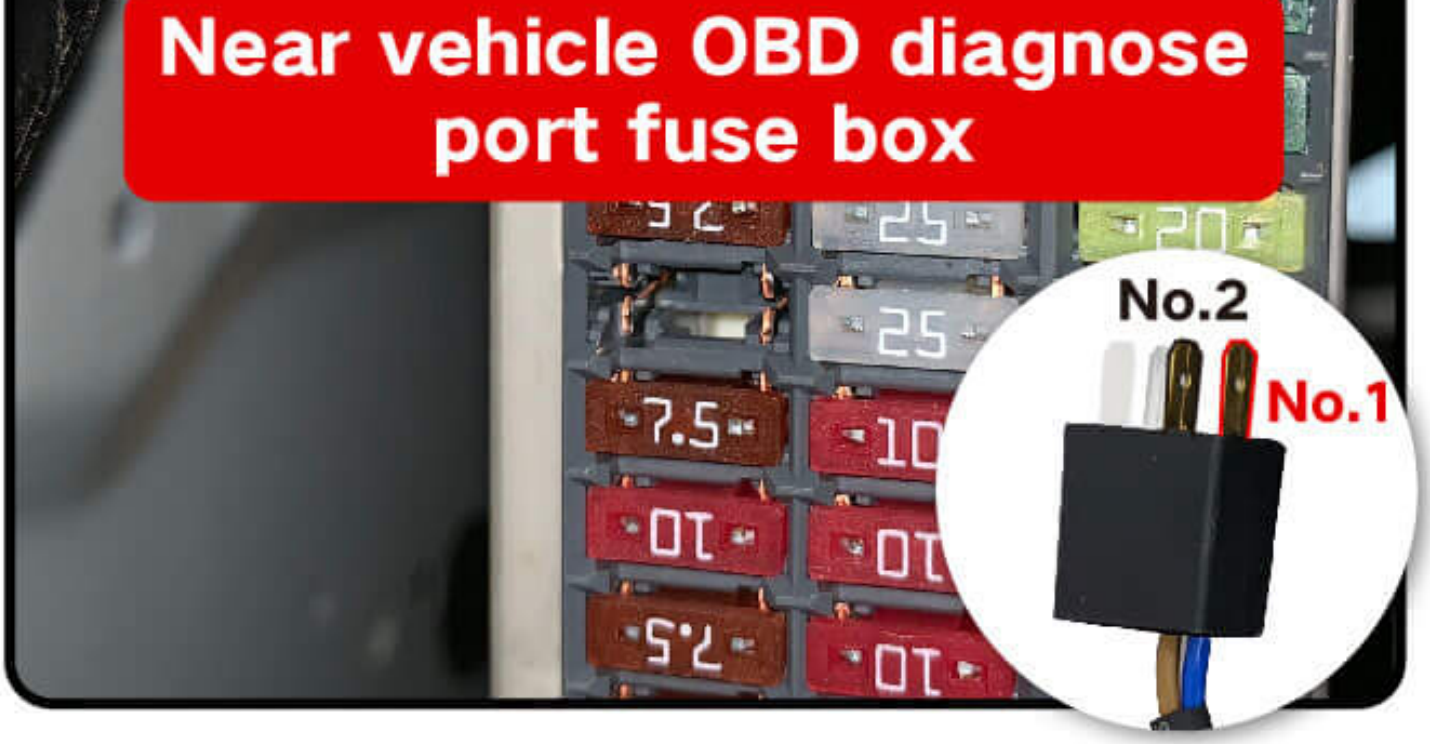
Near vehicle OBD diagnose port fuse box
No.2
No.1

J3 lock plug

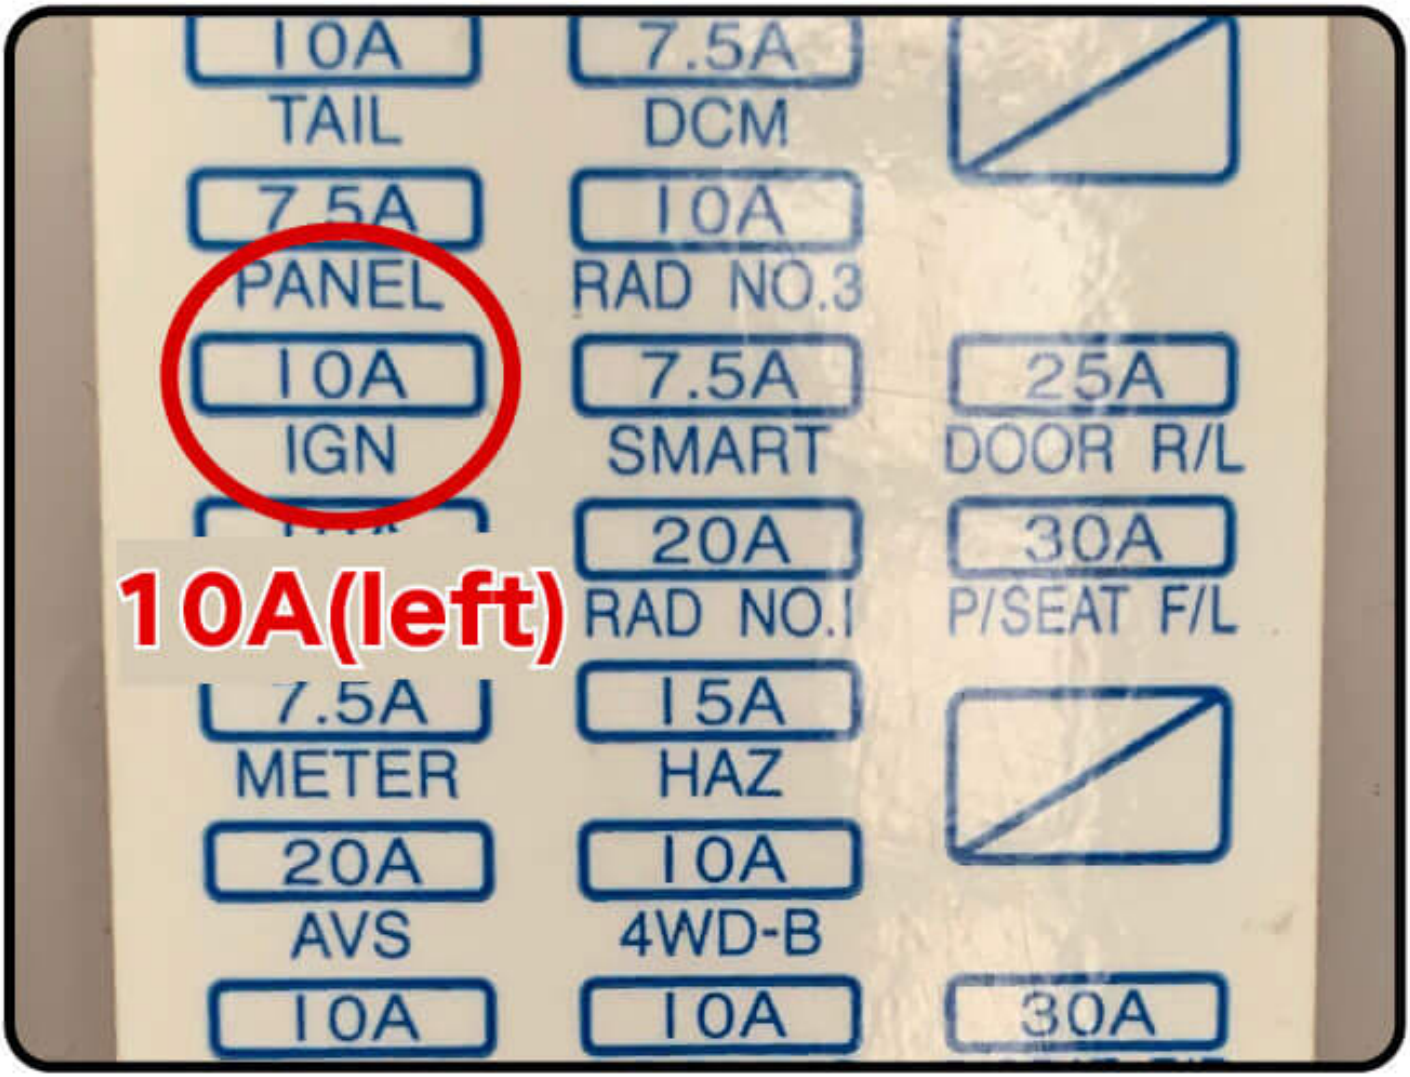
10A
TAIL
7.5A
DCM
7.5A
PANEL
10A
RAD NO.3
10A
IGN
7.5A
SMART
25A
DOOR R/L
10A(left)
20A
RAD NO.1
30A
P/SEAT F/L
7.5A
METER
15A
HAZ
20A
AVS
10A
4WD-B
10A
10A
30A

③ Please connect the ELV wires as shown

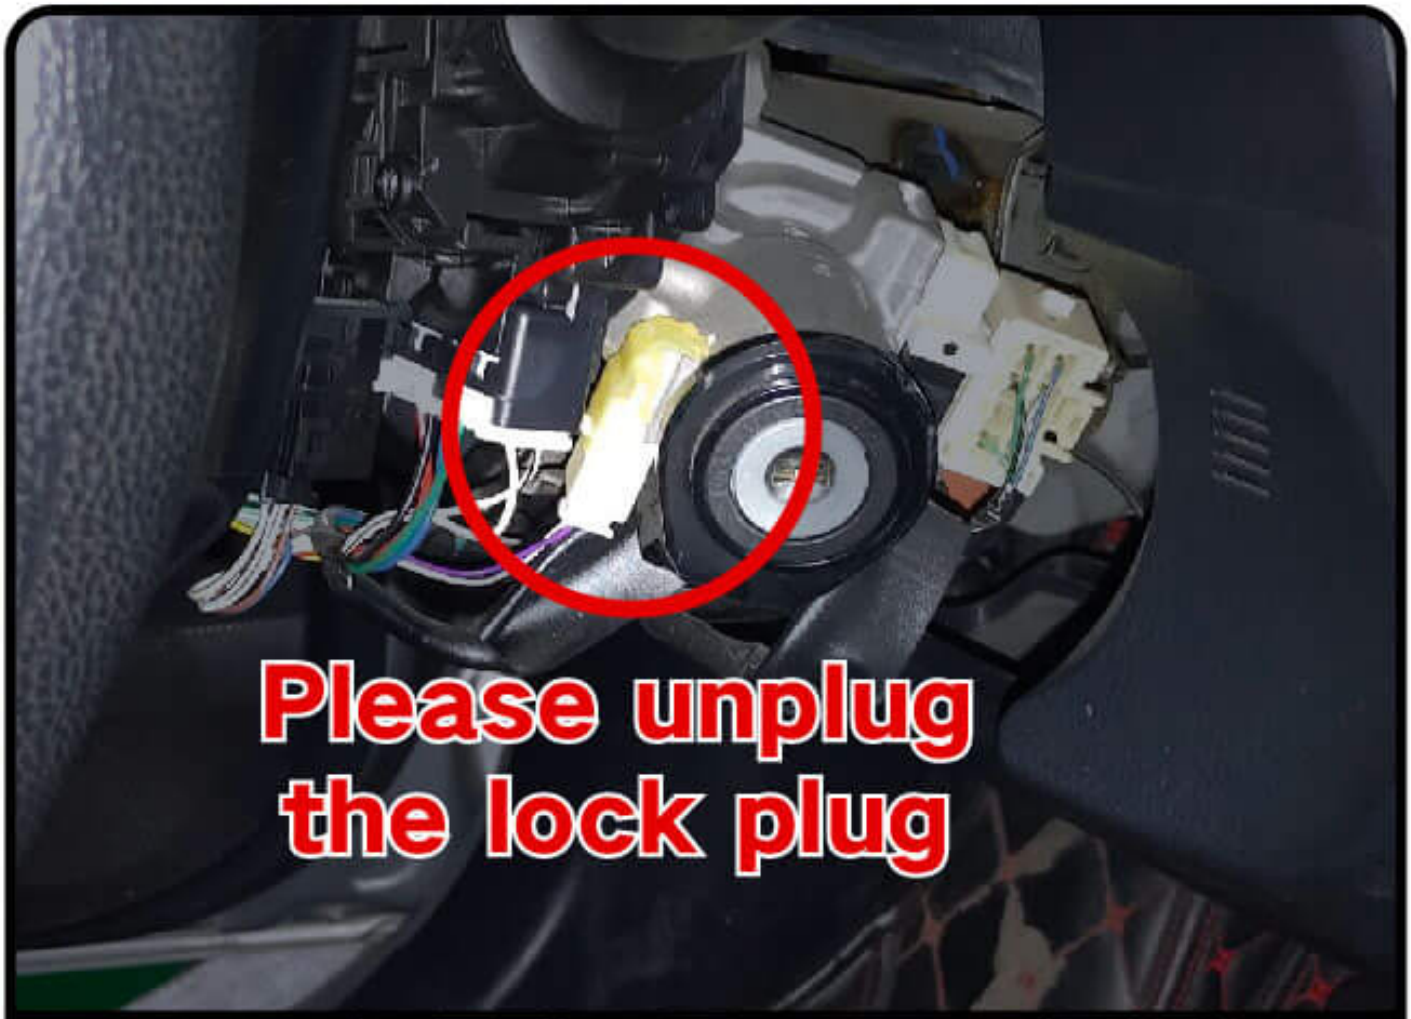

Please unplug the lock plug

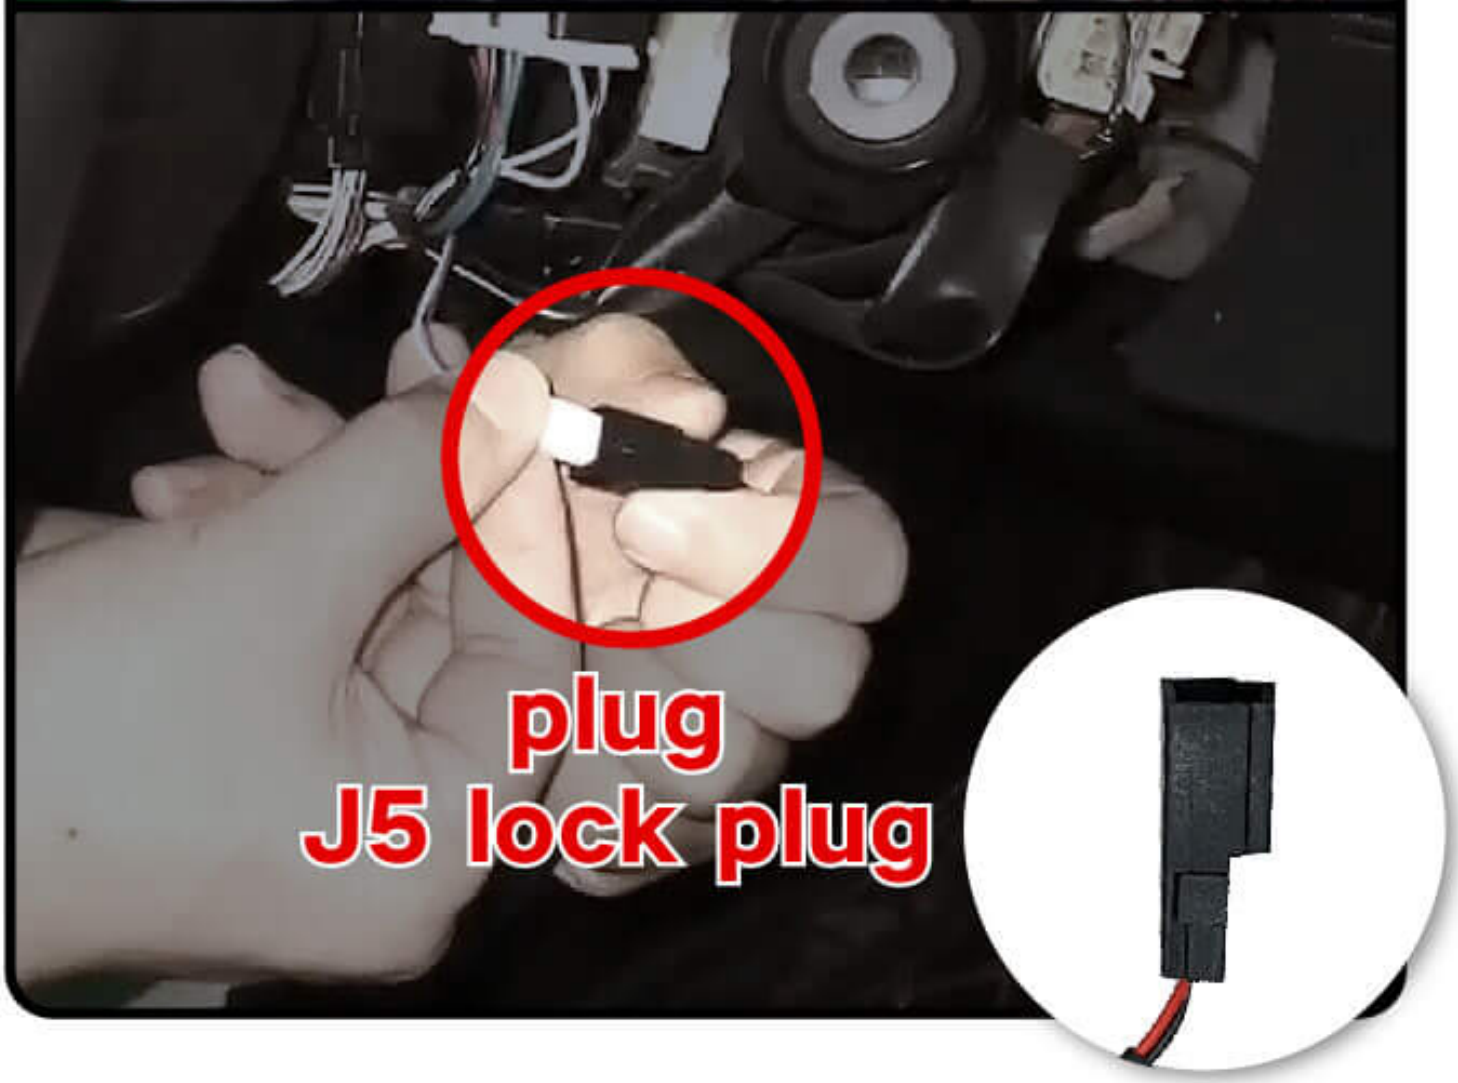

plug J5 lock plug

J5 lock plug

④ Please connect to car OBD,

all key lost cables and car battery

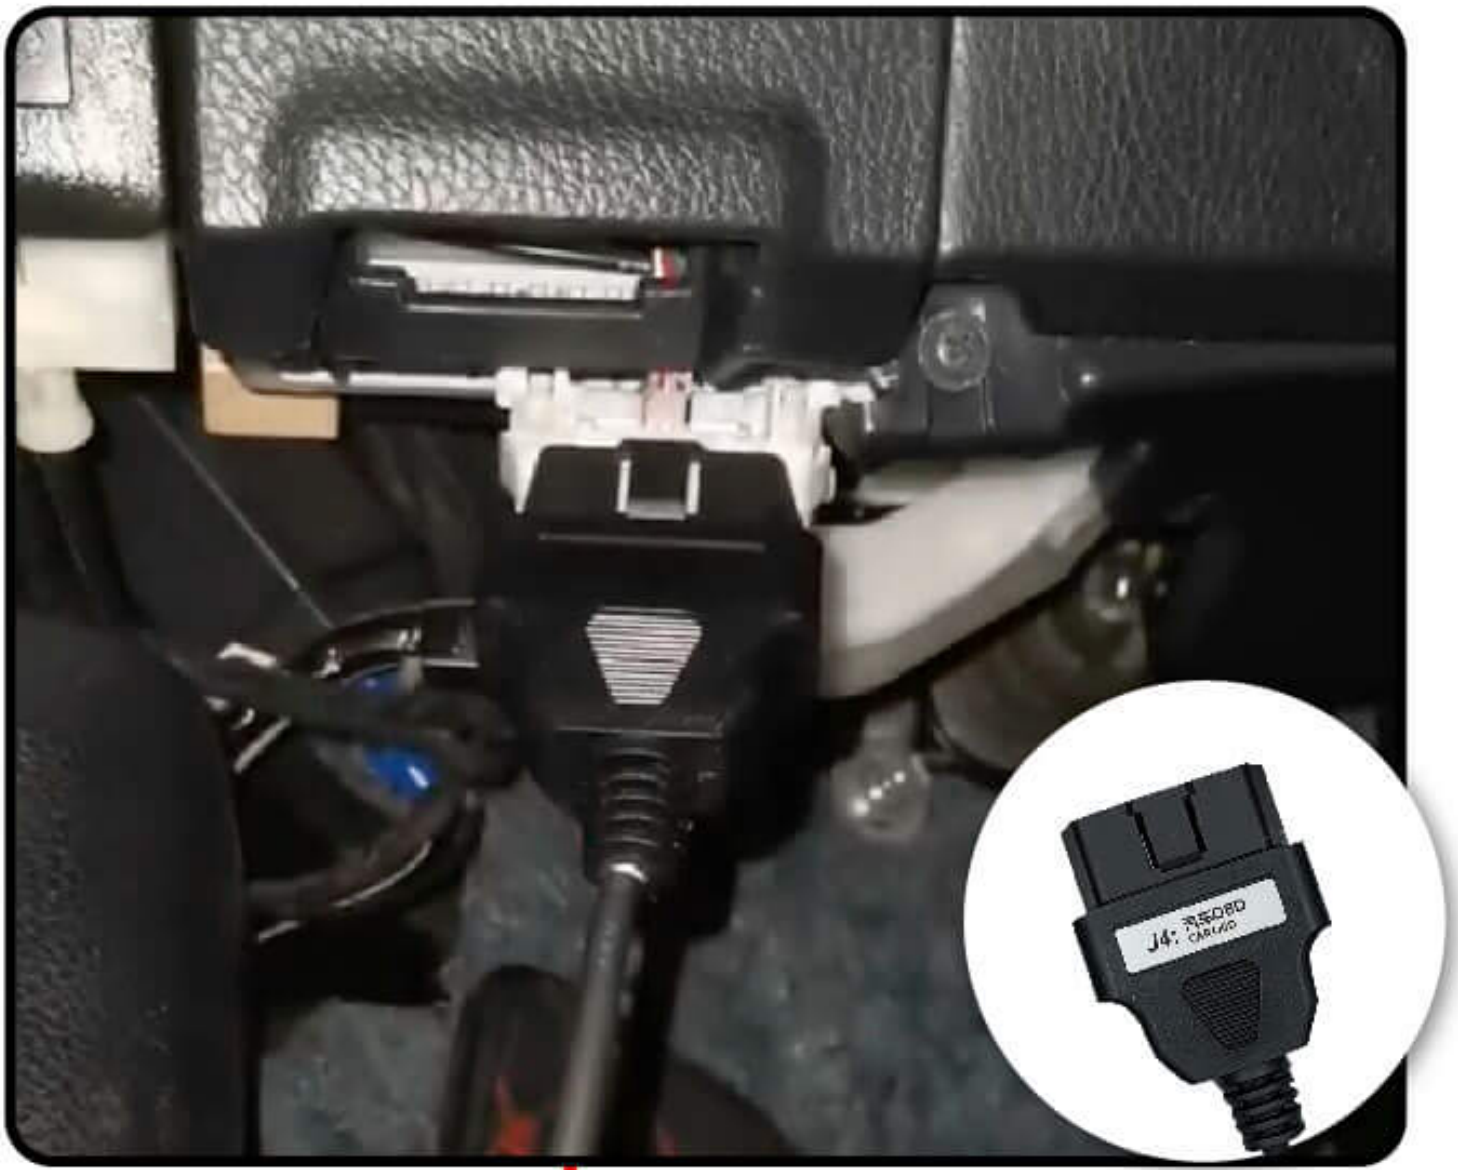

J4 lock plug

VVDI

J6 lock plug

KEY TOOL MAX &MINI OBD

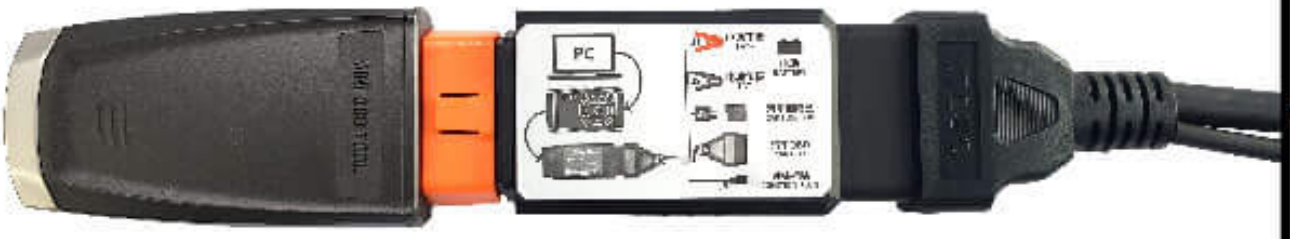

J6 lock plug

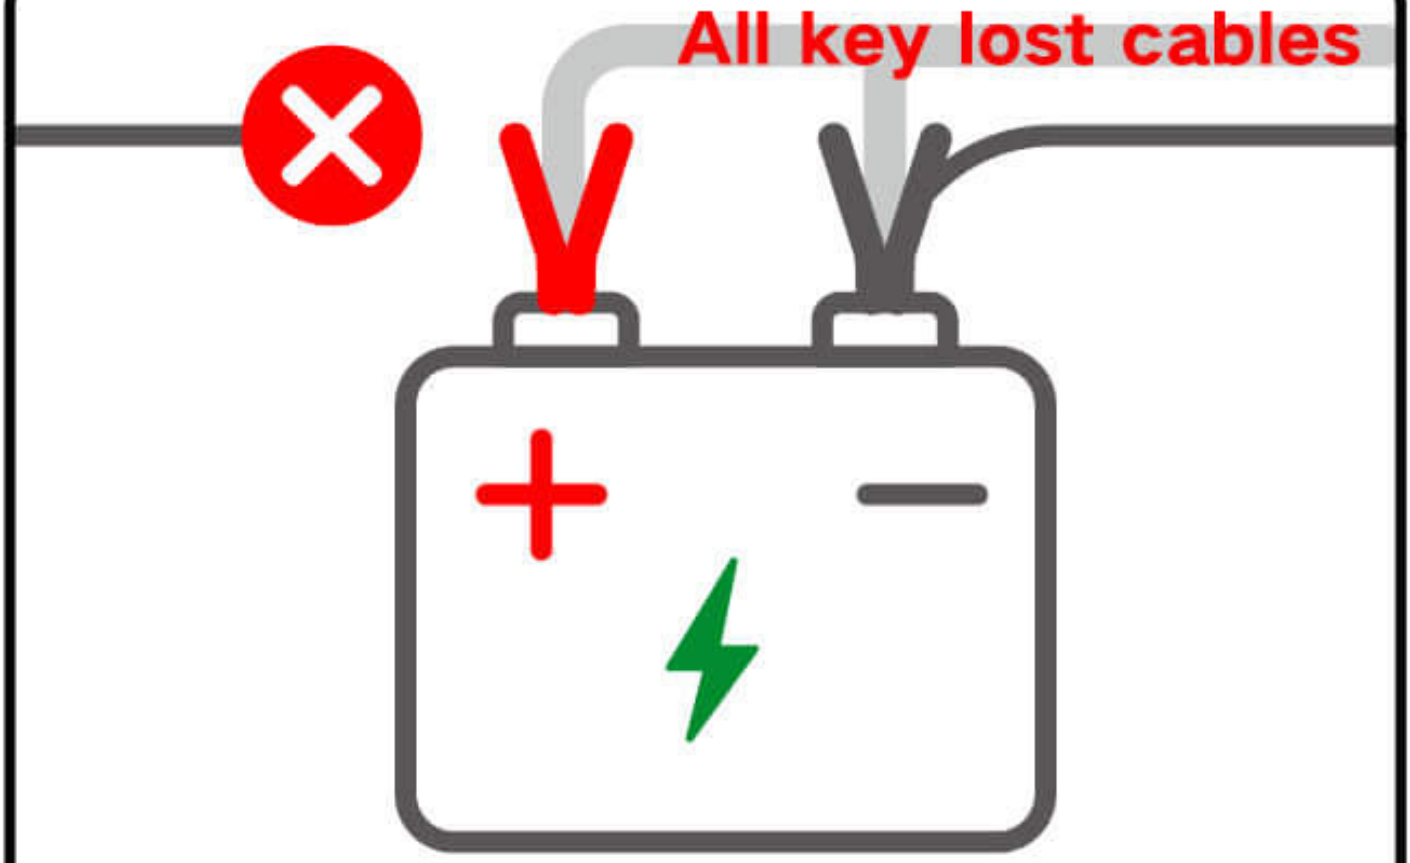
All key lost cables
+
−

⑤ Please generate start chip referring to software interface

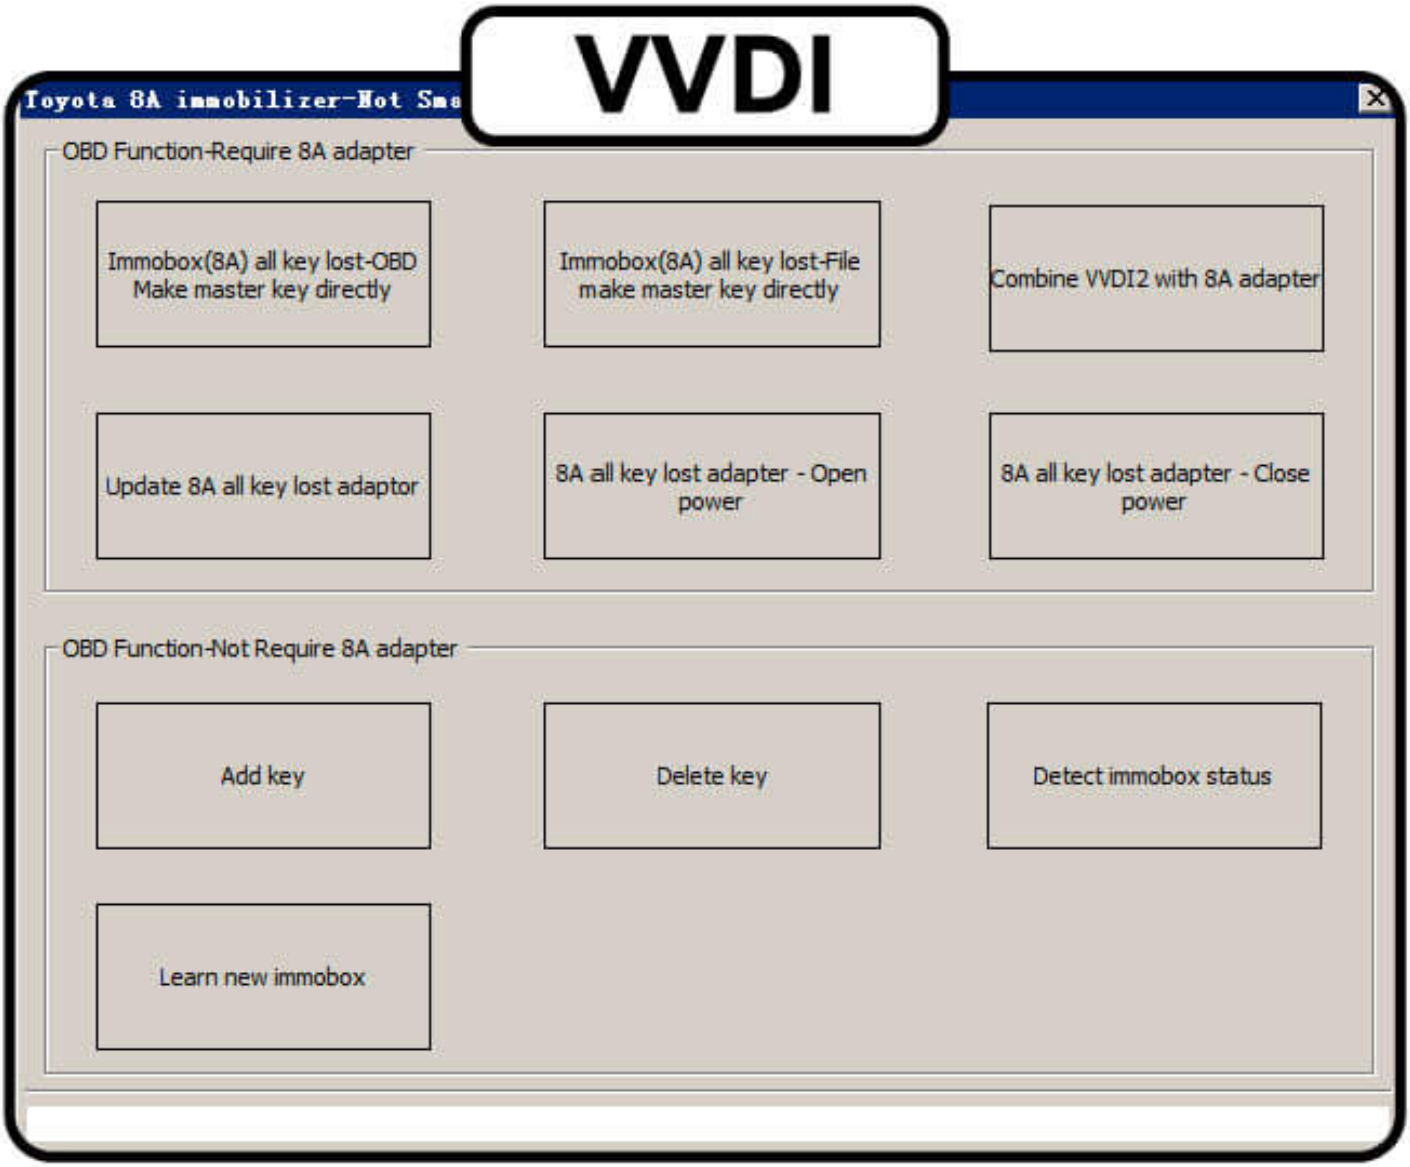
VVDI
Toyota 8A immobilizer-Hot Sma
OBD Function-Require 8A adapter
Immobox(8A) all key lost-OBD Make master key directly
Immobox(8A) all key lost-File make master key directly
Combine VVDI2 with 8A adapter
Update 8A all key lost adaptor
8A all key lost adapter - Open power
8A all key lost adapter - Close power
OBD Function-Not Require 8A adapter
Add key
Delete key
Detect immobox status
Learn new immobox

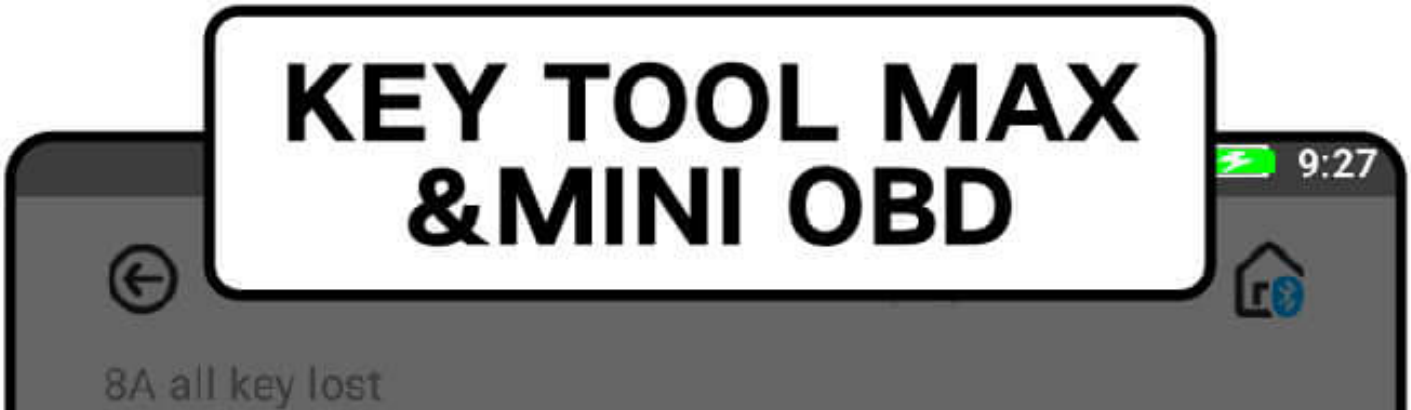
KEY TOOL MAX &MINI OBD
9:27
8A all key lost

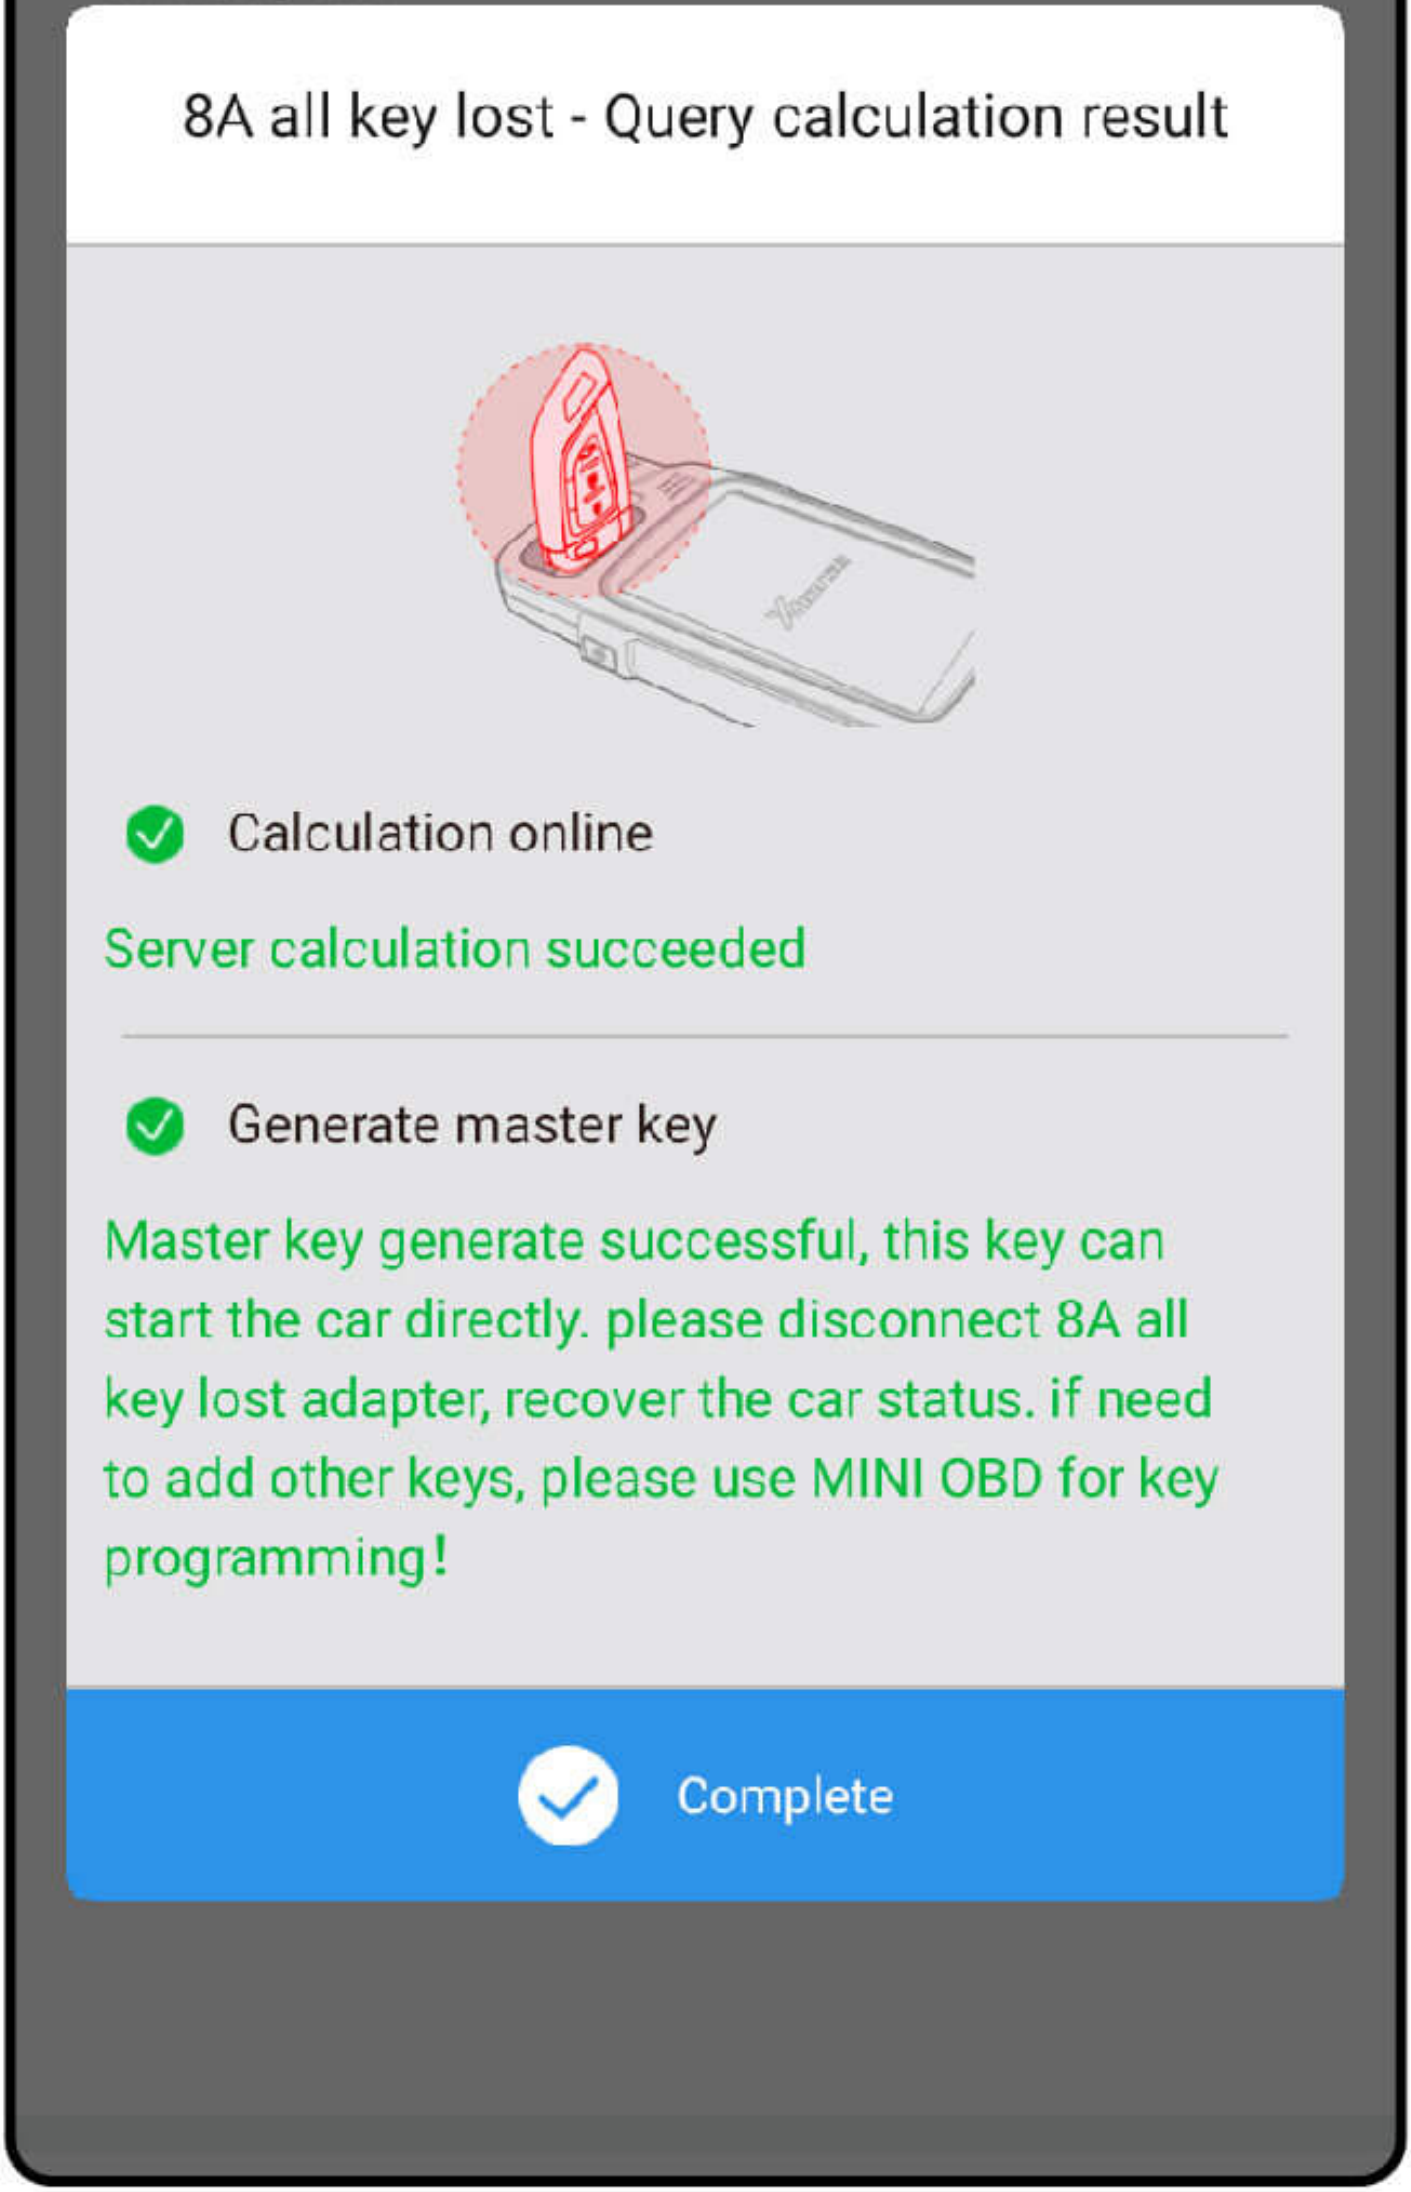

8A all key lost - Query calculation result

✓ Calculation online

Server calculation succeeded

✓ Generate master key

Master key generate successful, this key can start the car directly. please disconnect 8A all key lost adapter, recover the car status. if need to add other keys, please use MINI OBD for key programming!

⑥ Please disconnect all cables,recover all connection wires as car original status

If the connection wires not recovery to original status and start the car directly, the fuse boxe and device will be burnt

⑦ Test generated transponder

Toyota **Levin**

Support more models

Toyota Corolla、Camry、Prado、RAV etc.,

VVDI

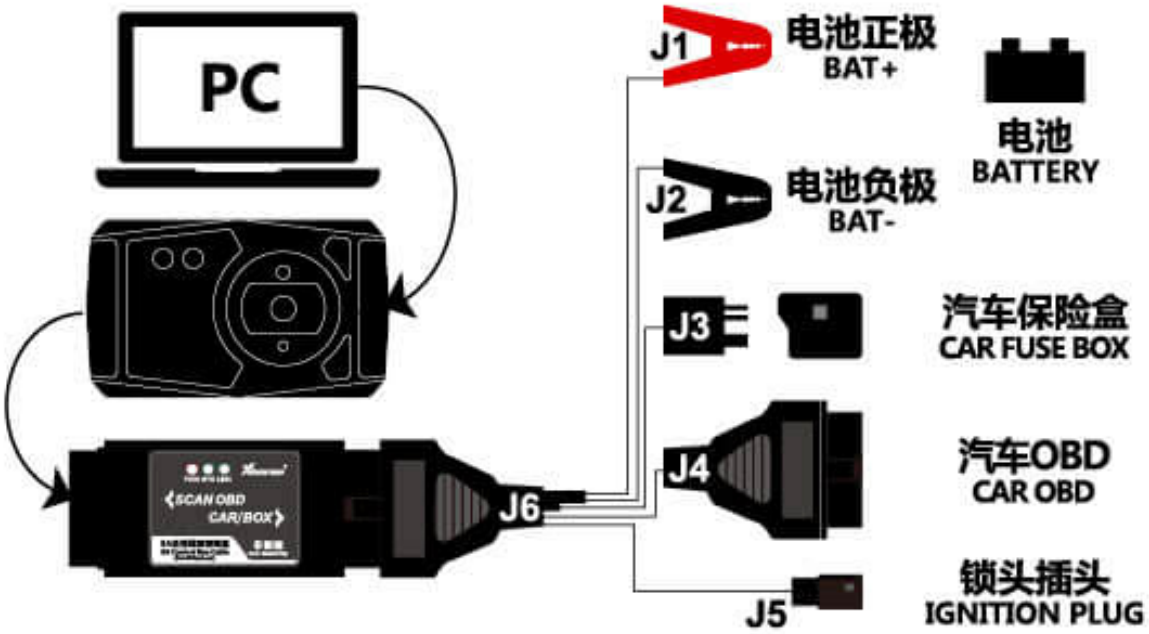
PC
J1
电池正极
BAT+
电池
BATTERY
J2
电池负极
BAT-
J3
汽车保险盒
CAR FUSE BOX
J4
汽车OBD
CAR OBD
J5
锁头插头
IGNITION PLUG
J6
SCAN OBD
CAR/BOX

KEY TOOL MAX & MINI OBD

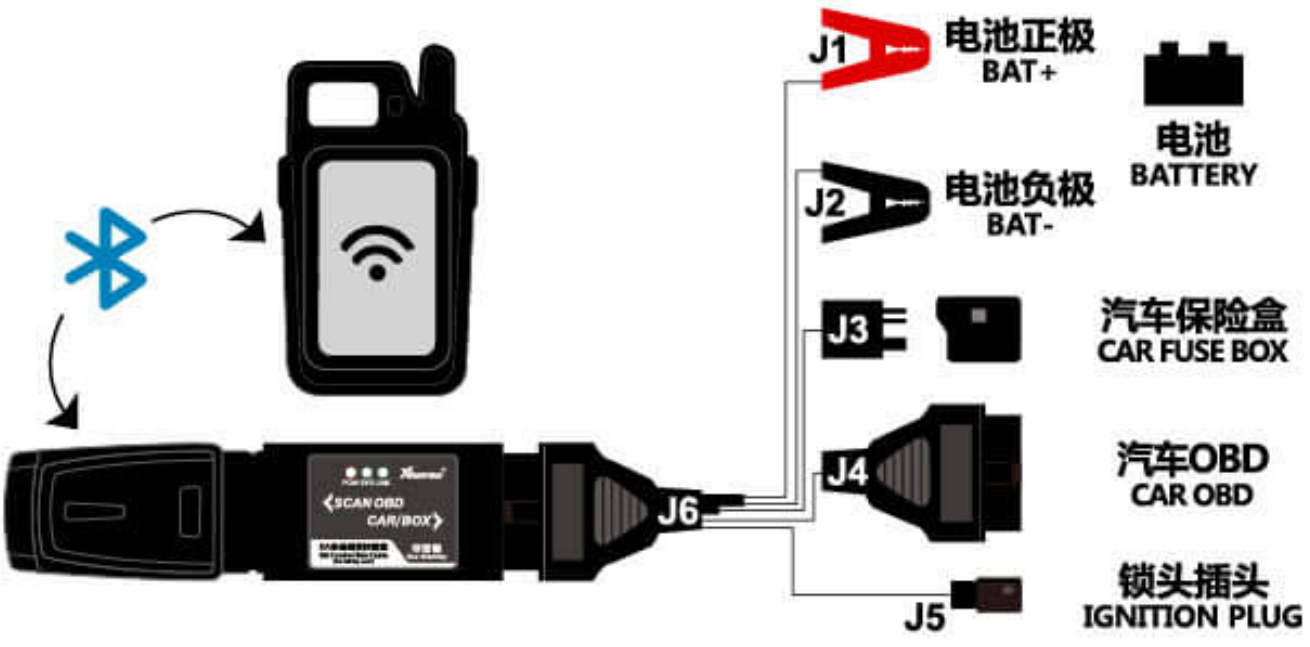
J1
电池正极
BAT+
电池
BATTERY
J2
电池负极
BAT-
J3
汽车保险盒
CAR FUSE BOX
J4
汽车OBD
CAR OBD
J5
锁头插头
IGNITION PLUG
J6
SCAN OBD
CAR/BOX

ⓘ Please update device to latest version for this function

During the process don't insert the key, please keep ignition off

① Disconnect the positive pole of the car battery to protect the connector and avoid short circuits

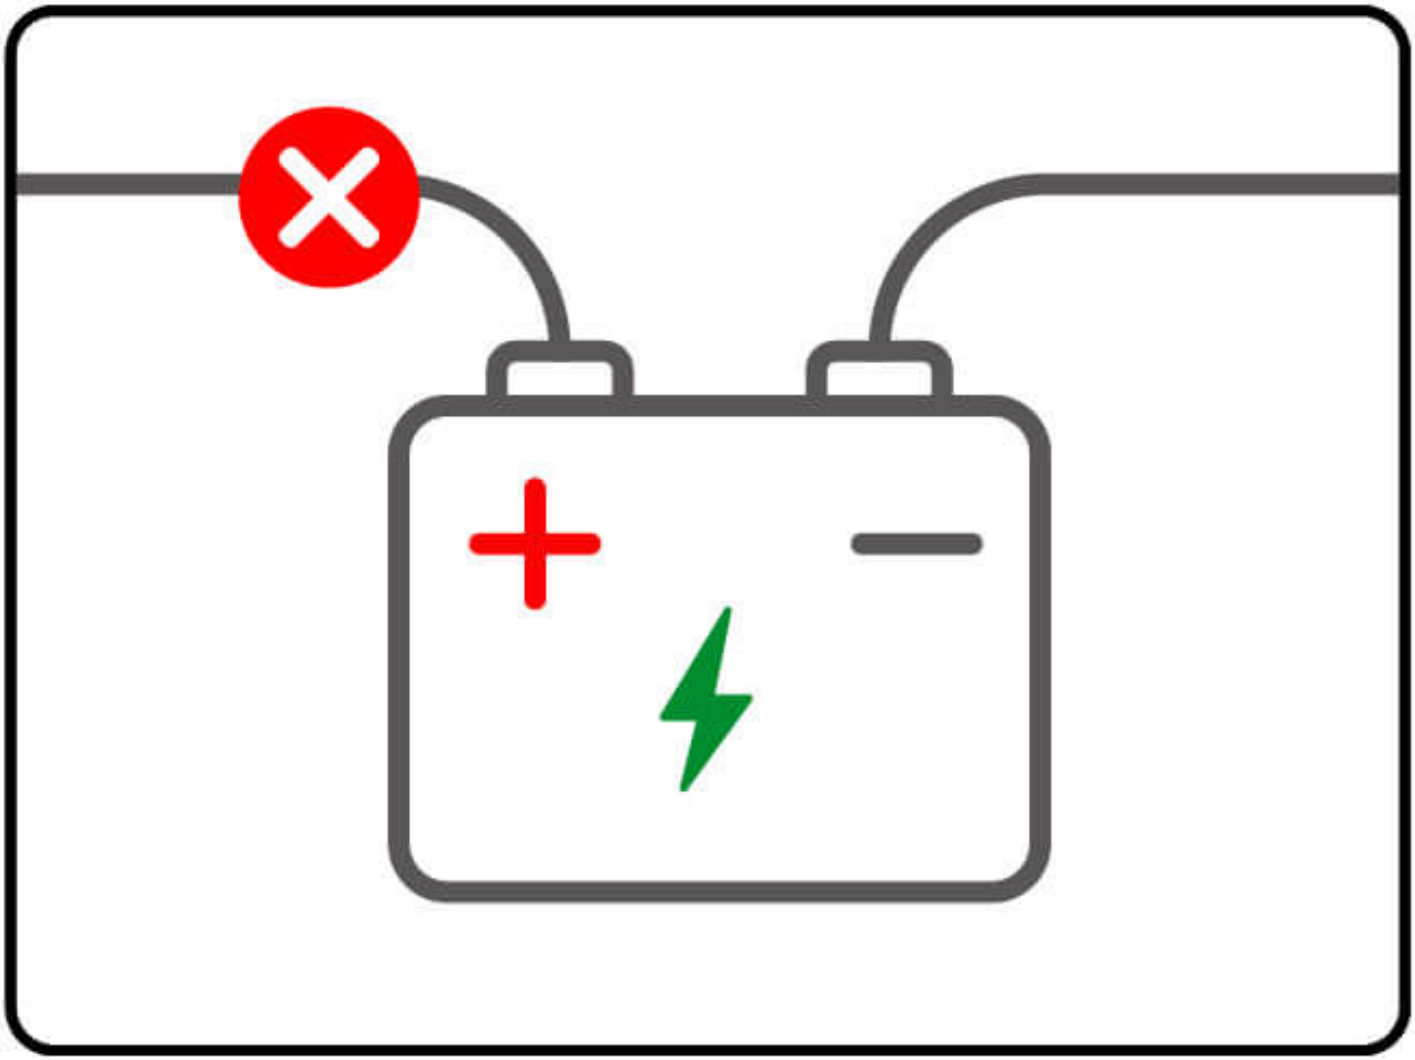

② Please connect to fuse box as the image

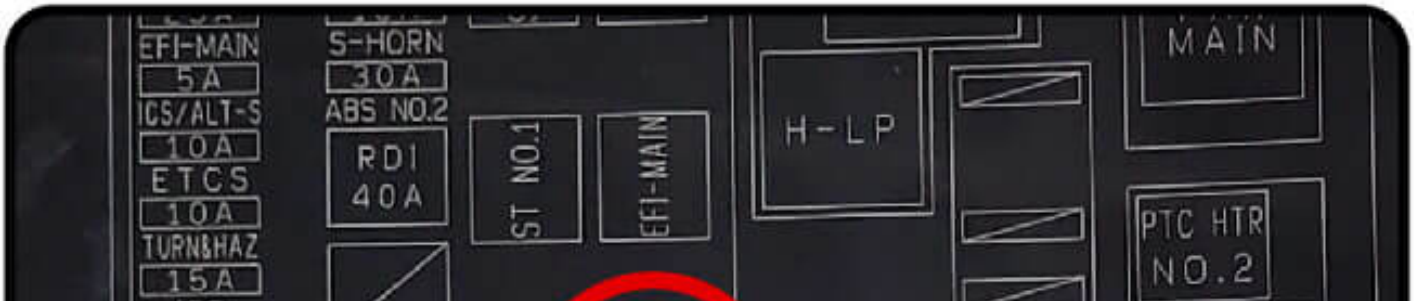
EFI-MAIN
5A
ICS/ALT-S
10A
ETCS
10A
TURN&HAZ
15A
S-HORN
30A
ABS NO.2
RDI
40A
ST NO.1
EFI-MAIN
H-LP
MAIN
PTC HTR
NO.2

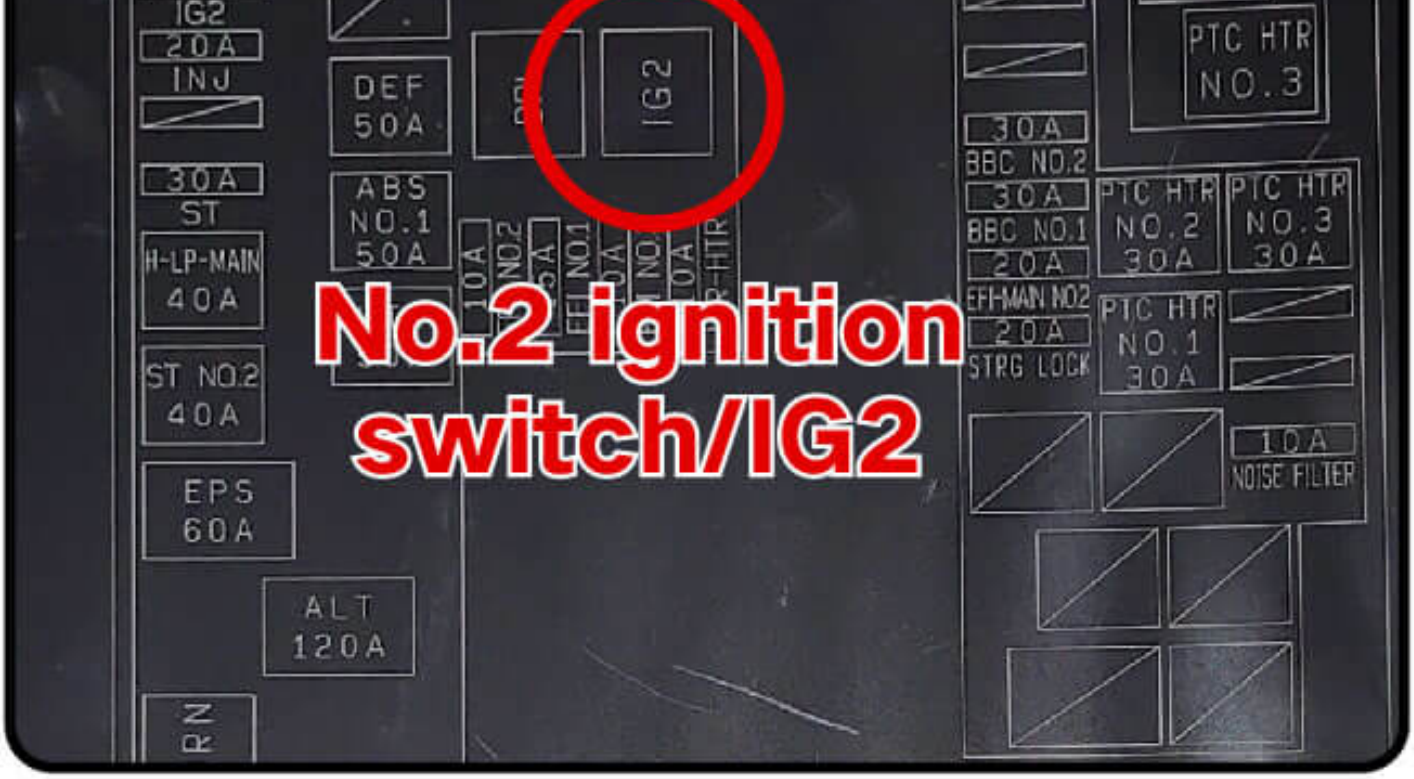
IG2
20A
INJ
30A
ST
H-LP-MAIN
40A
ST NO.2
40A
EPS
60A
ALT
120A
DEF
50A
ABS
NO.1
50A
IG2
30A
BBC NO.2
30A
BBC NO.1
20A
EFI-MAIN NO2
20A
STRG LOCK
PTC HTR
NO.3
PTC HTR
NO.2
30A
PTC HTR
NO.3
30A
PTC HTR
NO.1
30A
10A
NOISE FILTER

No.2 ignition switch/IG2

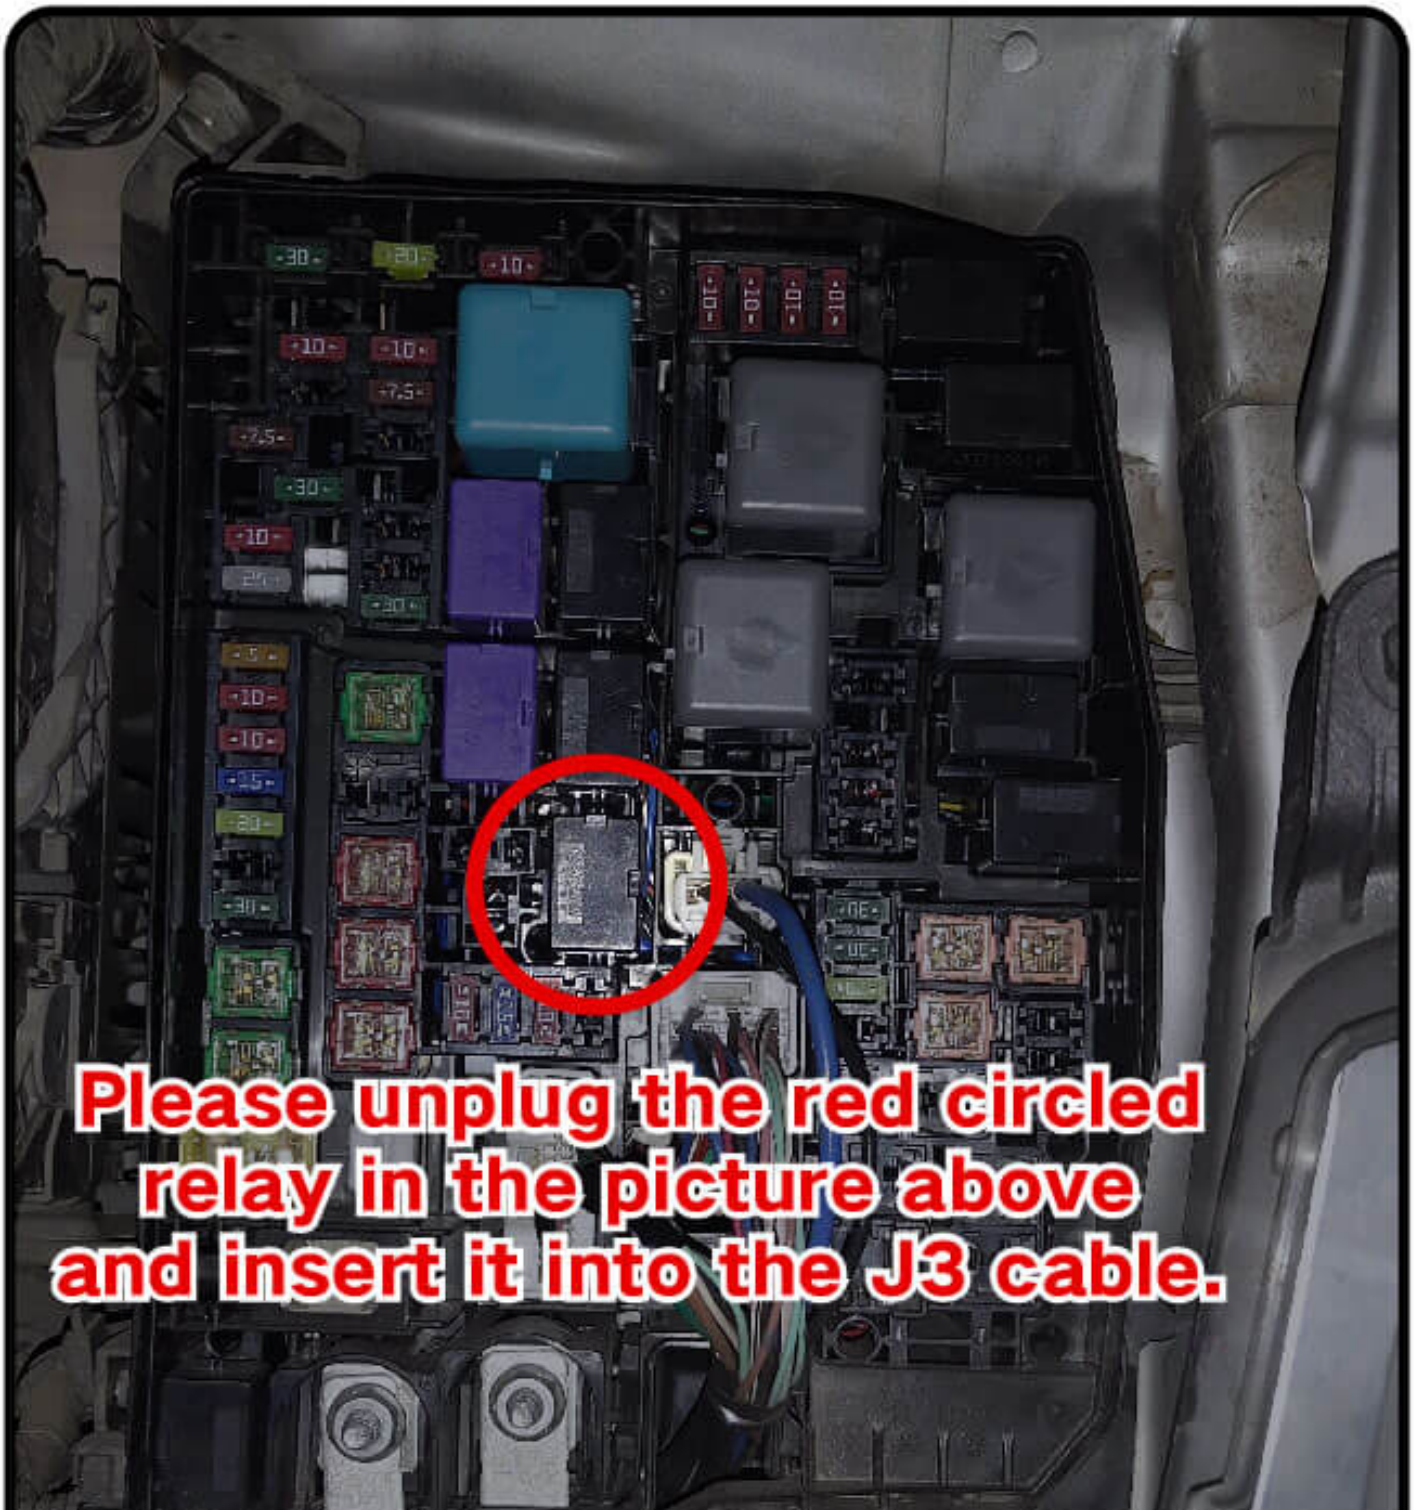
30
20
10
10
10
7.5
7.5
30
10
25
30
5
10
10
15
20
30
10
10
10
10

Please unplug the red circled relay in the picture above and insert it into the J3 cable.

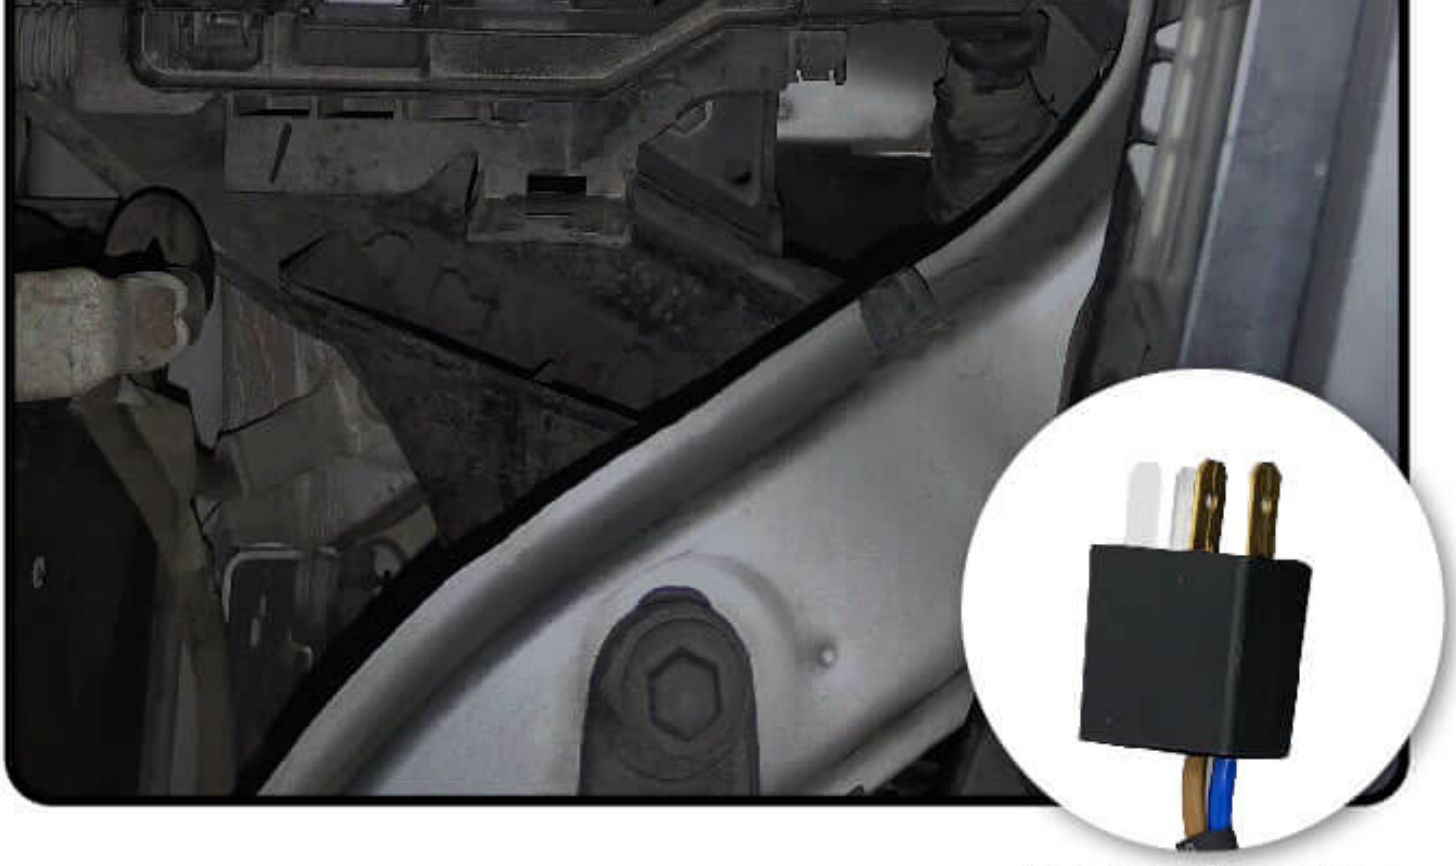

J3 lock plug

③ Please connect the ELV wires as shown

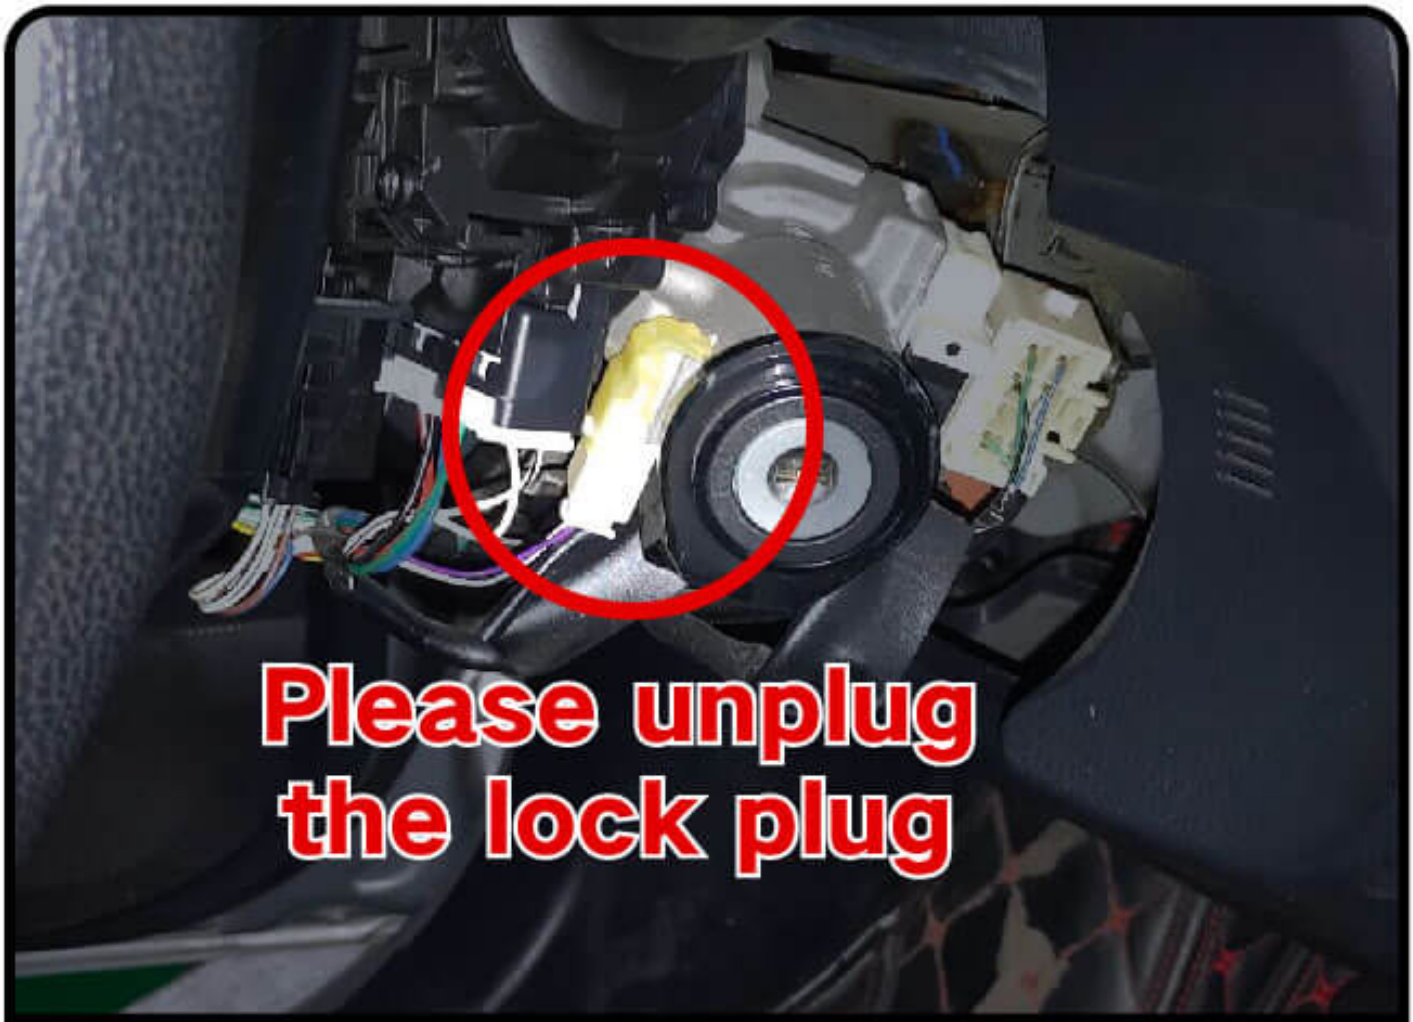
Please unplug
the lock plug

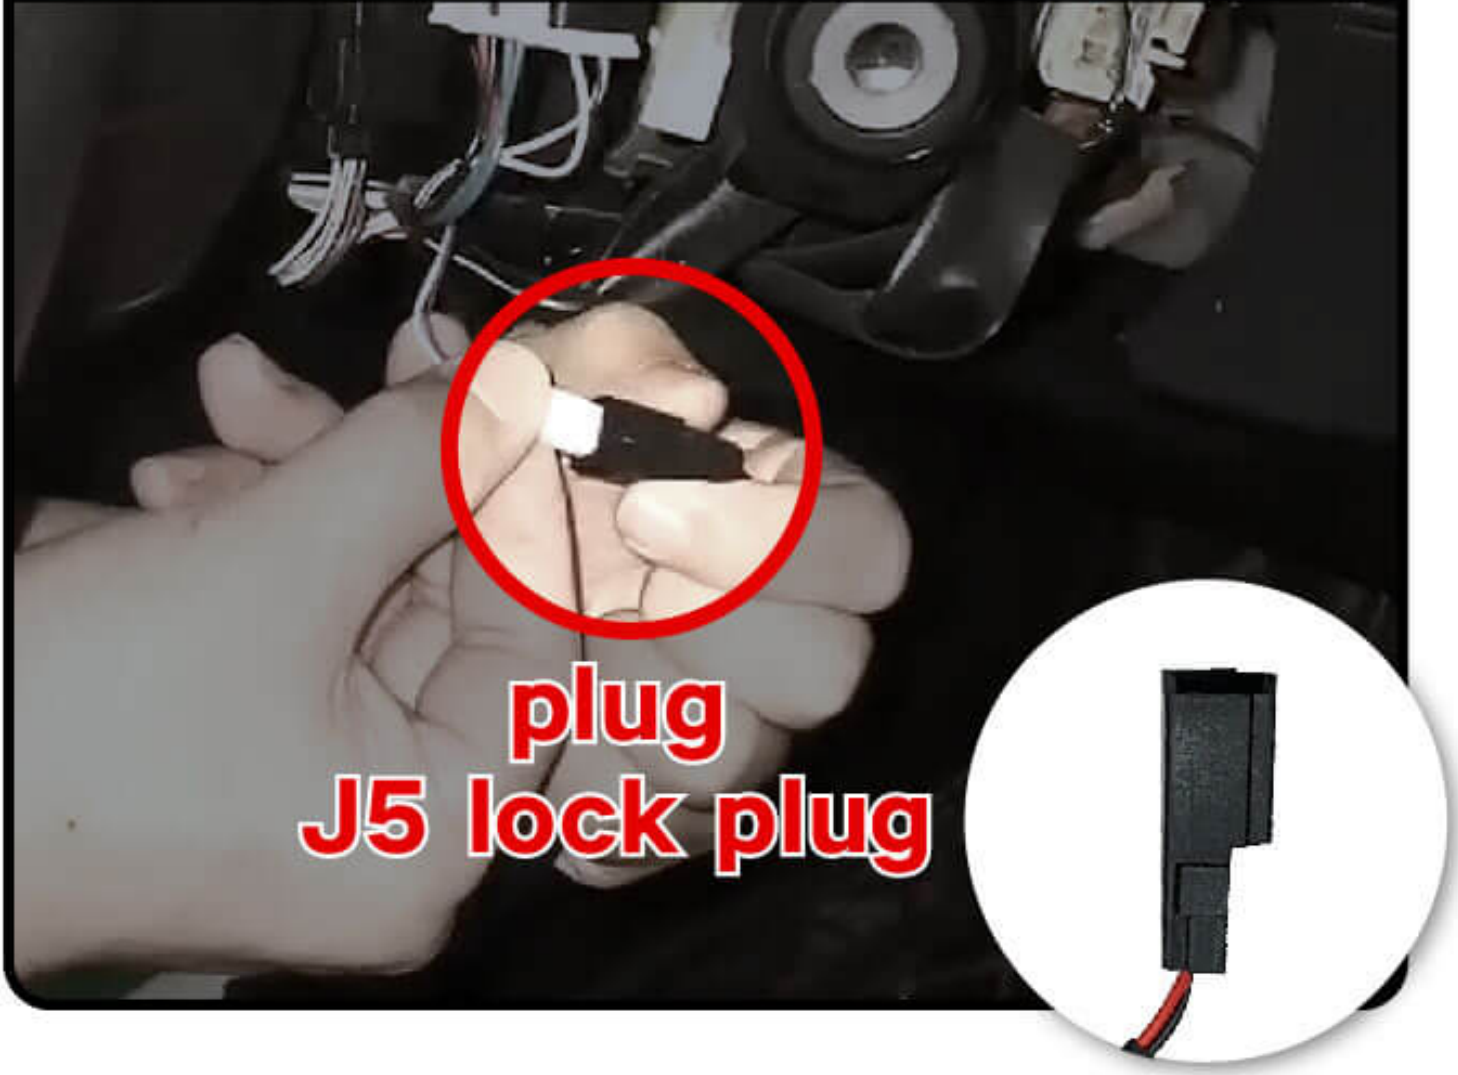
plug
J5 lock plug

J5 lock plug

④ Please connect to car OBD,
all key lost cables and car battery

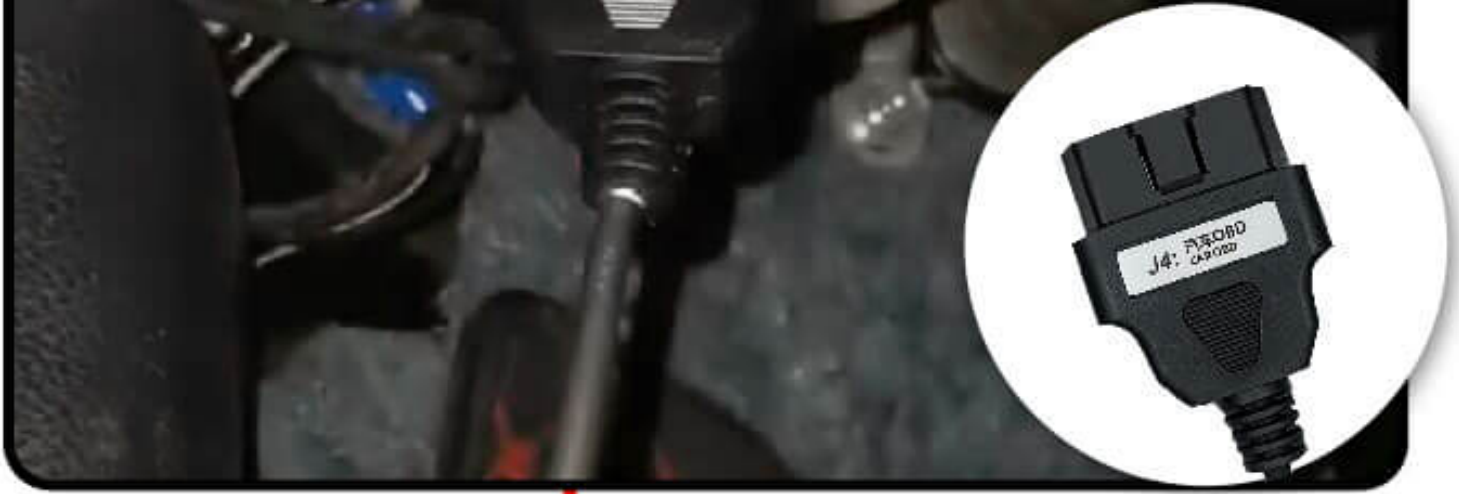

J4 lock plug

VVDI

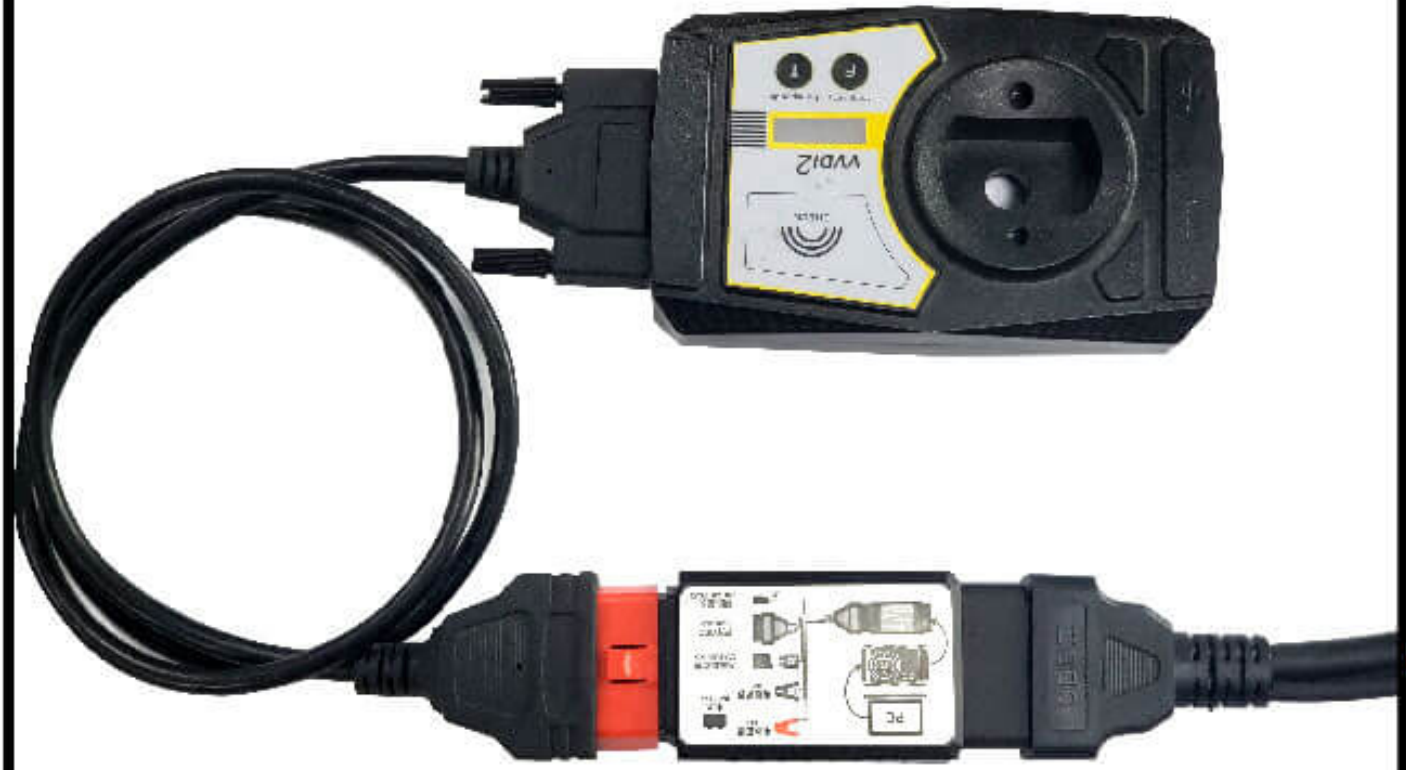

J6 lock plug

KEY TOOL MAX

&MINI OBD


PC
J6 lock plug

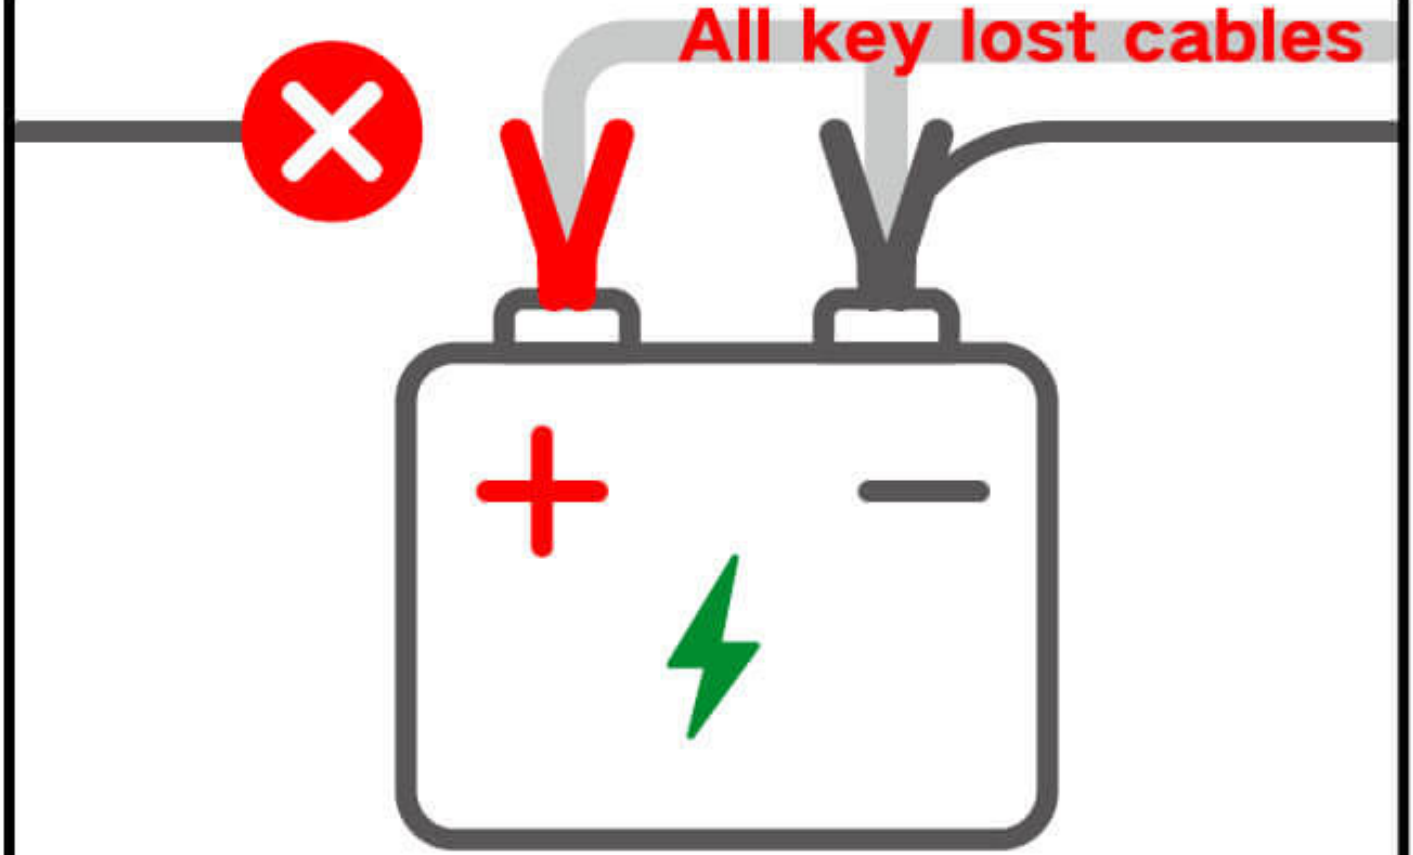
All key lost cables
+
−

⑤ Please generate start chip referring to software interface

VVDI

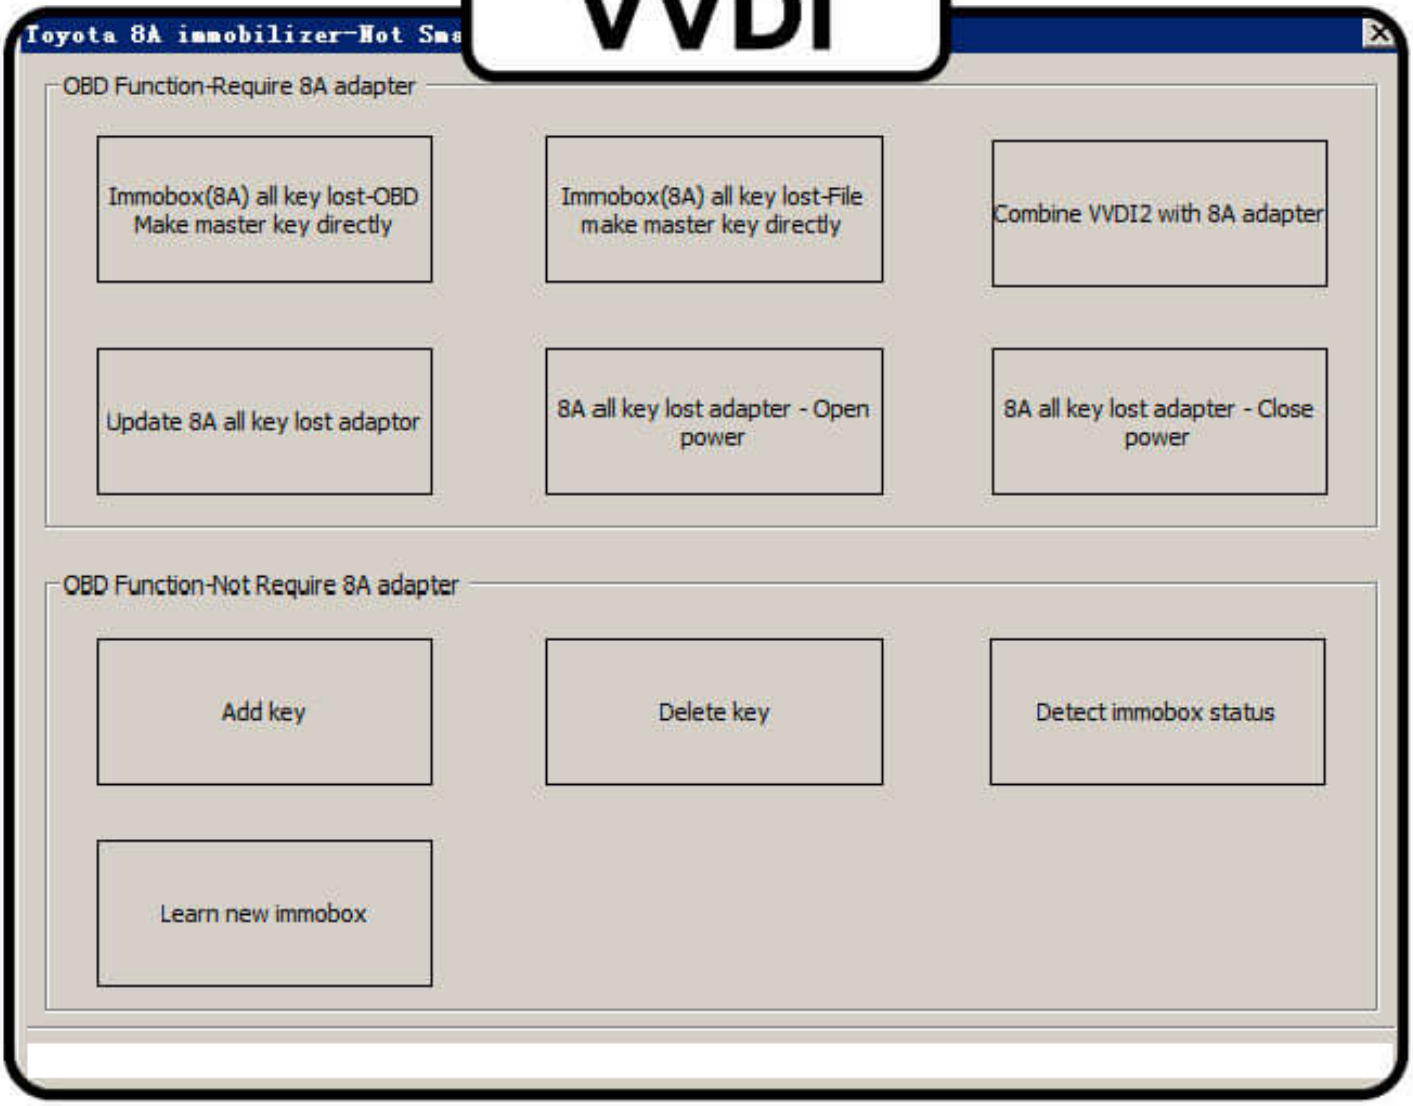
Toyota 8A immobilizer-Not Sma
OBD Function-Require 8A adapter
Immobox(8A) all key lost-OBD Make master key directly
Immobox(8A) all key lost-File make master key directly
Combine VVDI2 with 8A adapter
Update 8A all key lost adaptor
8A all key lost adapter - Open power
8A all key lost adapter - Close power
OBD Function-Not Require 8A adapter
Add key
Delete key
Detect immobox status
Learn new immobox

KEY TOOL MAX &MINI OBD

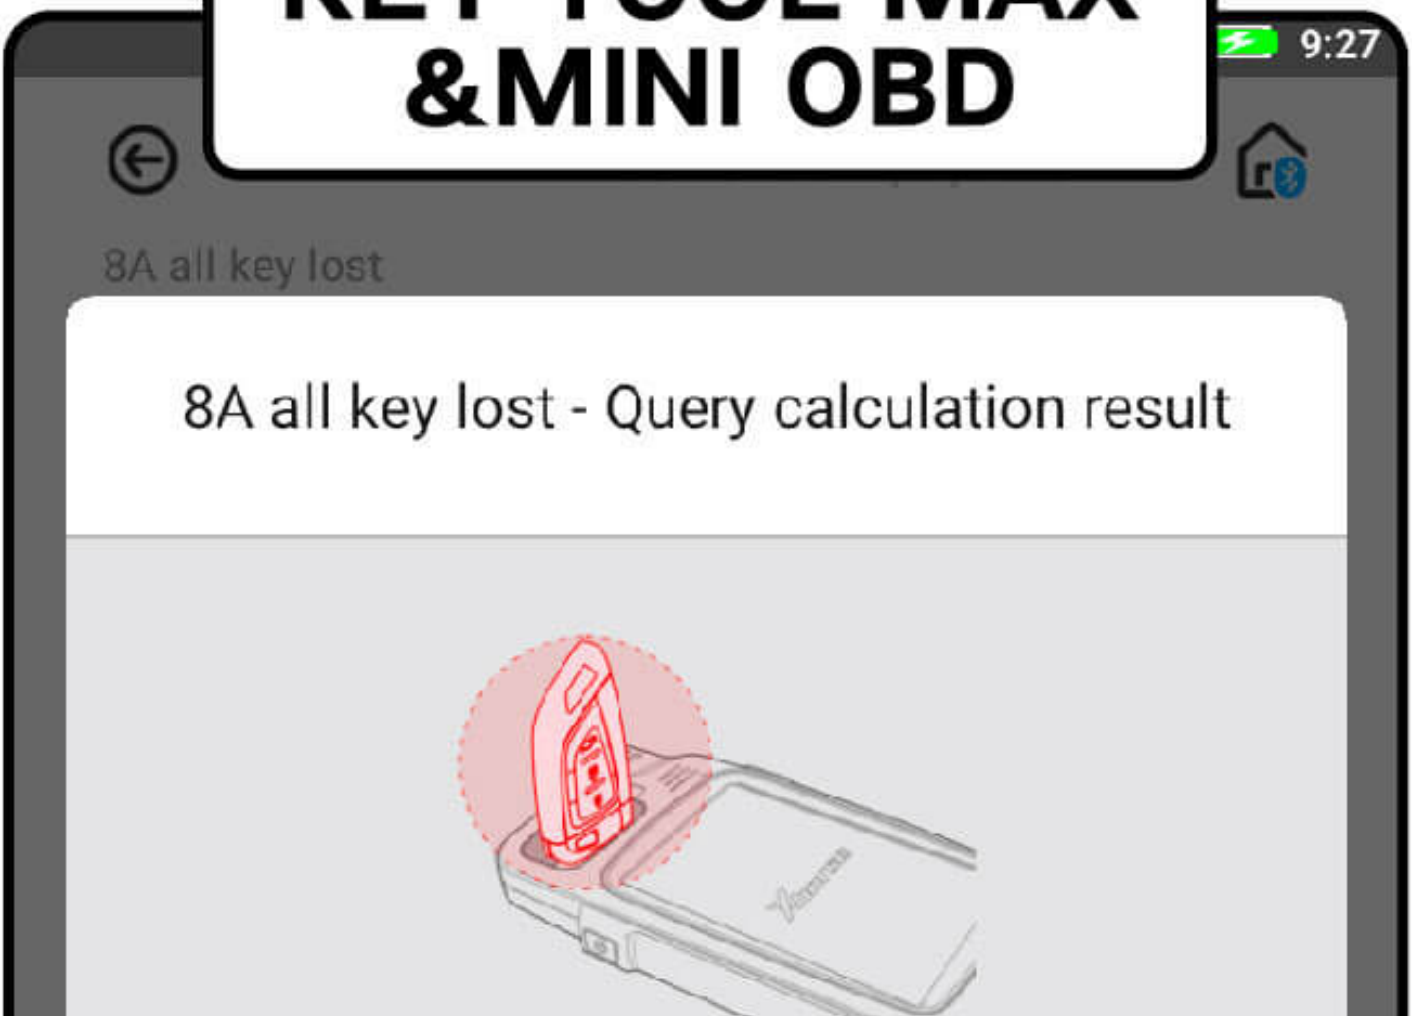
9:27
8A all key lost
8A all key lost - Query calculation result

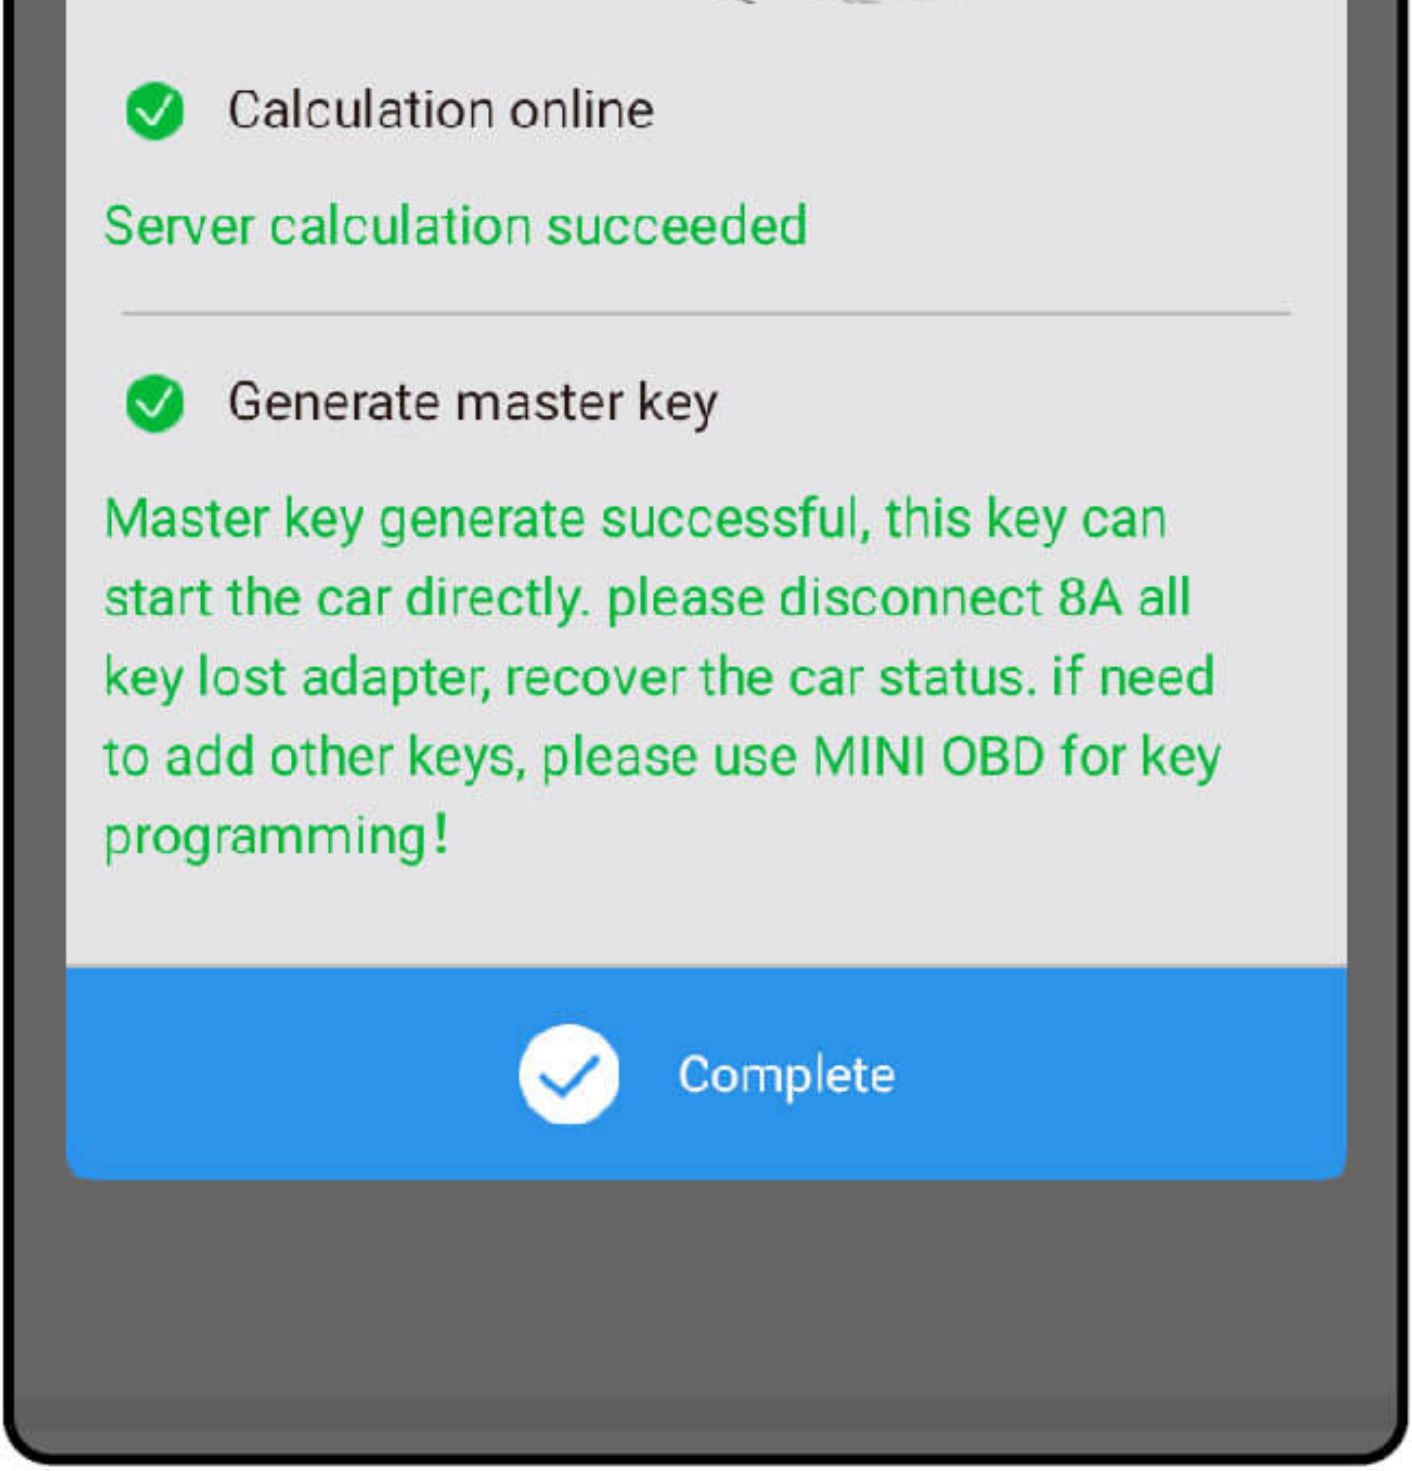

✓ Calculation online

Server calculation succeeded

✓ Generate master key

Master key generate successful, this key can start the car directly. please disconnect 8A all key lost adapter, recover the car status. if need to add other keys, please use MINI OBD for key programming!

⑥ Please disconnect all cables,recover all connection wires as car original status

If the connection wires not recovery to original status and start the car directly, the fuse boxe and device will be burnt

⑦ Test generated transponder

Toyota HILUX

Support more models

Toyota Camry、Prado、Levin、RAV、REIZ etc.,

VVDI

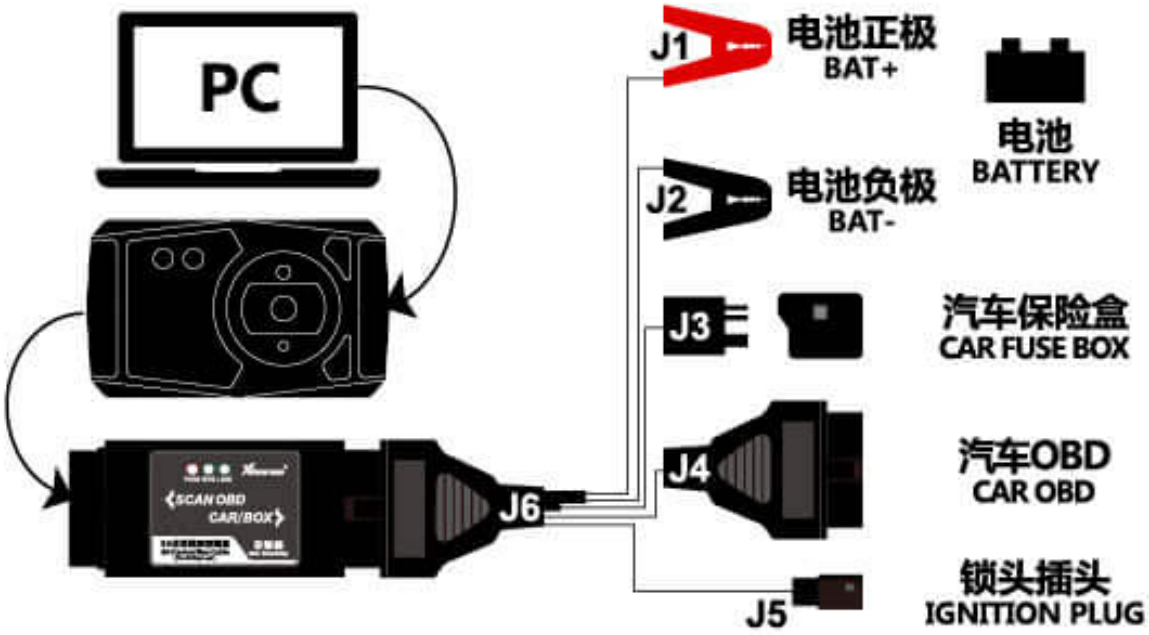
PC
J1
电池正极
BAT+
电池
BATTERY
J2
电池负极
BAT-
J3
汽车保险盒
CAR FUSE BOX
J4
汽车OBD
CAR OBD
J5
锁头插头
IGNITION PLUG
J6
SCAN OBD
CAR/BOX

KEY TOOL MAX & MINI OBD

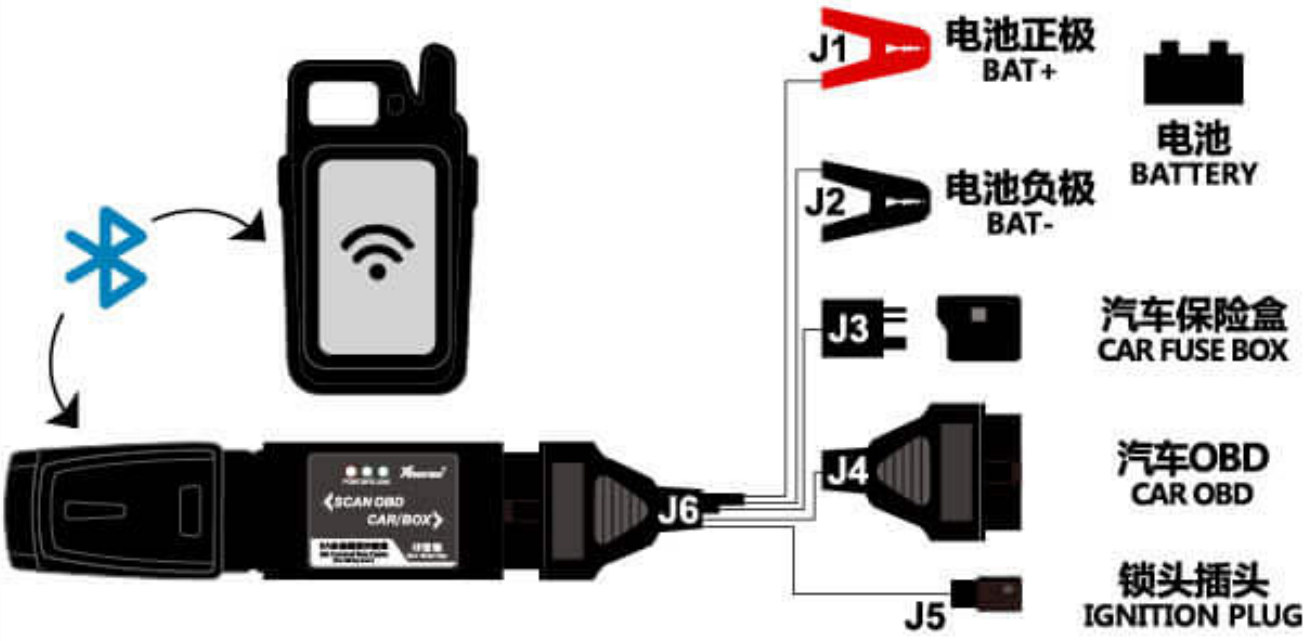
J1
电池正极
BAT+
电池
BATTERY
J2
电池负极
BAT-
J3
汽车保险盒
CAR FUSE BOX
J4
汽车OBD
CAR OBD
J5
锁头插头
IGNITION PLUG
J6
SCAN OBD
CAR/BOX

ⓘ Please update device to latest version for this function

During the process don't insert the key, please keep ignition off

① Disconnect the positive pole of the car battery to protect the connector and avoid short circuits

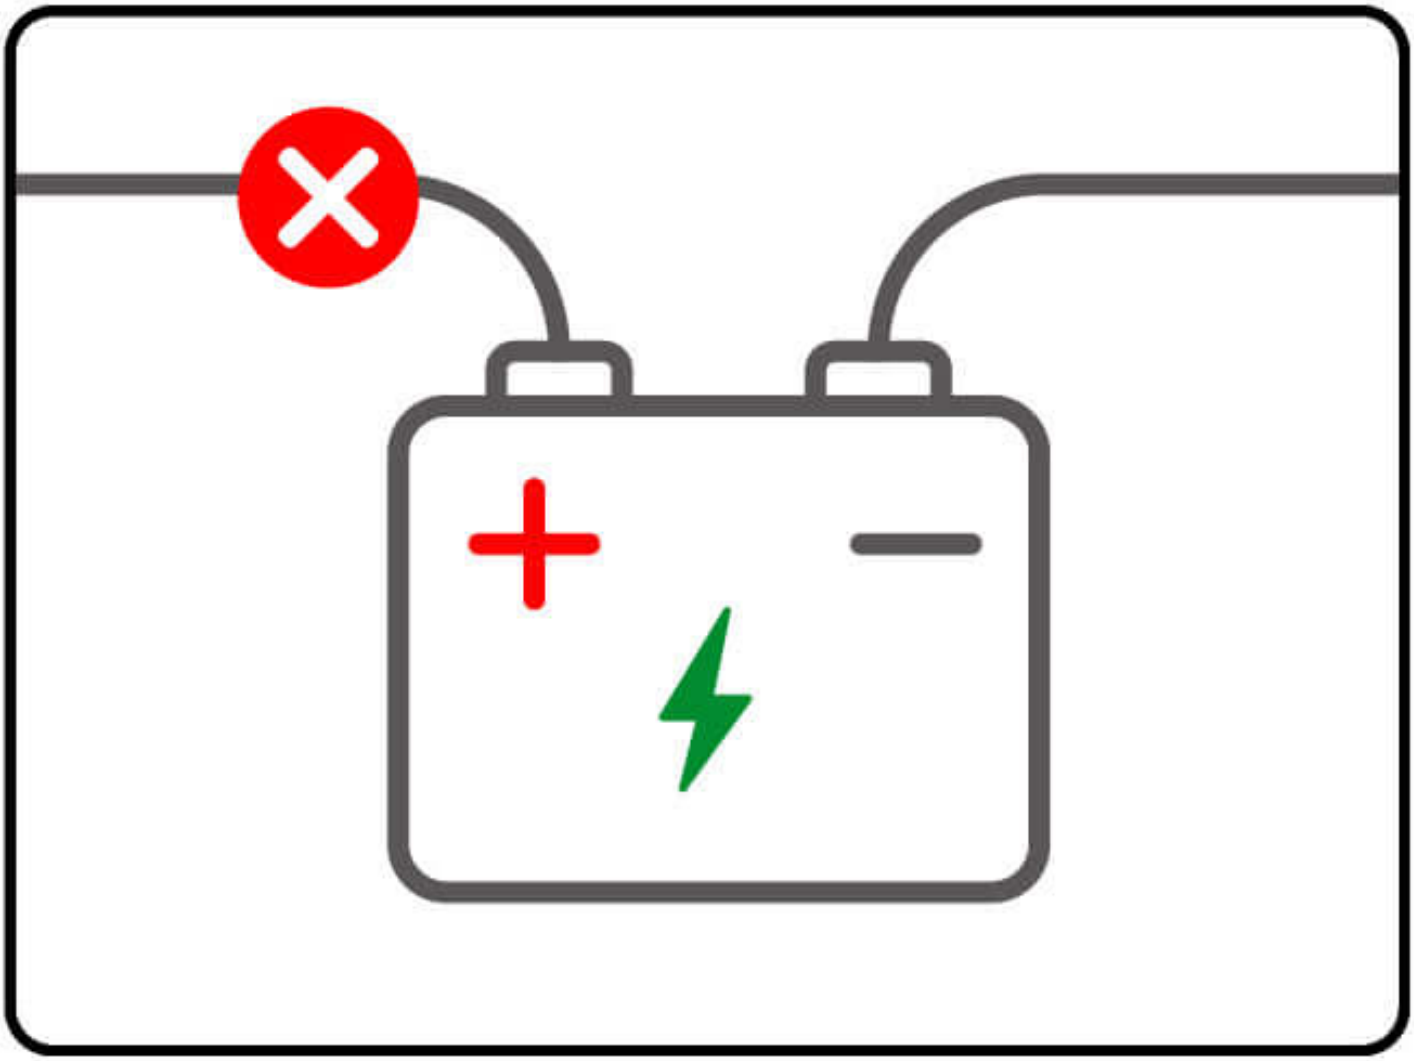

② Please connect to fuse box as the image

Located at engineer right side

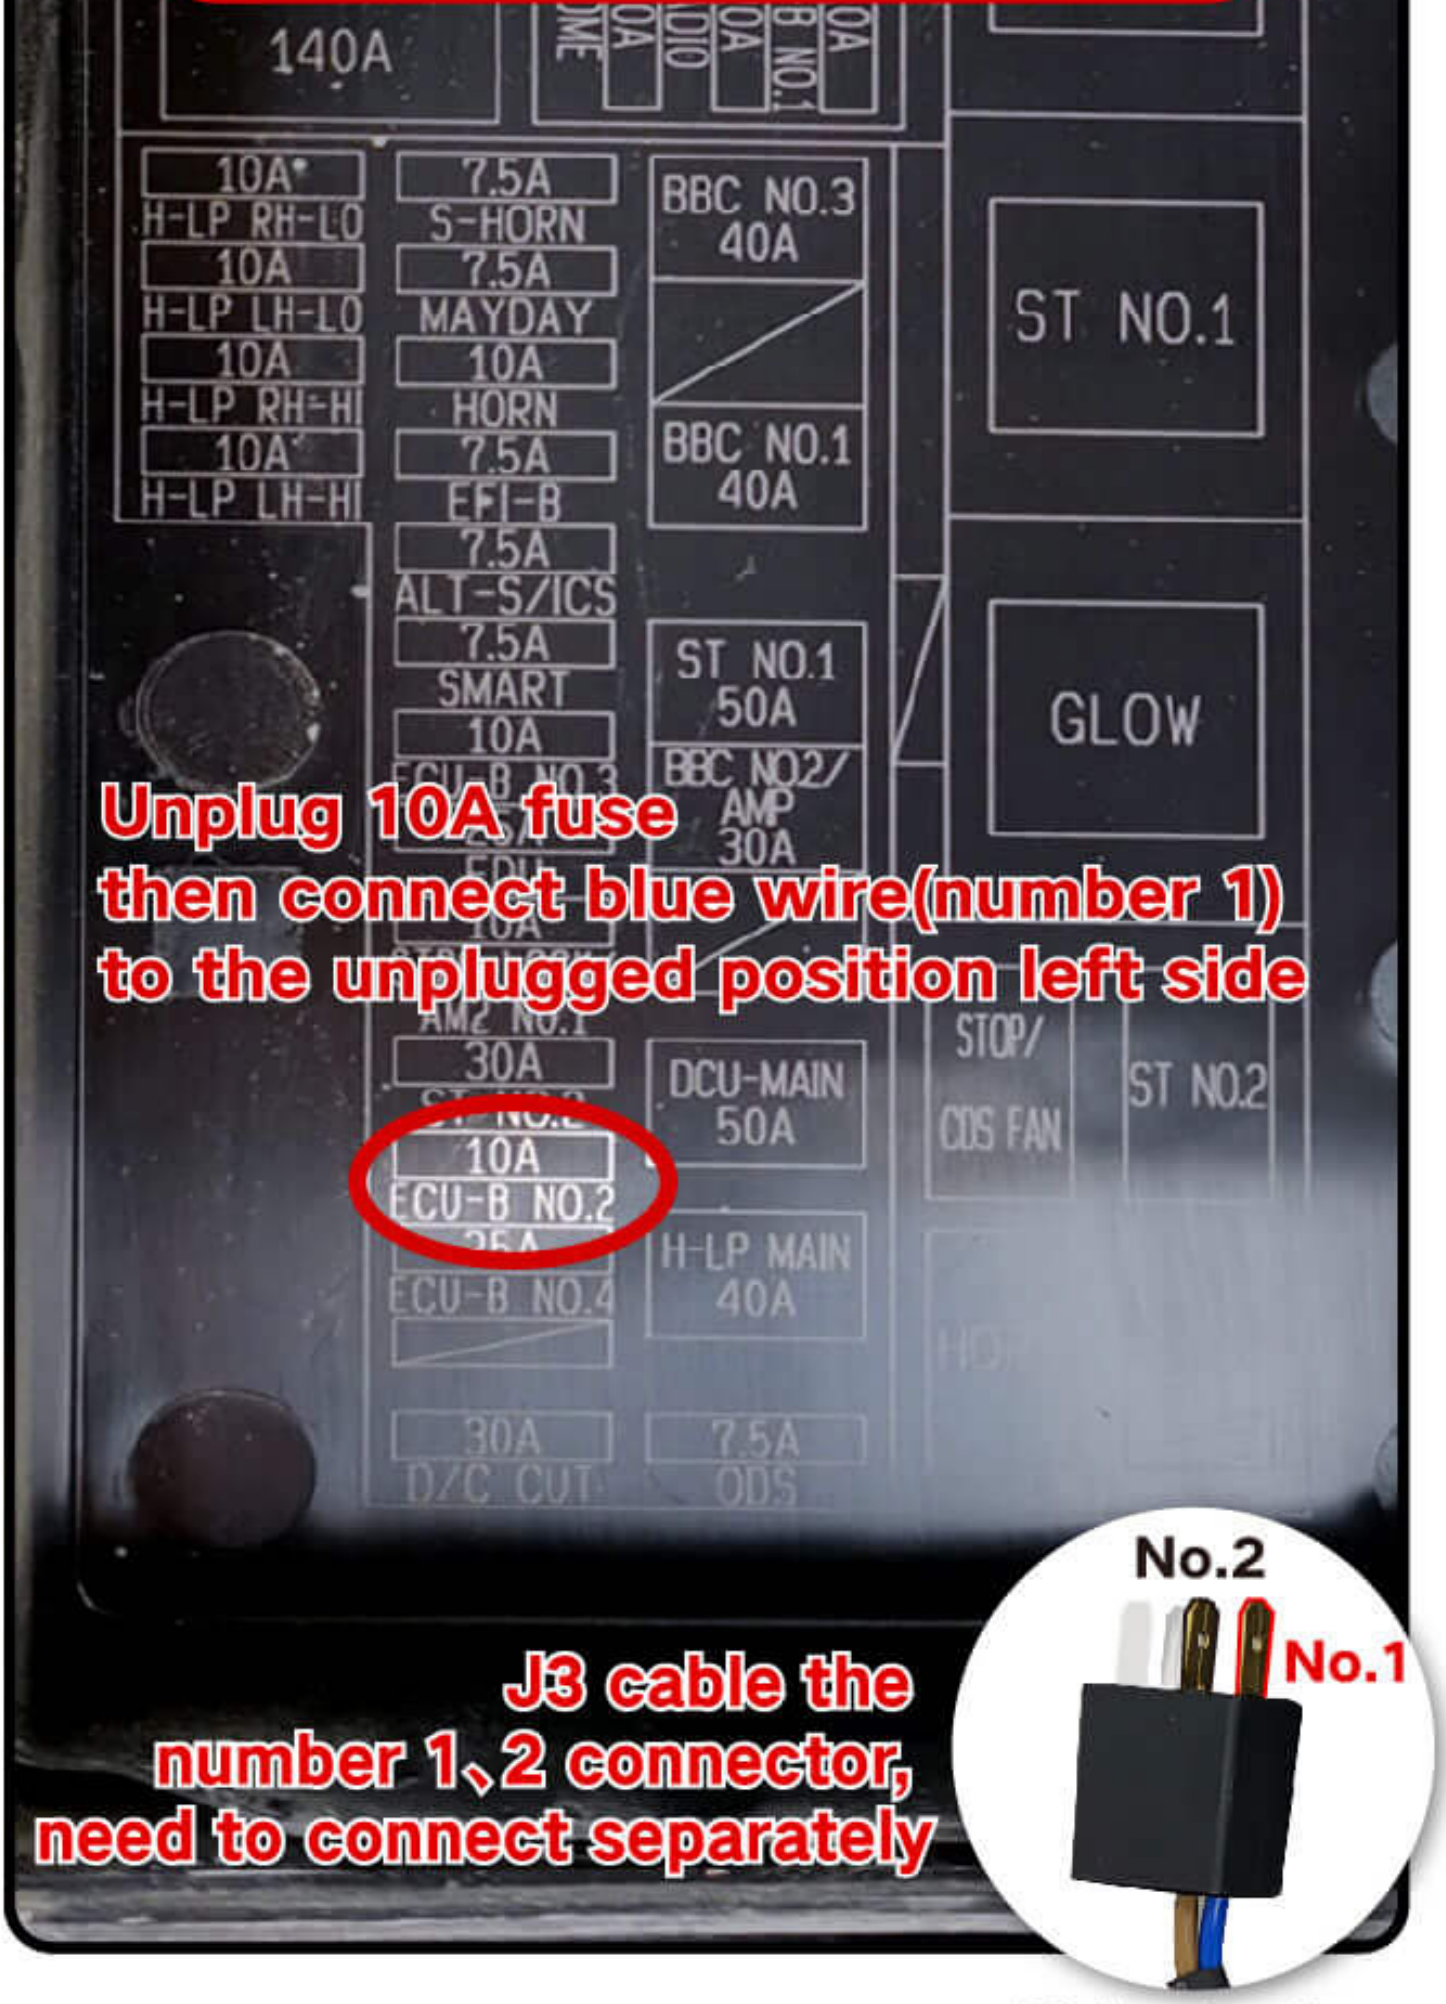
140A
10A
H-LP RH-LO
10A
H-LP LH-LO
10A
H-LP RH-HI
10A
H-LP LH-HI
7.5A
S-HORN
7.5A
MAYDAY
10A
HORN
7.5A
EFI-B
7.5A
ALT-S/ICS
7.5A
SMART
10A
ECU-B NO.3
BBC NO.3
40A
BBC NO.1
40A
ST NO.1
50A
BBC NO2/
AMP
30A
ST NO.1
GLOW
30A
10A
ECU-B NO.2
ECU-B NO.4
DCU-MAIN
50A
STOP/
CDS FAN
ST NO2
H-LP MAIN
40A
30A
D/C CUT
7.5A
ODS
No.2
No.1

Unplug 10A fuse then connect blue wire(number 1) to the unplugged position left side

J3 cable the number 1、2 connector, need to connect separately

J3 lock plug

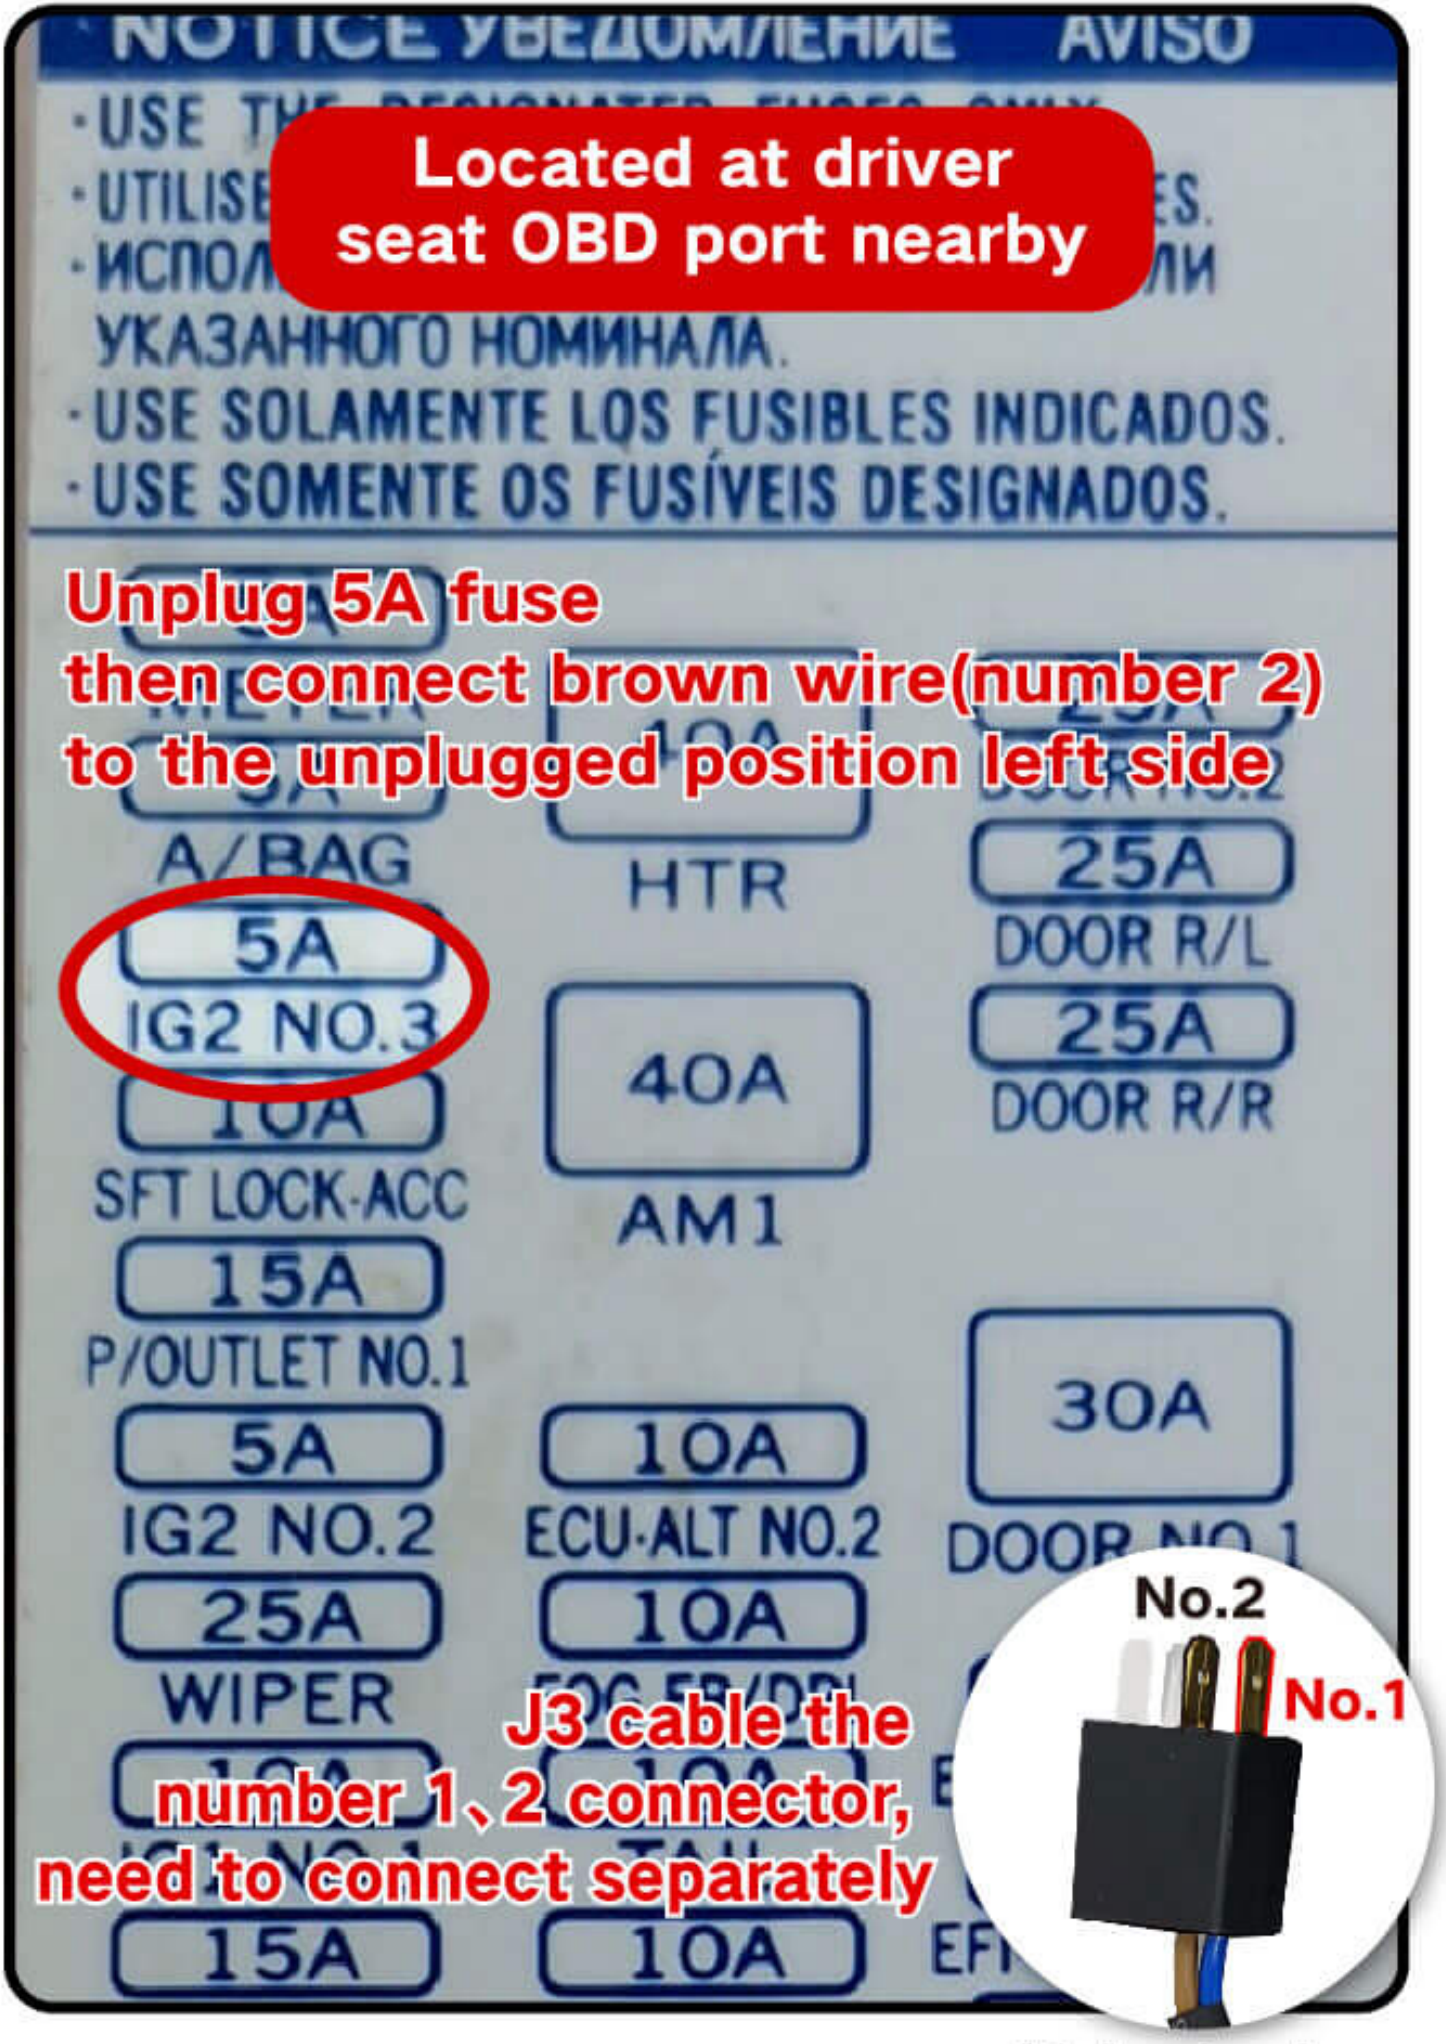
NOTICE УВЕДОМЛЕНИЕ AVISO
·USE TH
·UTILISE
ES.
·ИСПОЛ
ЛИ
УКАЗАННОГО НОМИНАЛА.
·USE SOLAMENTE LOS FUSIBLES INDICADOS.
·USE SOMENTE OS FUSÍVEIS DESIGNADOS.
5A
A/BAG
HTR
25A
DOOR R/L
5A
IG2 NO.3
40A
AM1
25A
DOOR R/R
10A
SFT LOCK-ACC
15A
P/OUTLET NO.1
30A
DOOR NO.1
5A
IG2 NO.2
10A
ECU-ALT NO.2
25A
WIPER
10A
15A
10A
No.2
No.1

Located at driver seat OBD port nearby

Unplug 5A fuse then connect brown wire(number 2) to the unplugged position left side

J3 cable the number 1、2 connector, need to connect separately

J3 lock plug

③ Please connect the ELV wires as shown

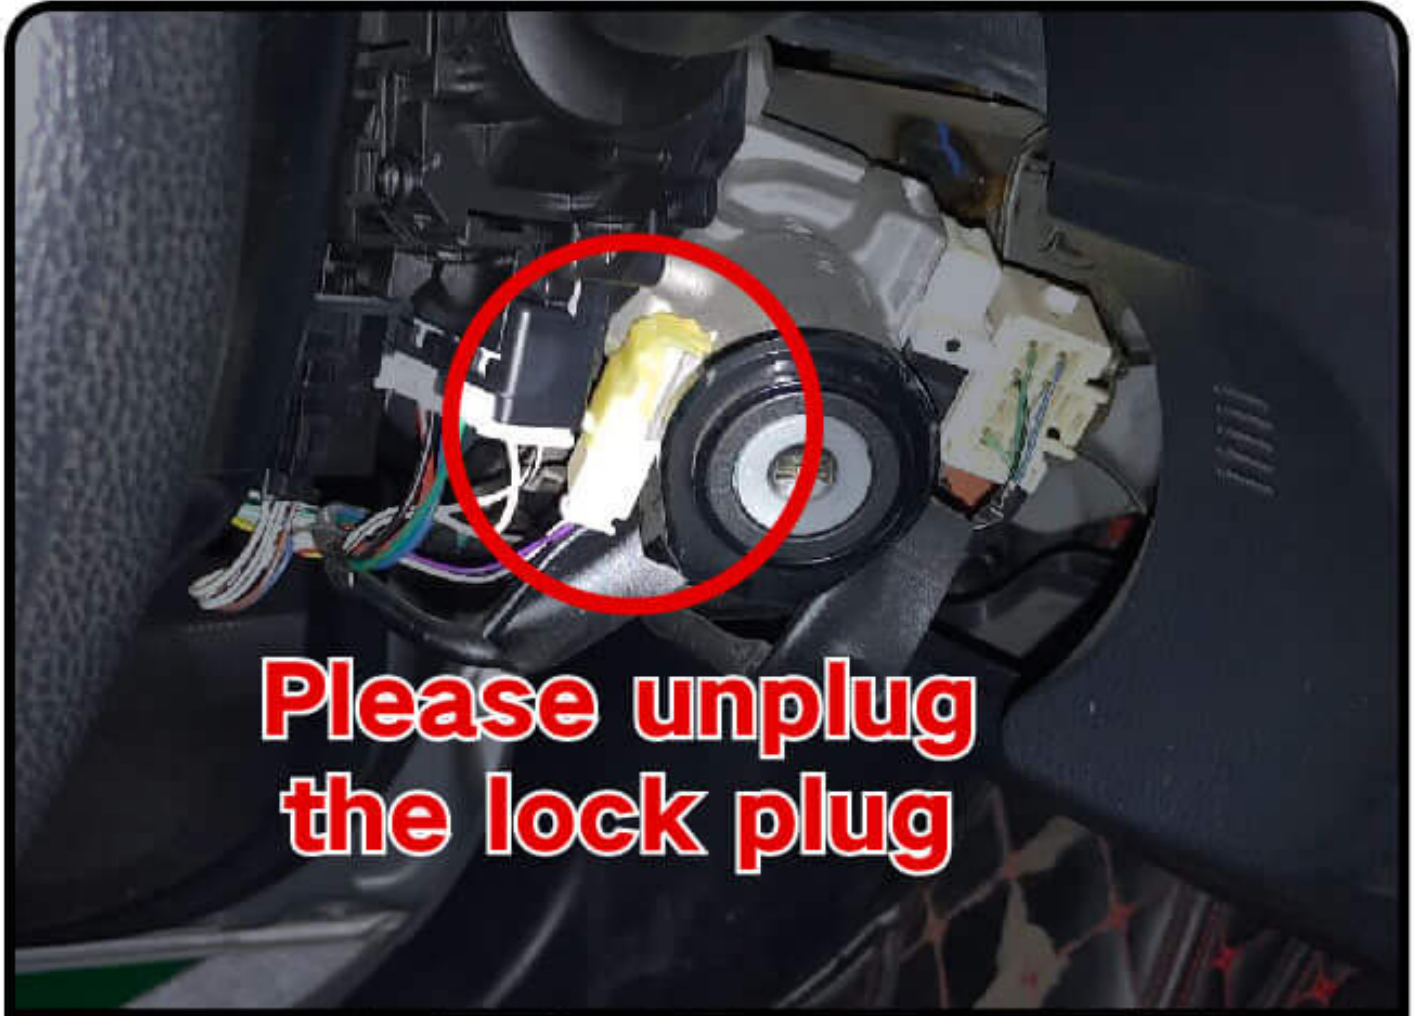

Please unplug the lock plug

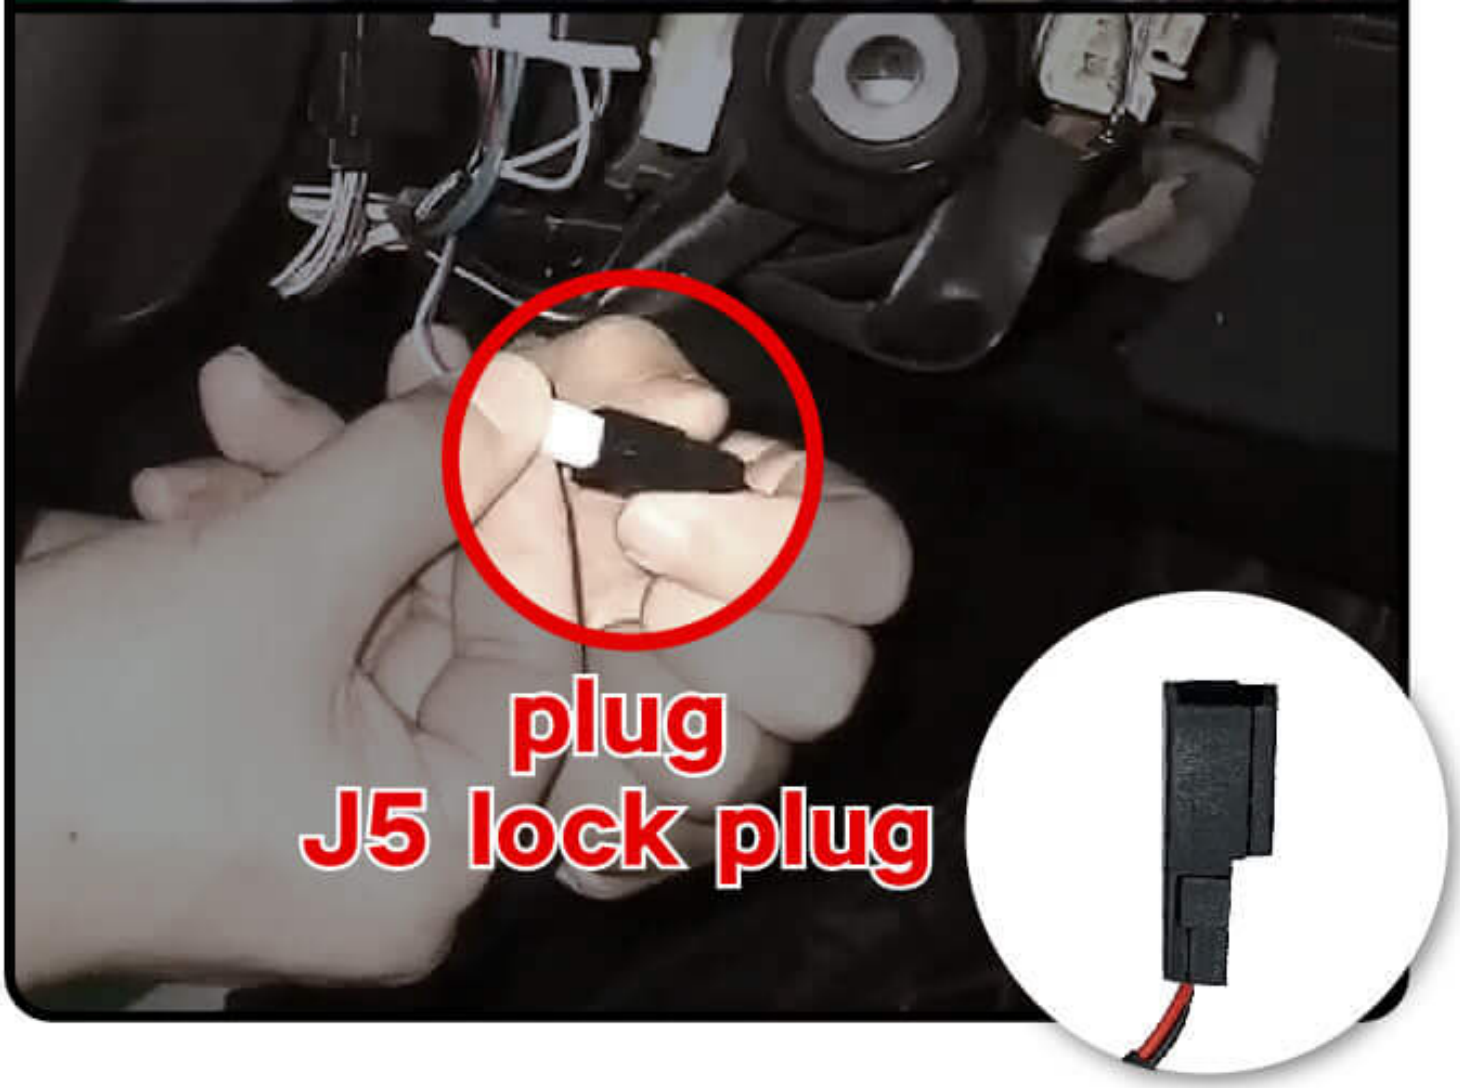

plug J5 lock plug

J5 lock plug

④ Please connect to car OBD,

all key lost cables and car battery

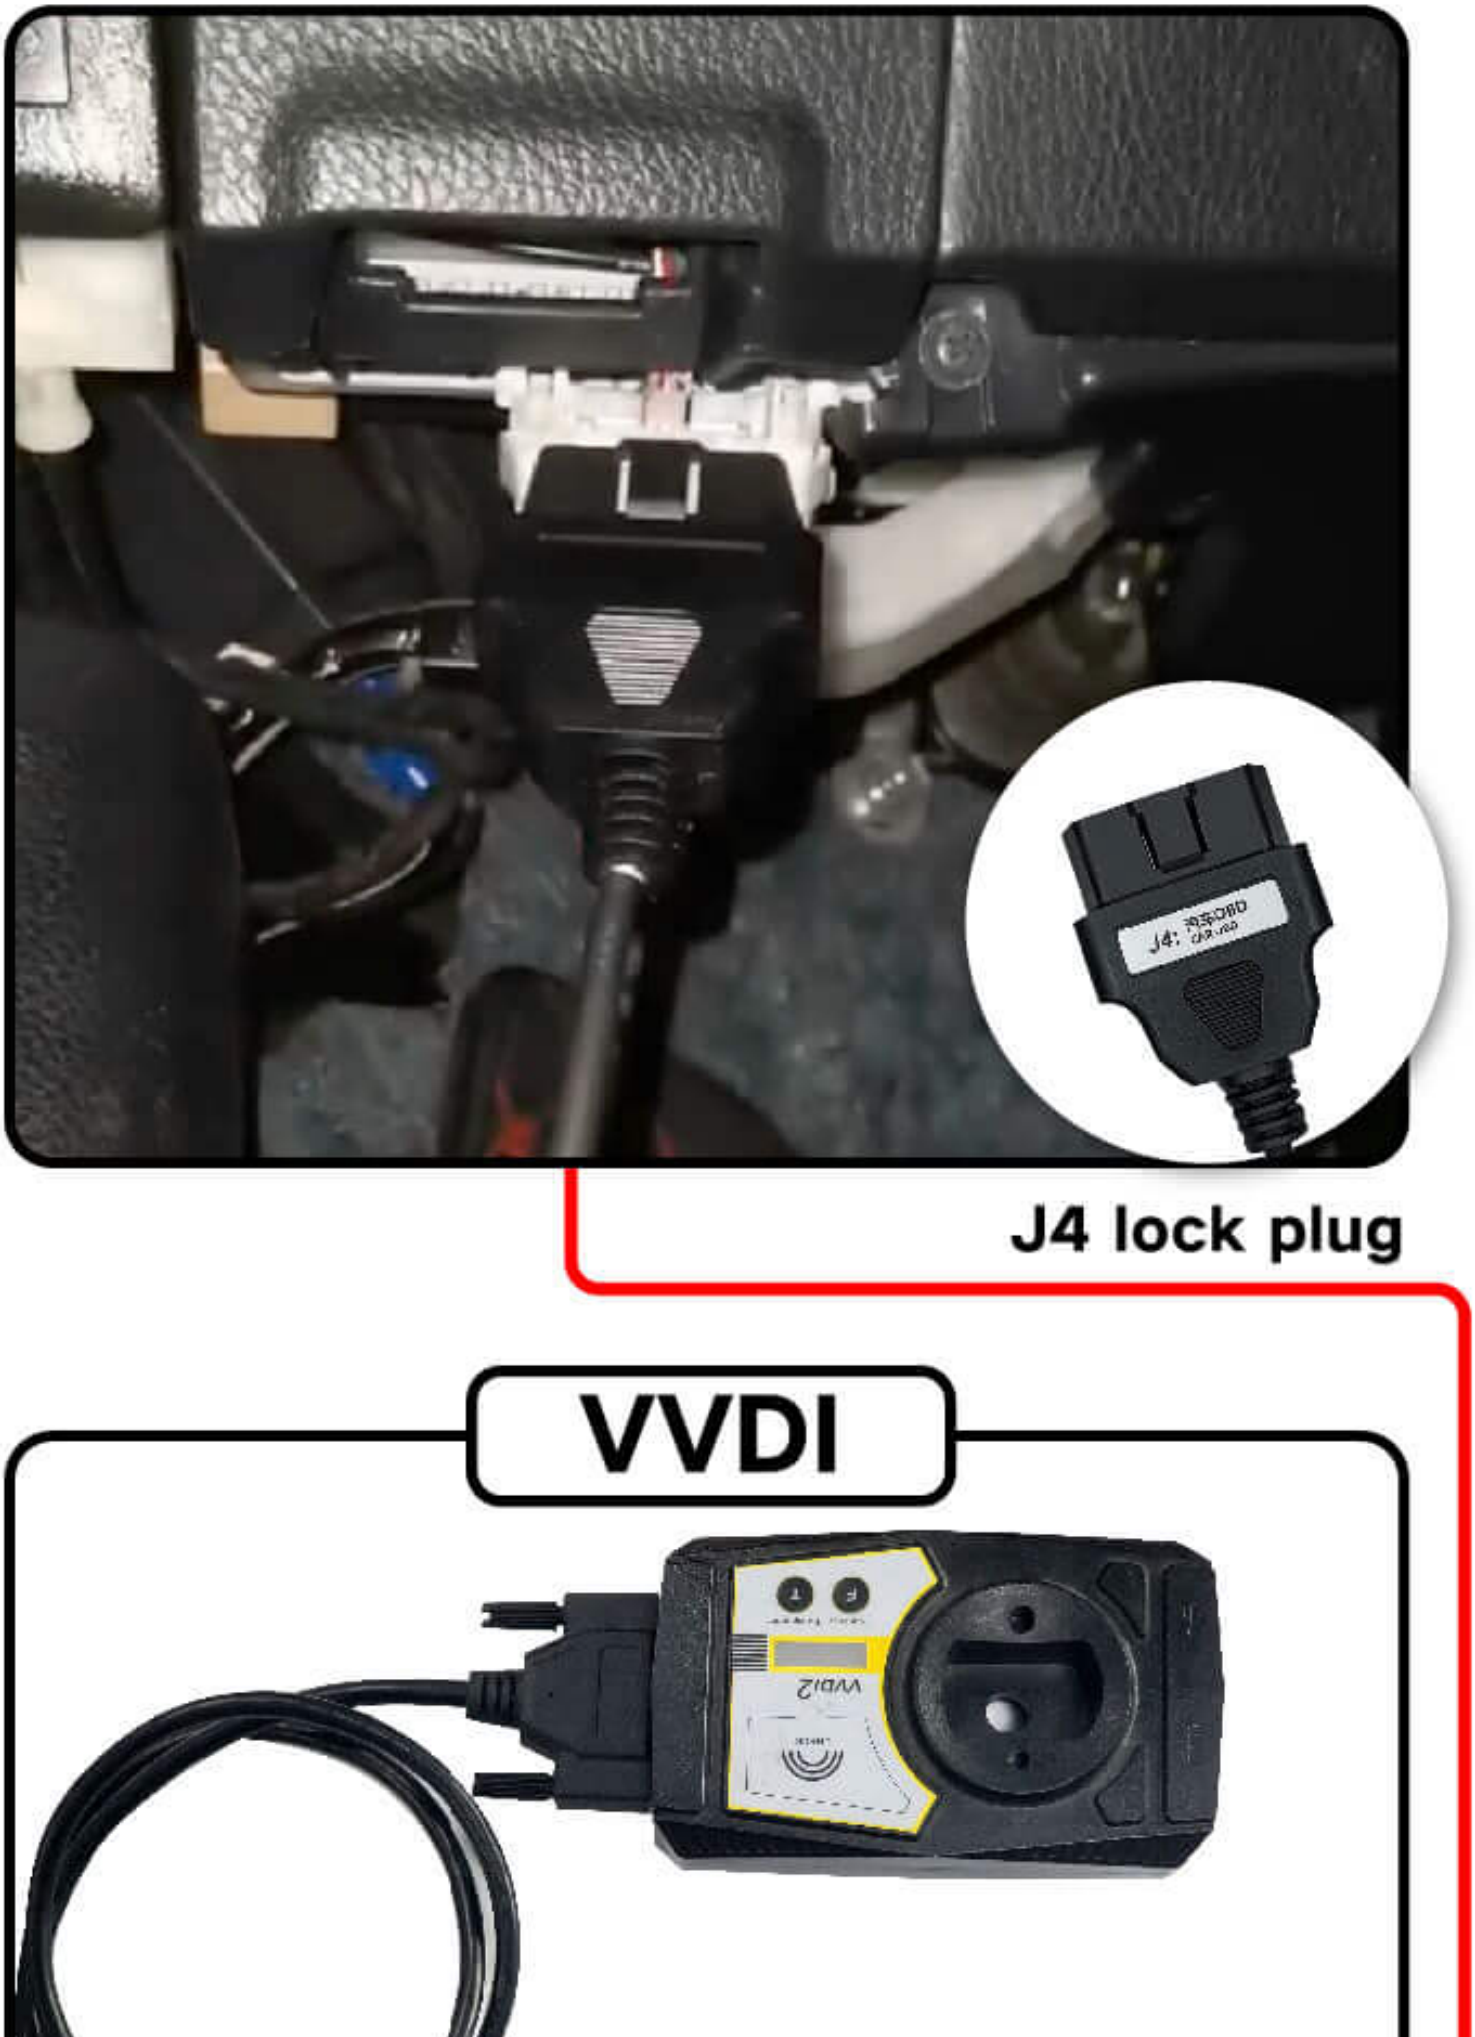
J4:
J4 lock plug
VVDI
VVDI2

J6 lock plug

KEY TOOL MAX &MINI OBD


J6 lock plug

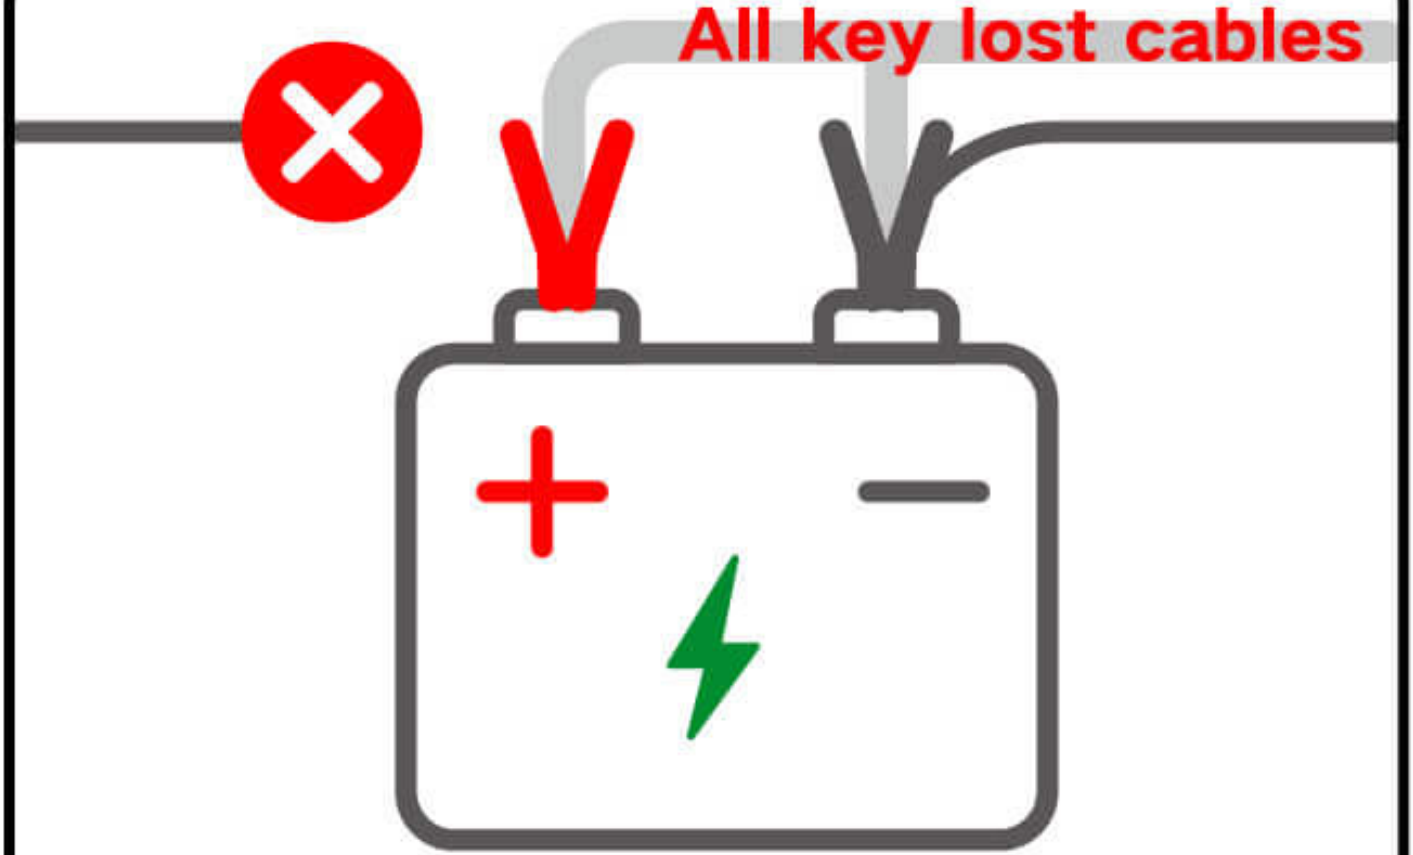
All key lost cables

⑤ Please generate start chip referring to software interface

VVDI

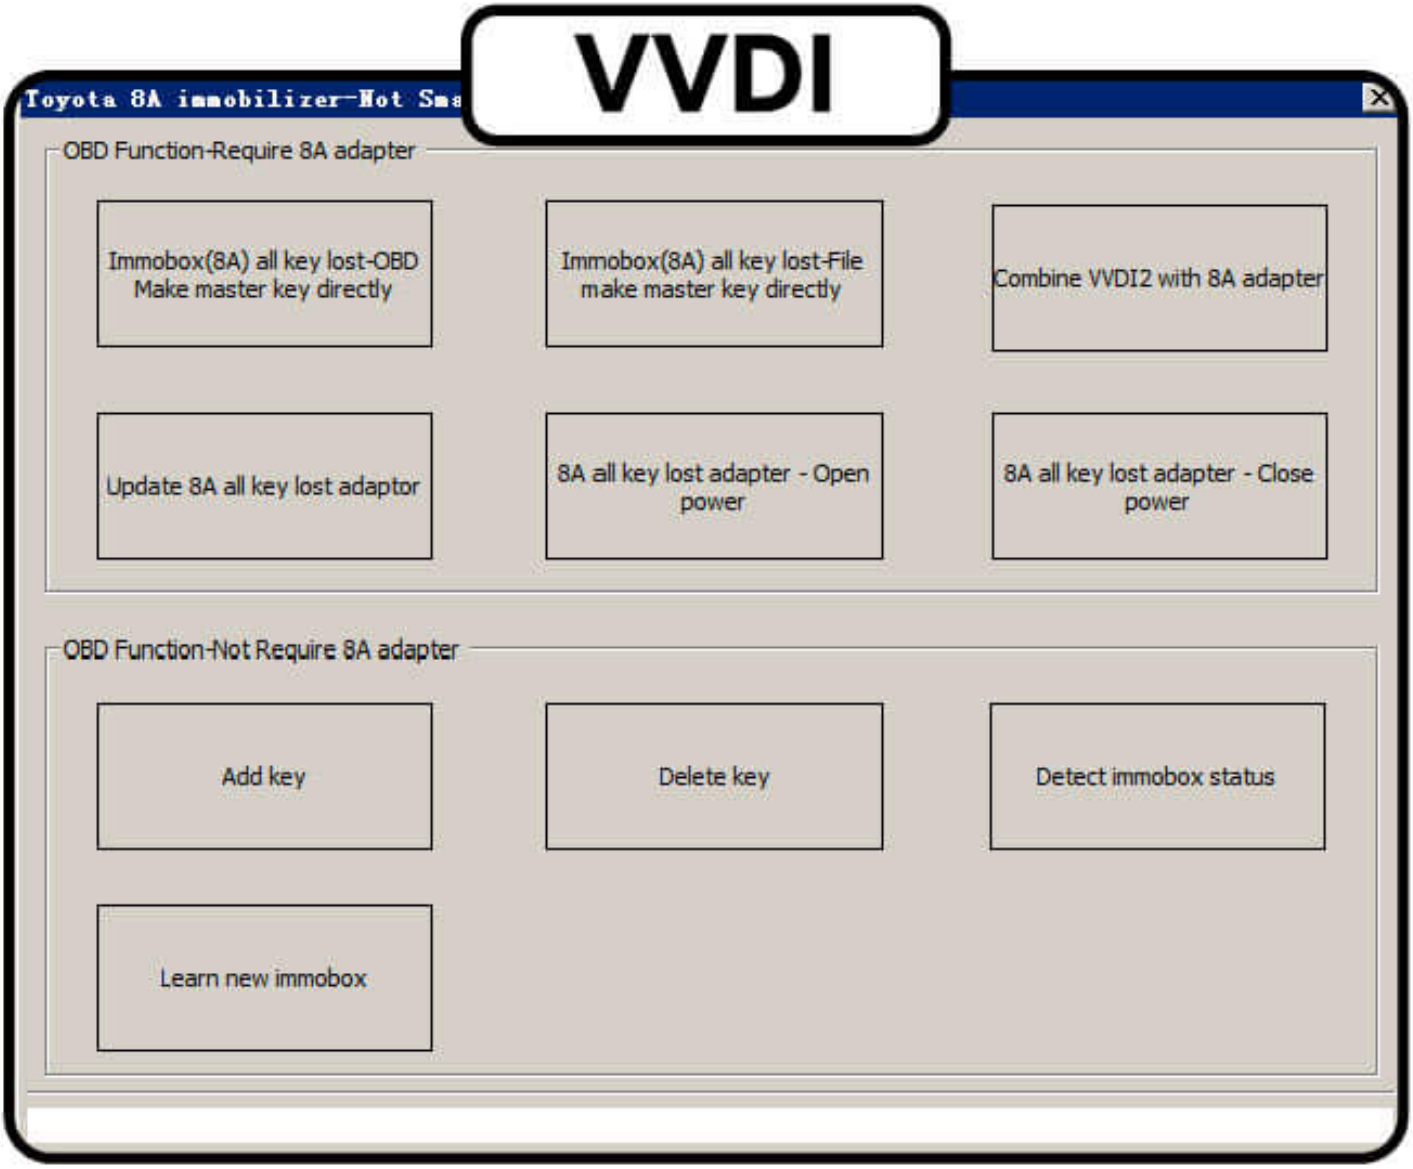
Toyota 8A immobilizer-Hot Sma
OBD Function-Require 8A adapter
Immobox(8A) all key lost-OBD Make master key directly
Immobox(8A) all key lost-File make master key directly
Combine VVDI2 with 8A adapter
Update 8A all key lost adaptor
8A all key lost adapter - Open power
8A all key lost adapter - Close power
OBD Function-Not Require 8A adapter
Add key
Delete key
Detect immobox status
Learn new immobox

KEY TOOL MAX &MINI OBD

9:27
8A all key lost

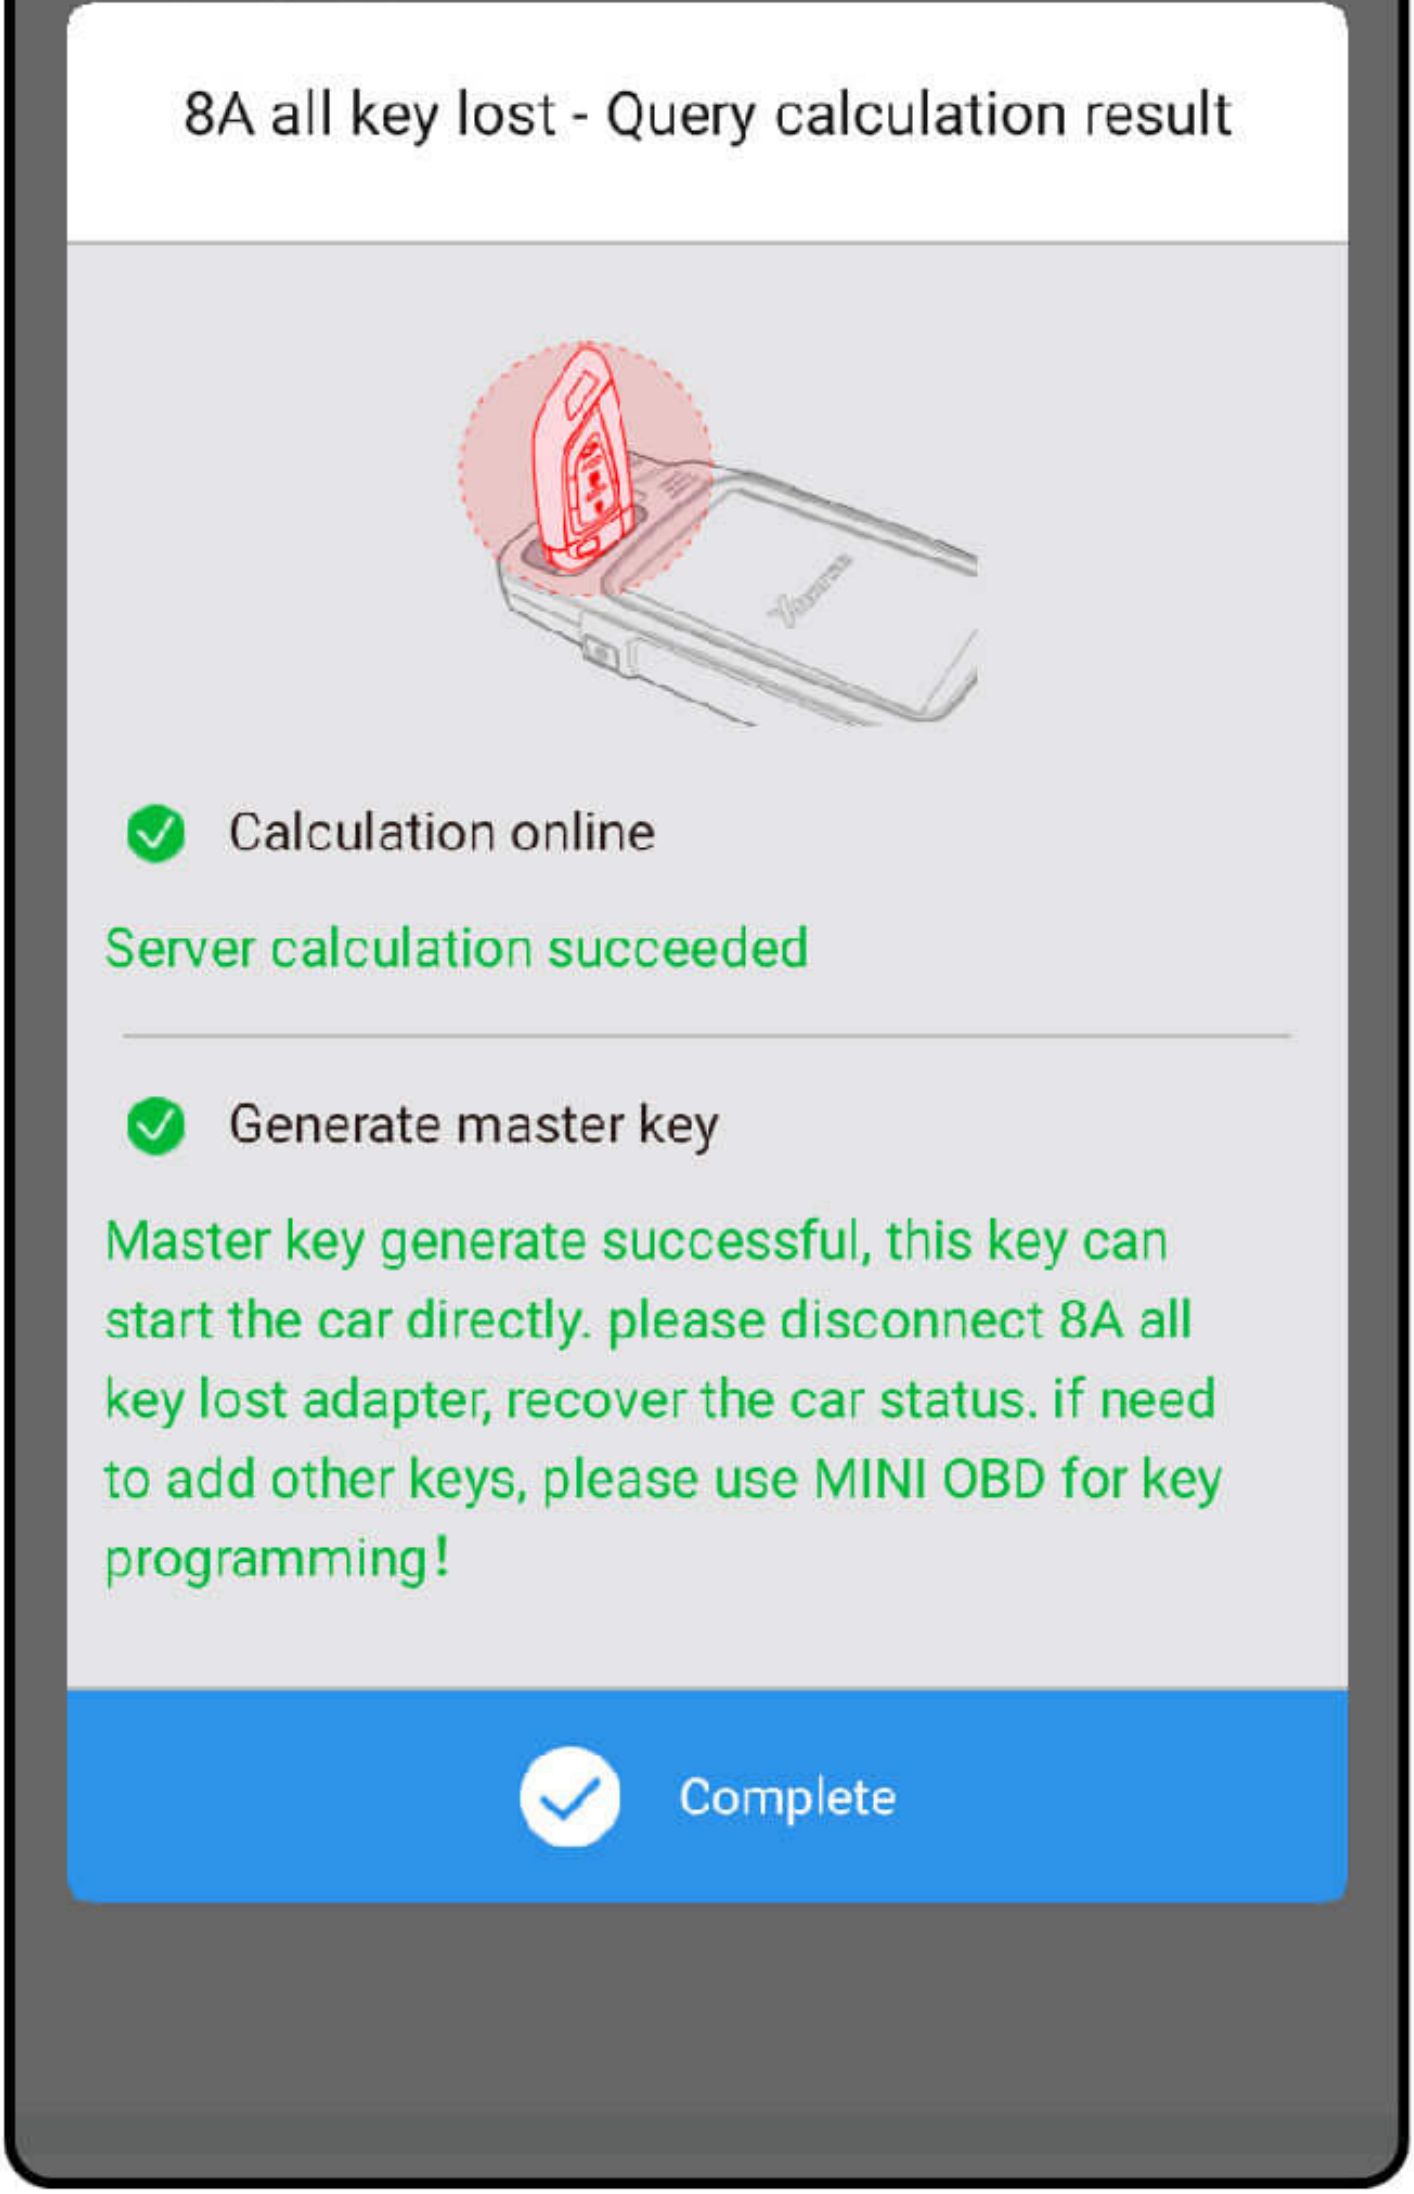

8A all key lost - Query calculation result

✓ Calculation online

Server calculation succeeded

✓ Generate master key

Master key generate successful, this key can start the car directly. please disconnect 8A all key lost adapter, recover the car status. if need to add other keys, please use MINI OBD for key programming!

⑥ Please disconnect all cables,recover all connection wires as car original status

If the connection wires not recovery to original status and start the car directly, the fuse boxe and device will be burnt

⑦ Test generated transponder

Toyota Corolla

Support more models

Toyota Camry、Prado、Levin、RAV etc.,

VVDI

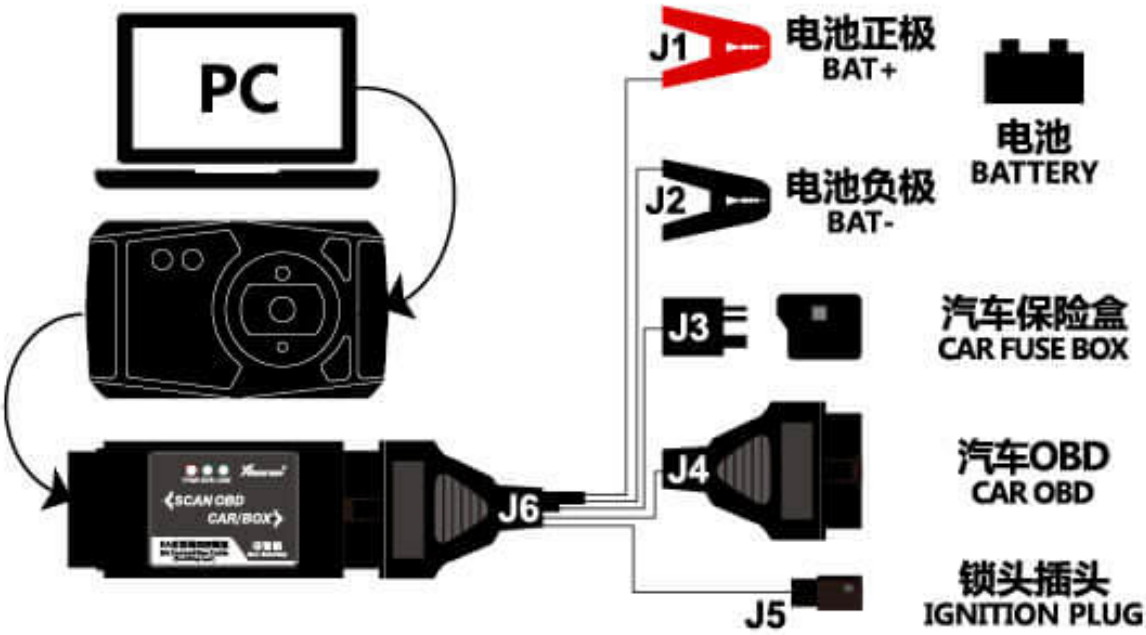
PC
SCAN OBD
CAR/BOX
J6
J1
电池正极
BAT+
电池
BATTERY
J2
电池负极
BAT-
J3
汽车保险盒
CAR FUSE BOX
J4
汽车OBD
CAR OBD
J5
锁头插头
IGNITION PLUG

KEY TOOL MAX & MINI OBD

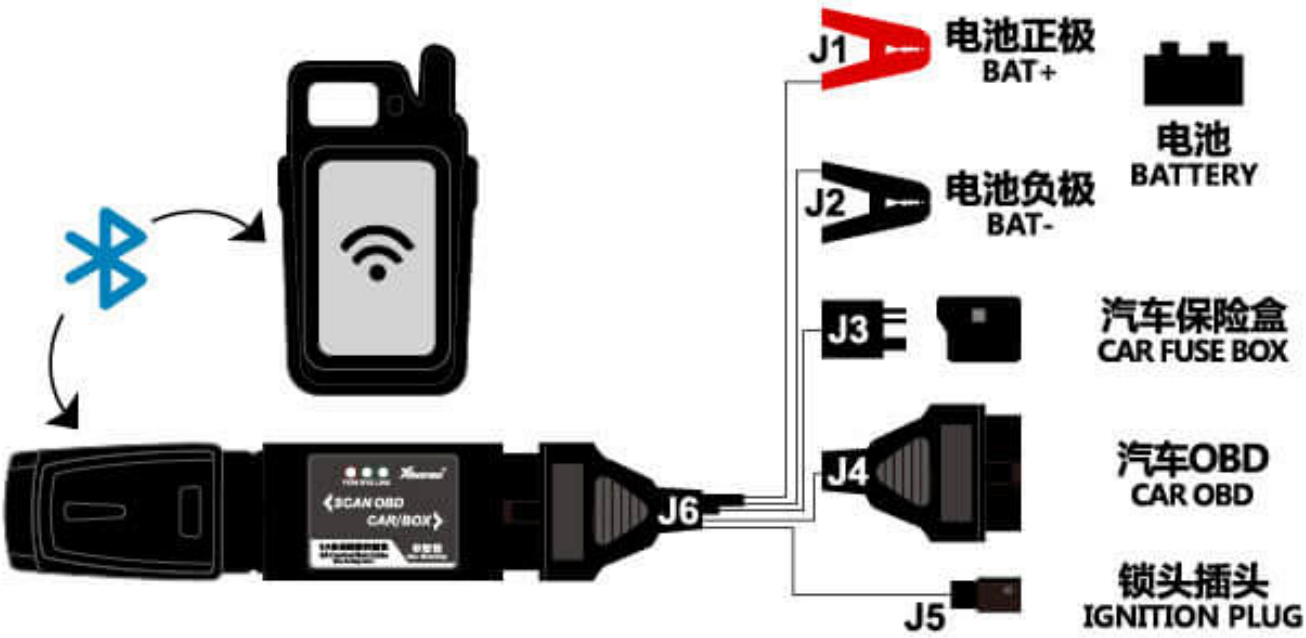
J1
电池正极
BAT+
电池
BATTERY
J2
电池负极
BAT-
J3
汽车保险盒
CAR FUSE BOX
J4
汽车OBD
CAR OBD
J5
锁头插头
IGNITION PLUG
J6
SCAN OBD
CAR/BOX

ⓘ Please update device to latest version for this function

During the process don't insert the key, please keep ignition off

① Disconnect the positive pole of the car battery to protect the connector and avoid short circuits

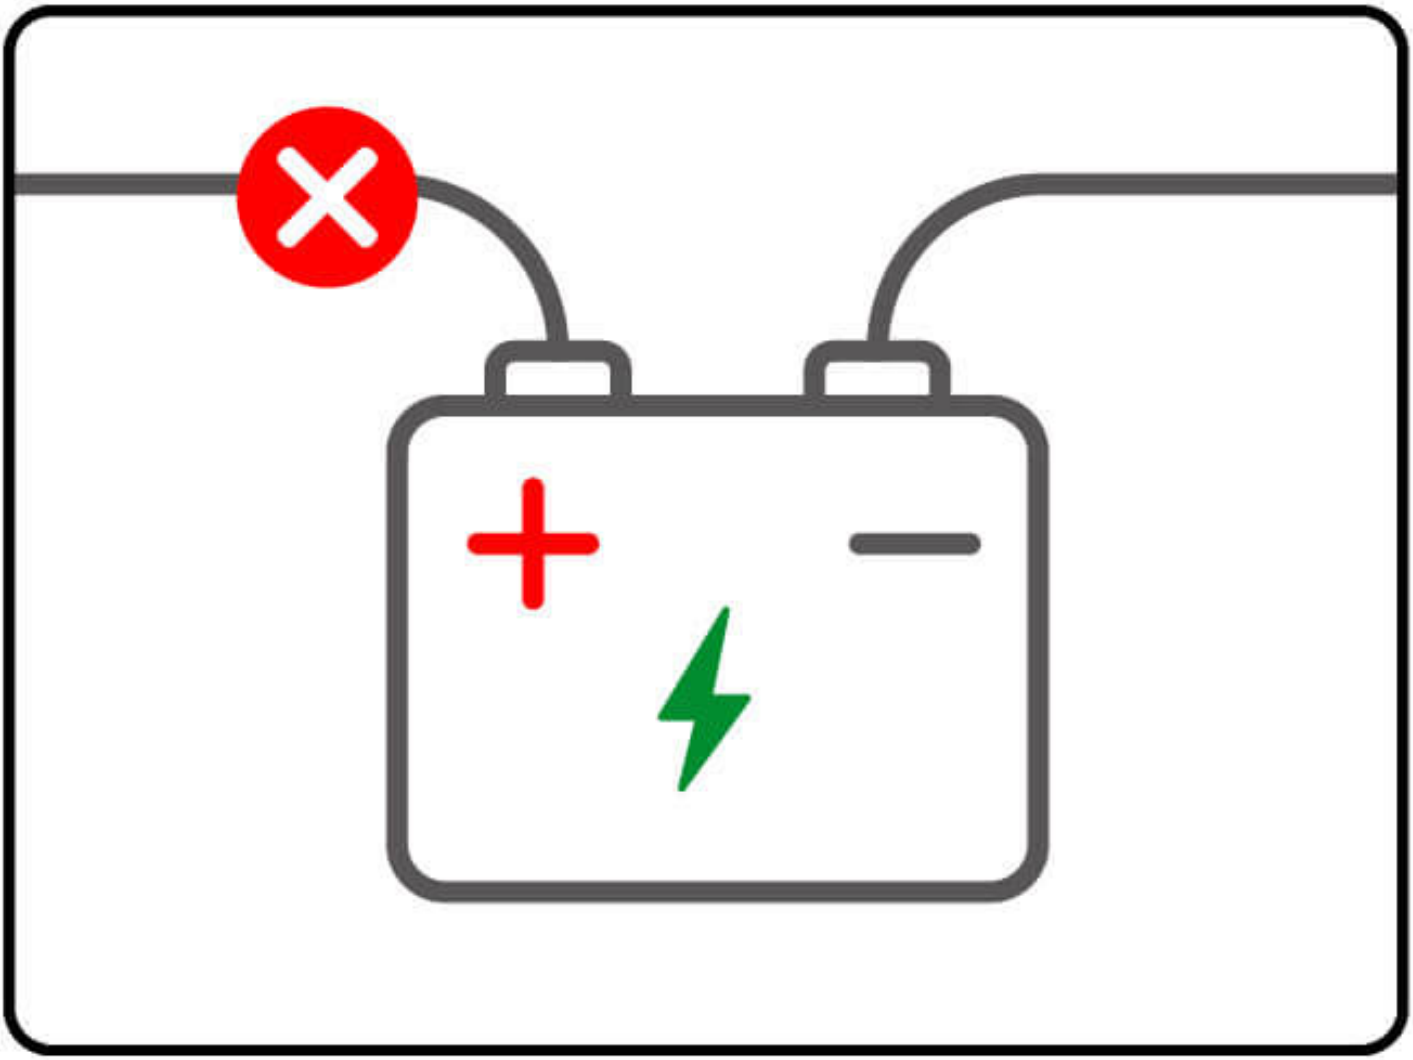

② Please connect to fuse box as the image

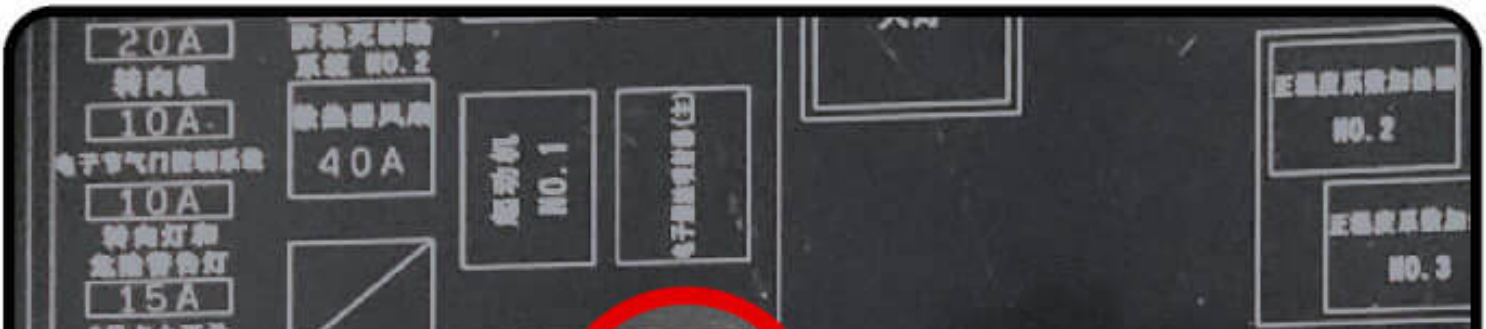
20A
NO.2
10A
40A
NO.1
10A
15A
NO.2
NO.3

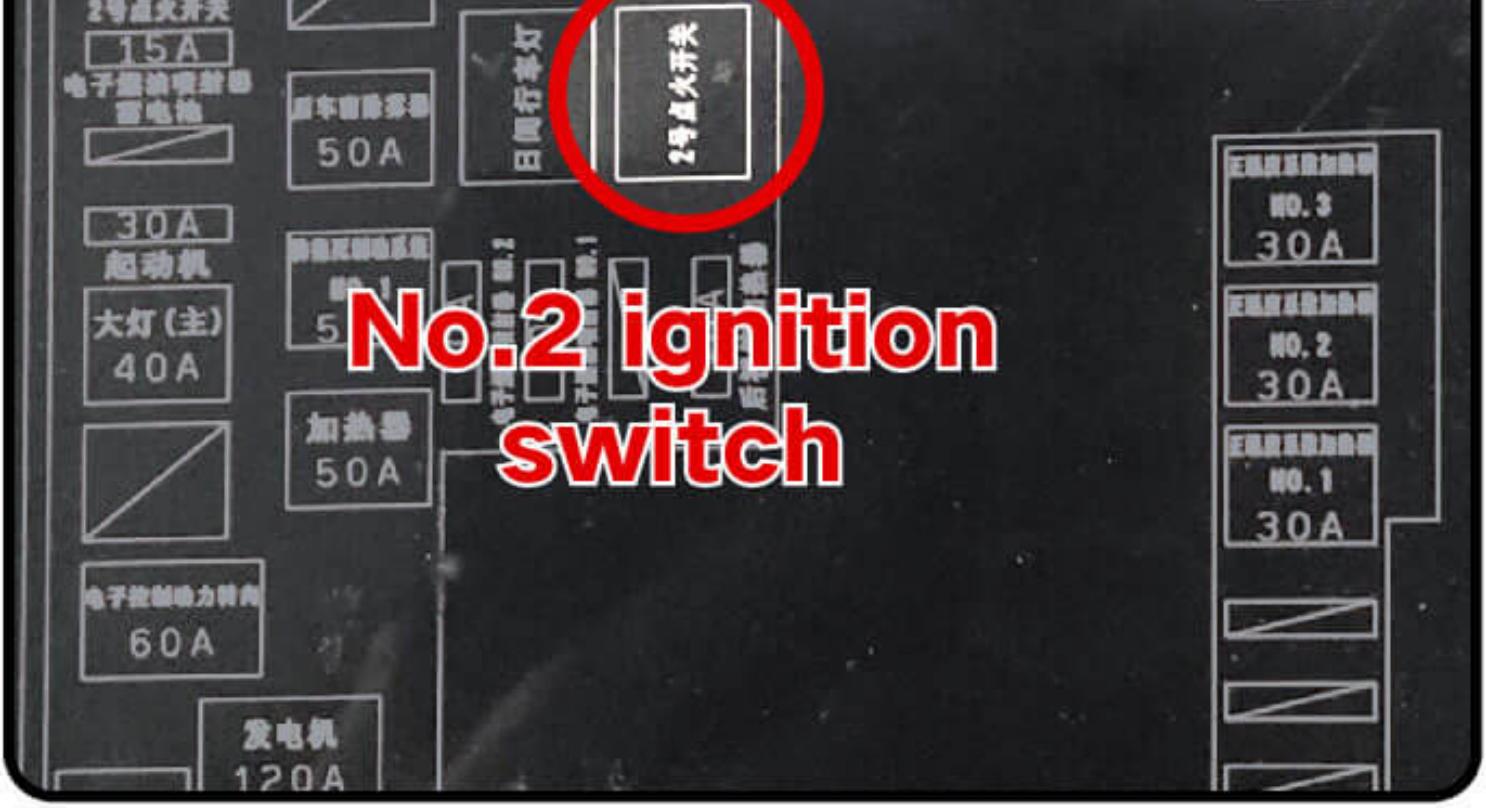
2号点火开关
15A
50A
日间行车灯
2号点火开关
30A
起动机
大灯(主)
40A
加热器
50A
电子控制助力转向
60A
发电机
120A
NO.3
30A
NO.2
30A
NO.1
30A
No.2 ignition switch

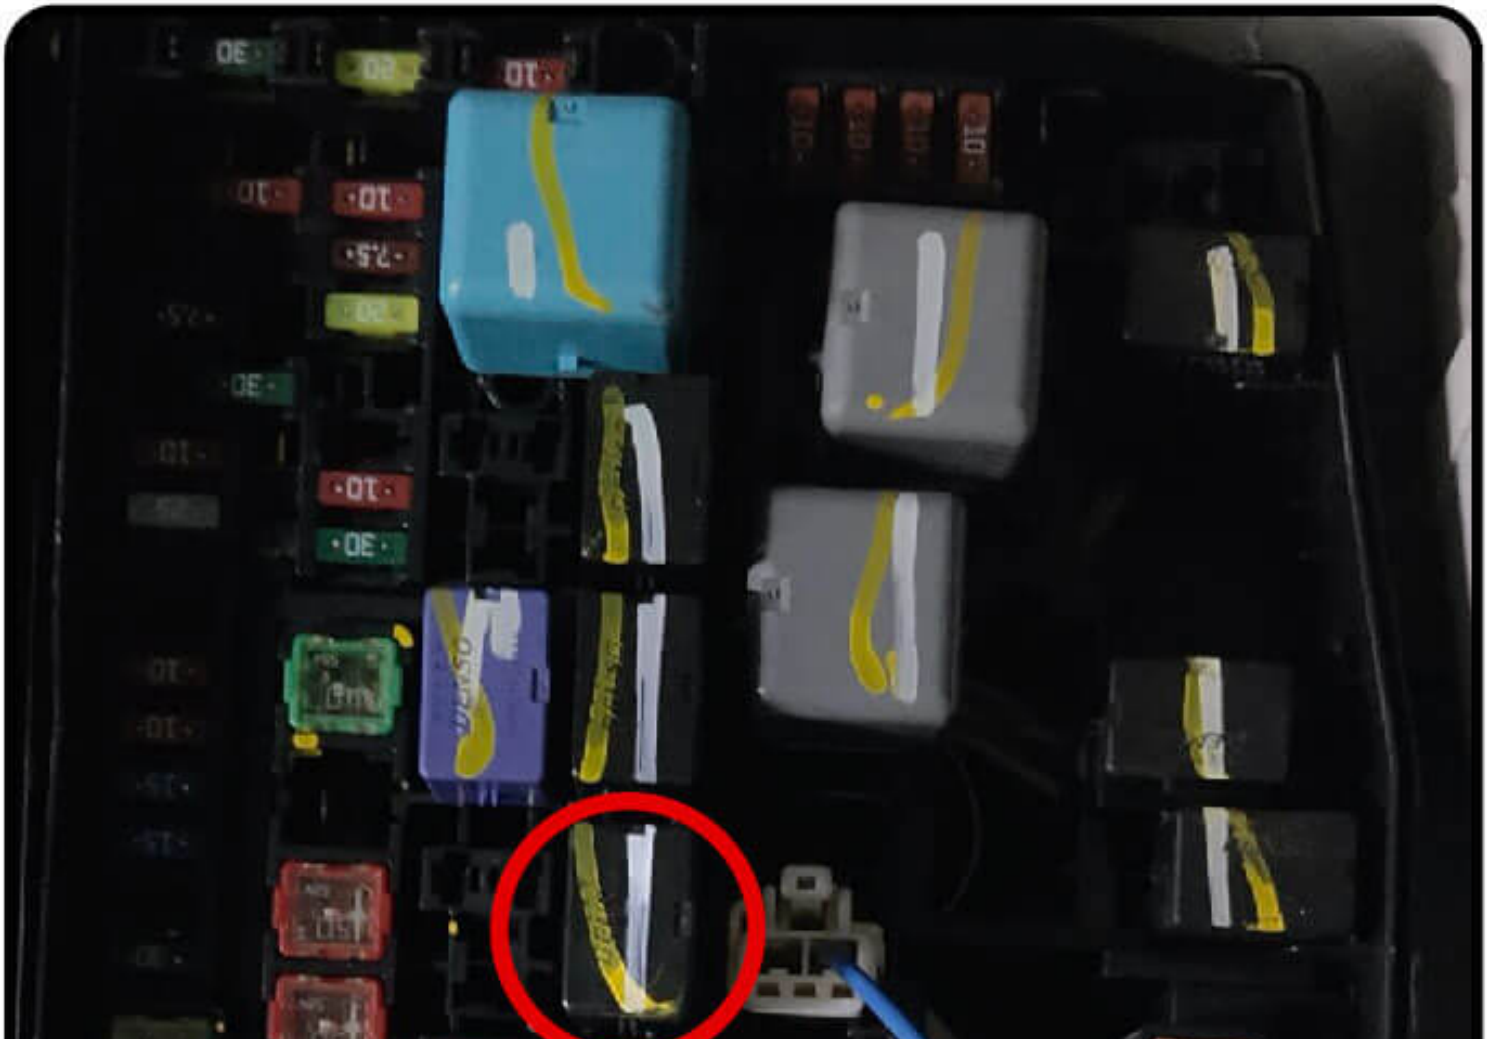

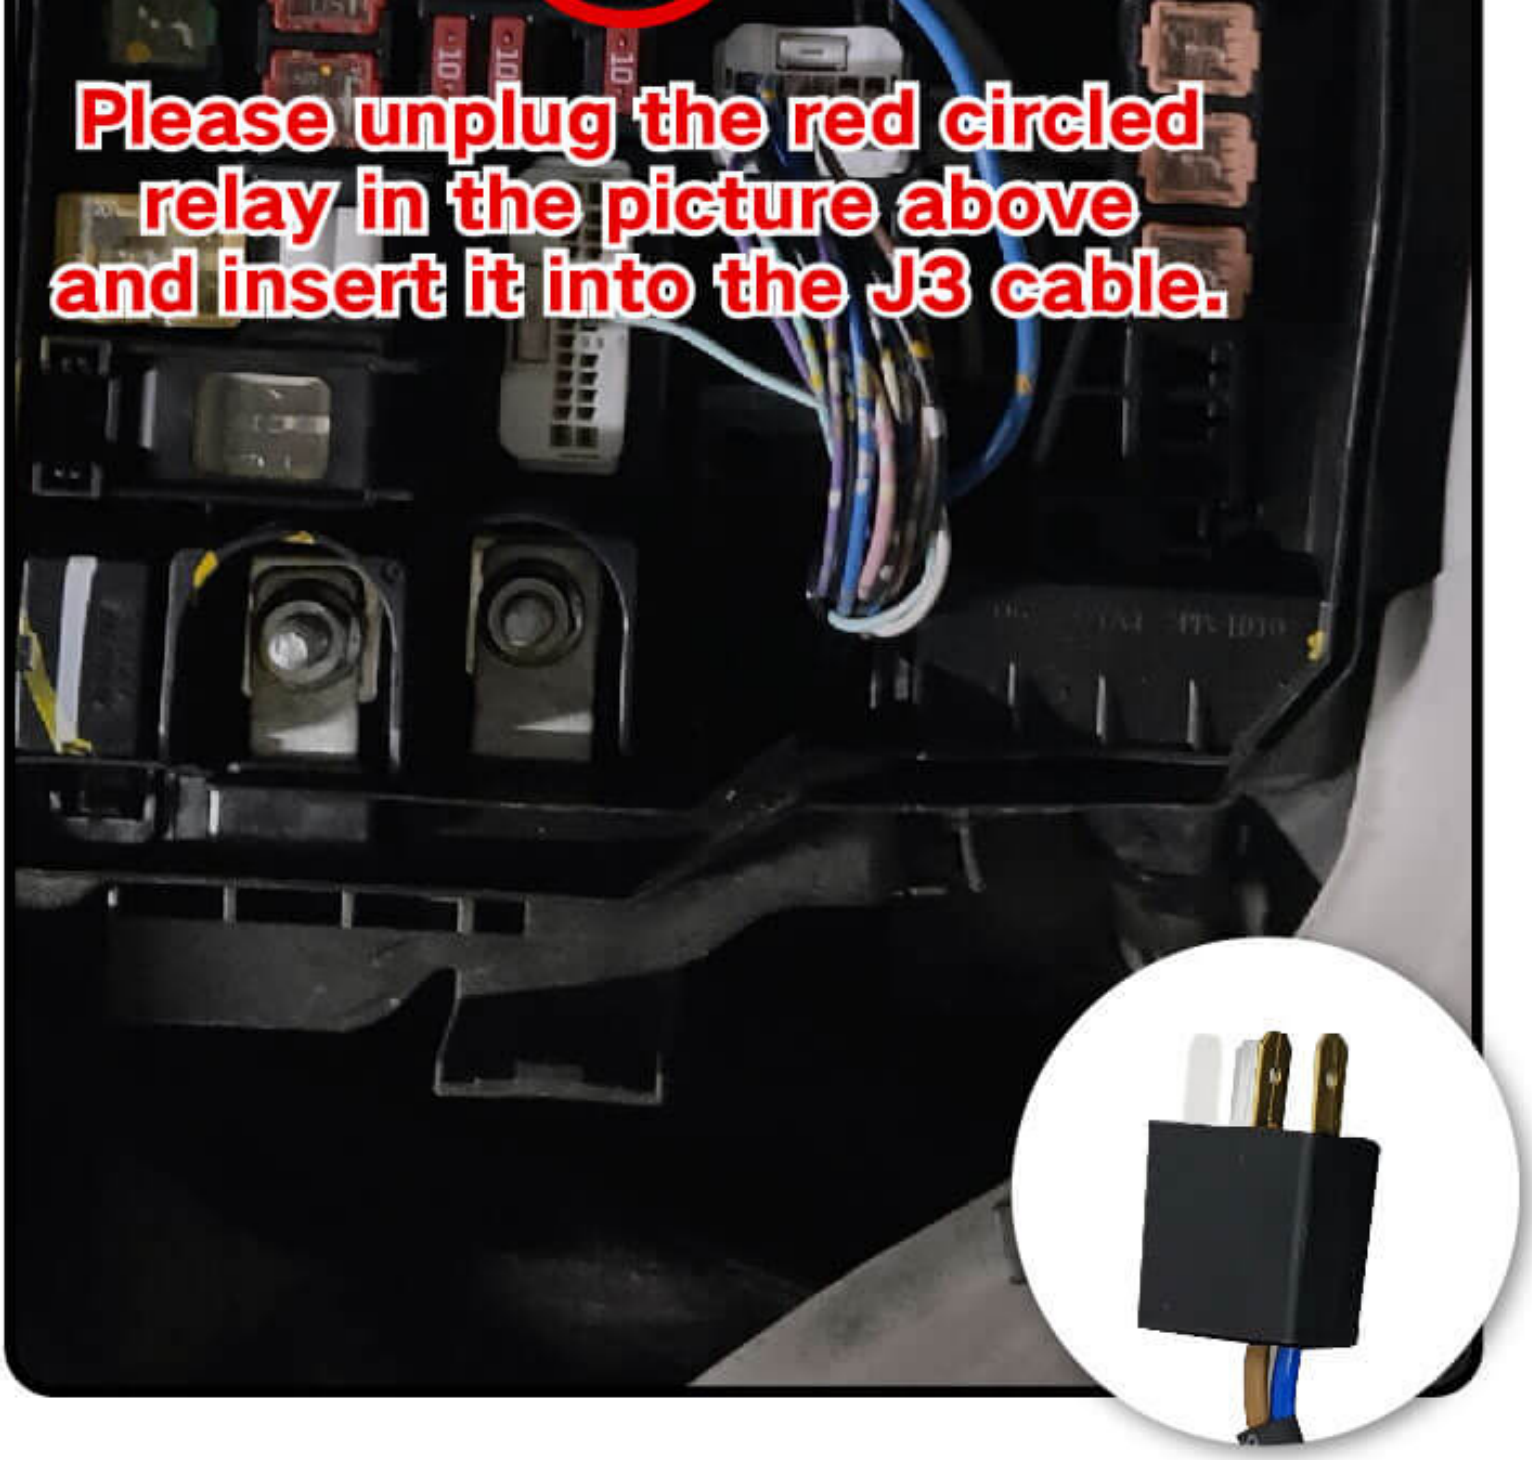

Please unplug the red circled relay in the picture above and insert it into the J3 cable.

J3 lock plug

③ Please connect the ELV wires as shown

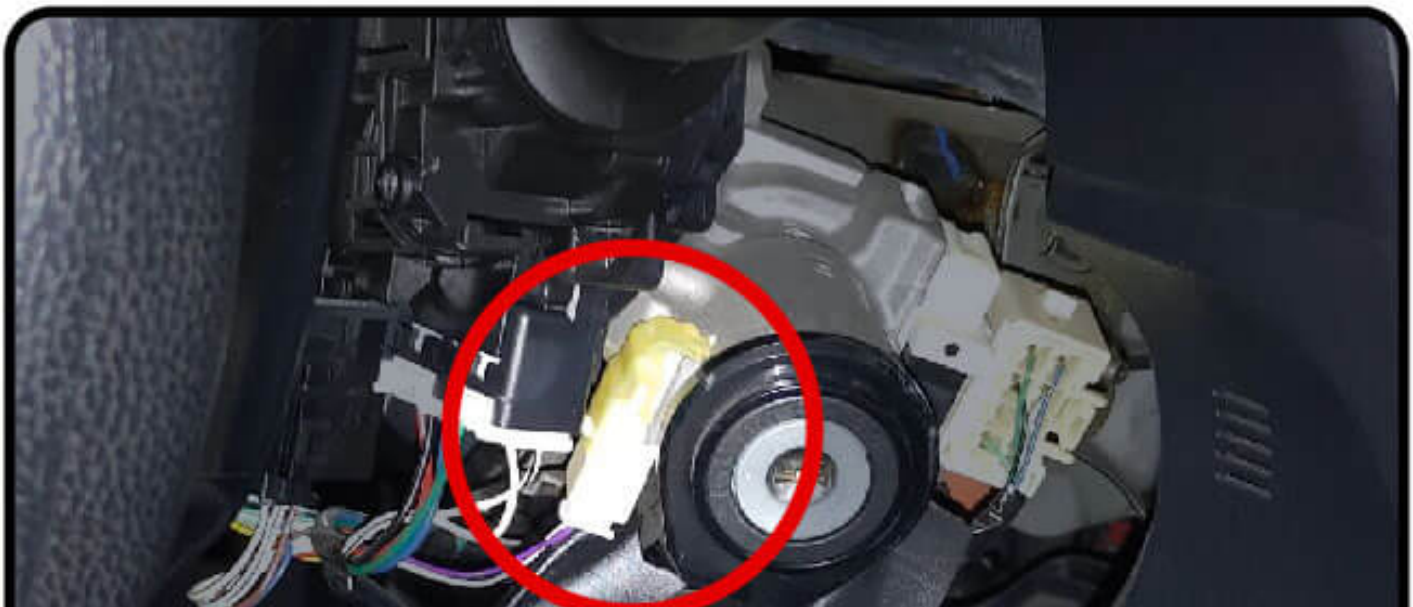

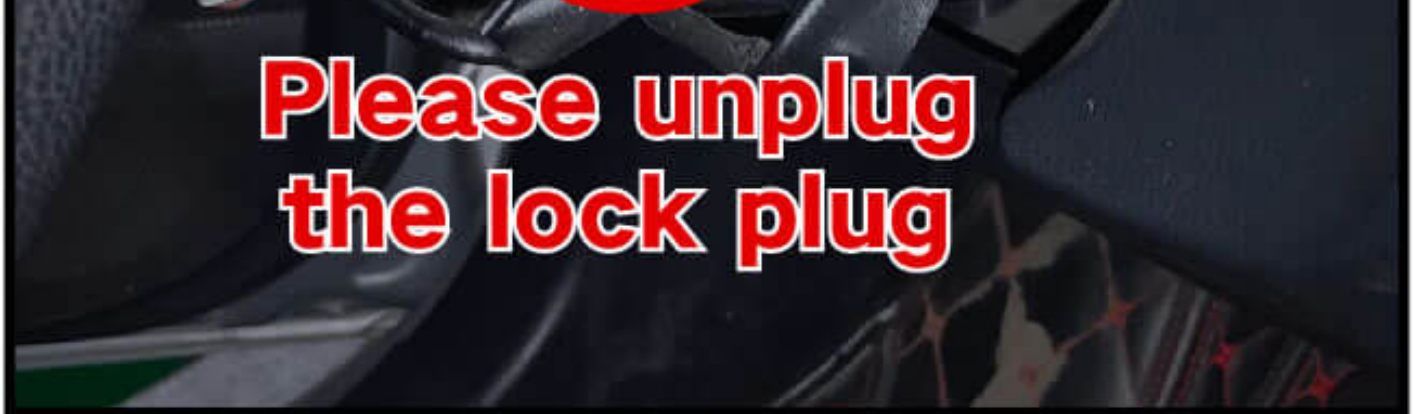
Please unplug
the lock plug

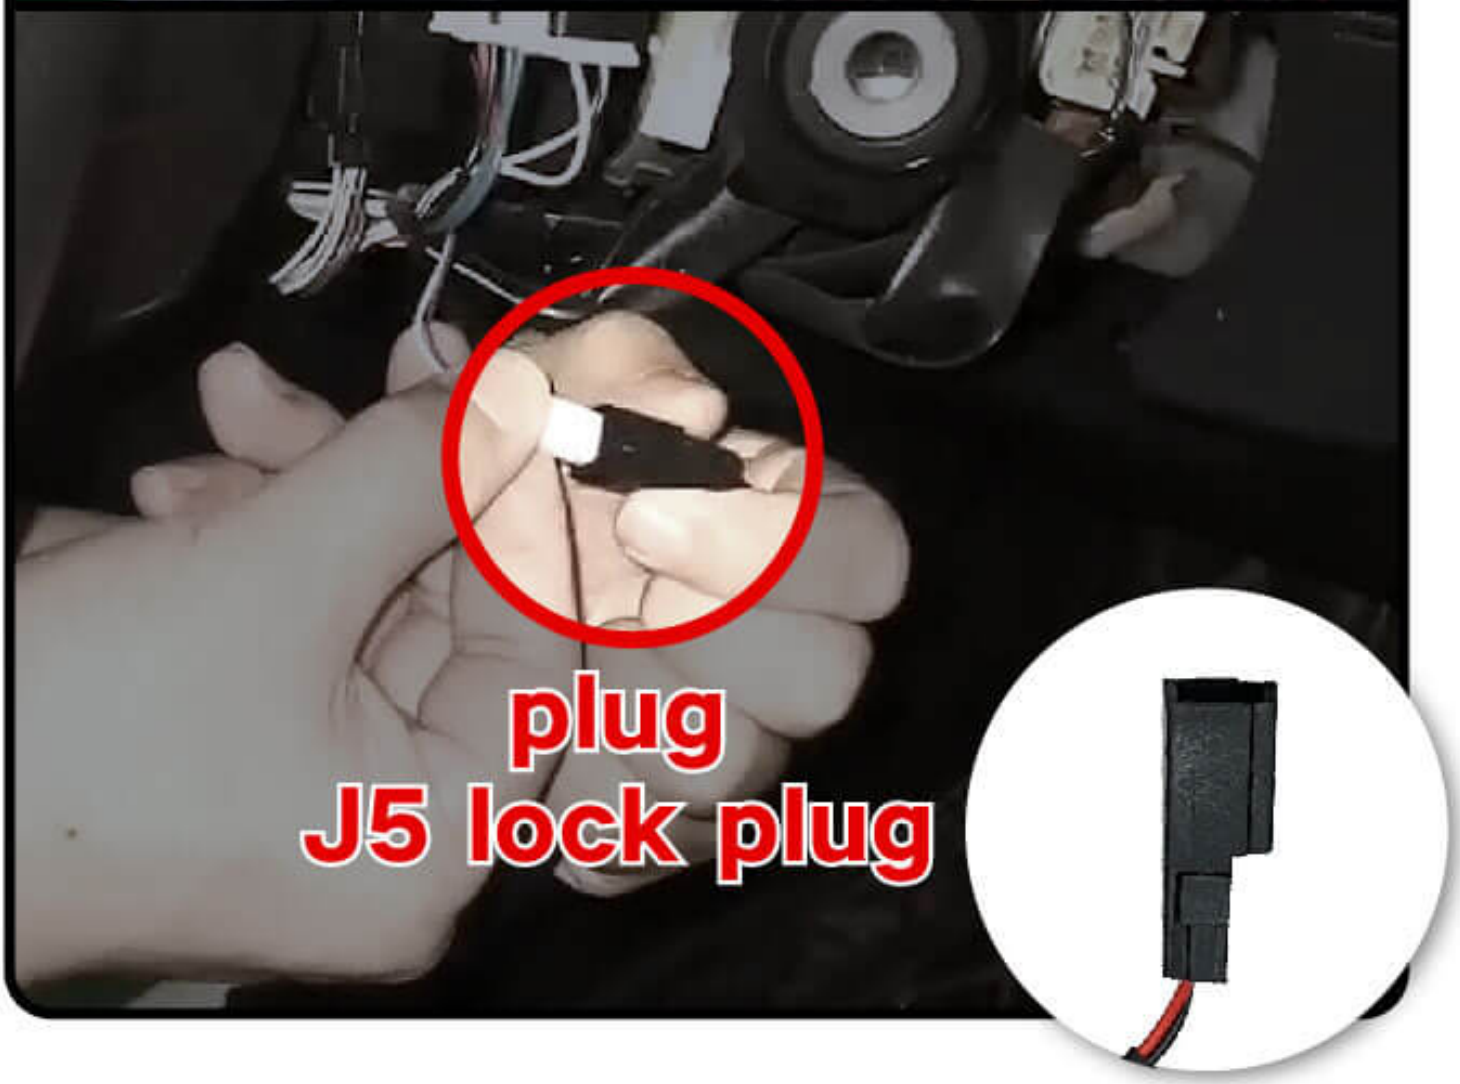
plug
J5 lock plug

J5 lock plug

④ Please connect to car OBD,
all key lost cables and car battery

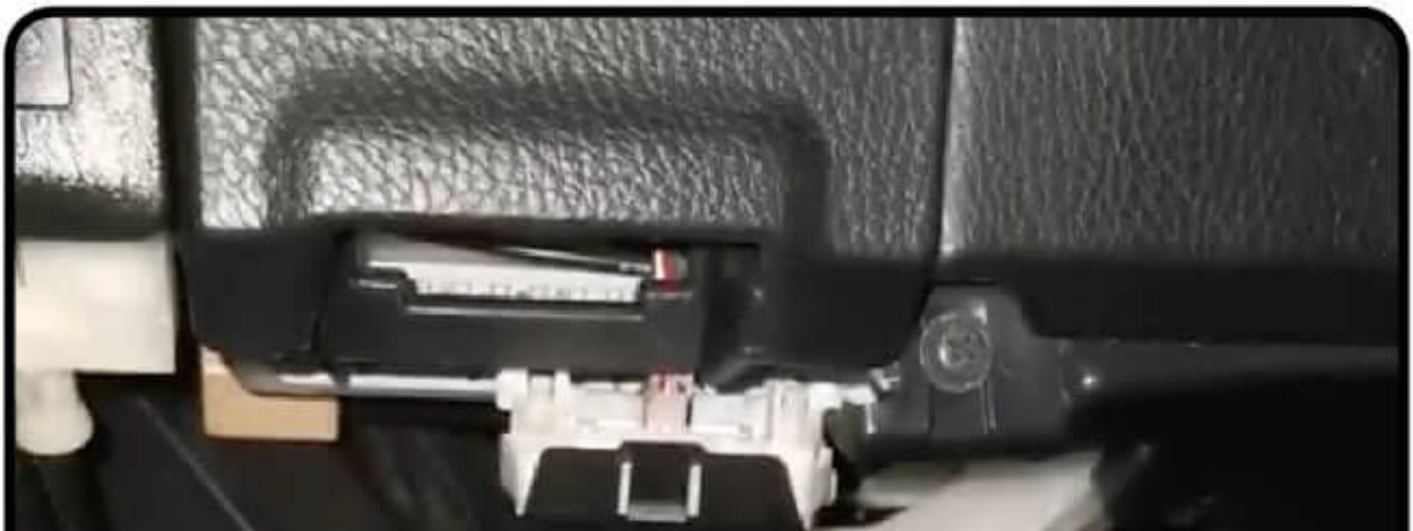

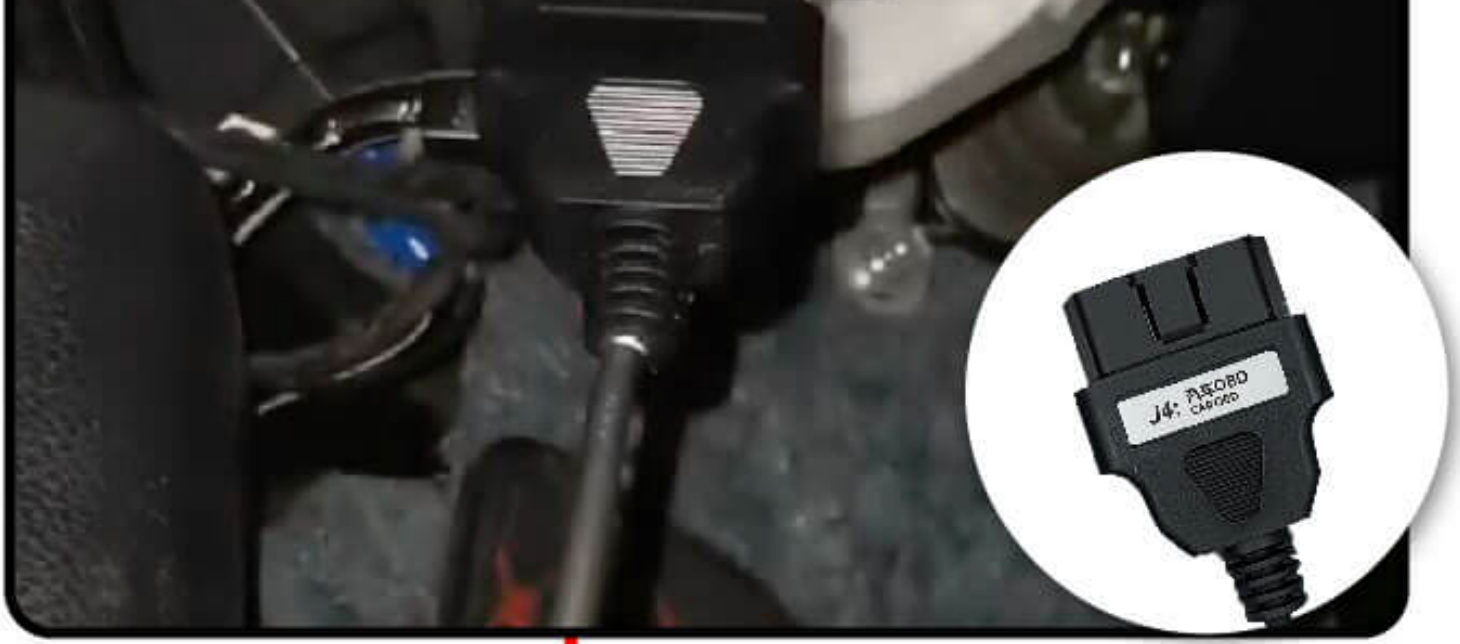

J4 lock plug

VVDI

J6 lock plug

KEY TOOL MAX &MINI OBD



J6 lock plug

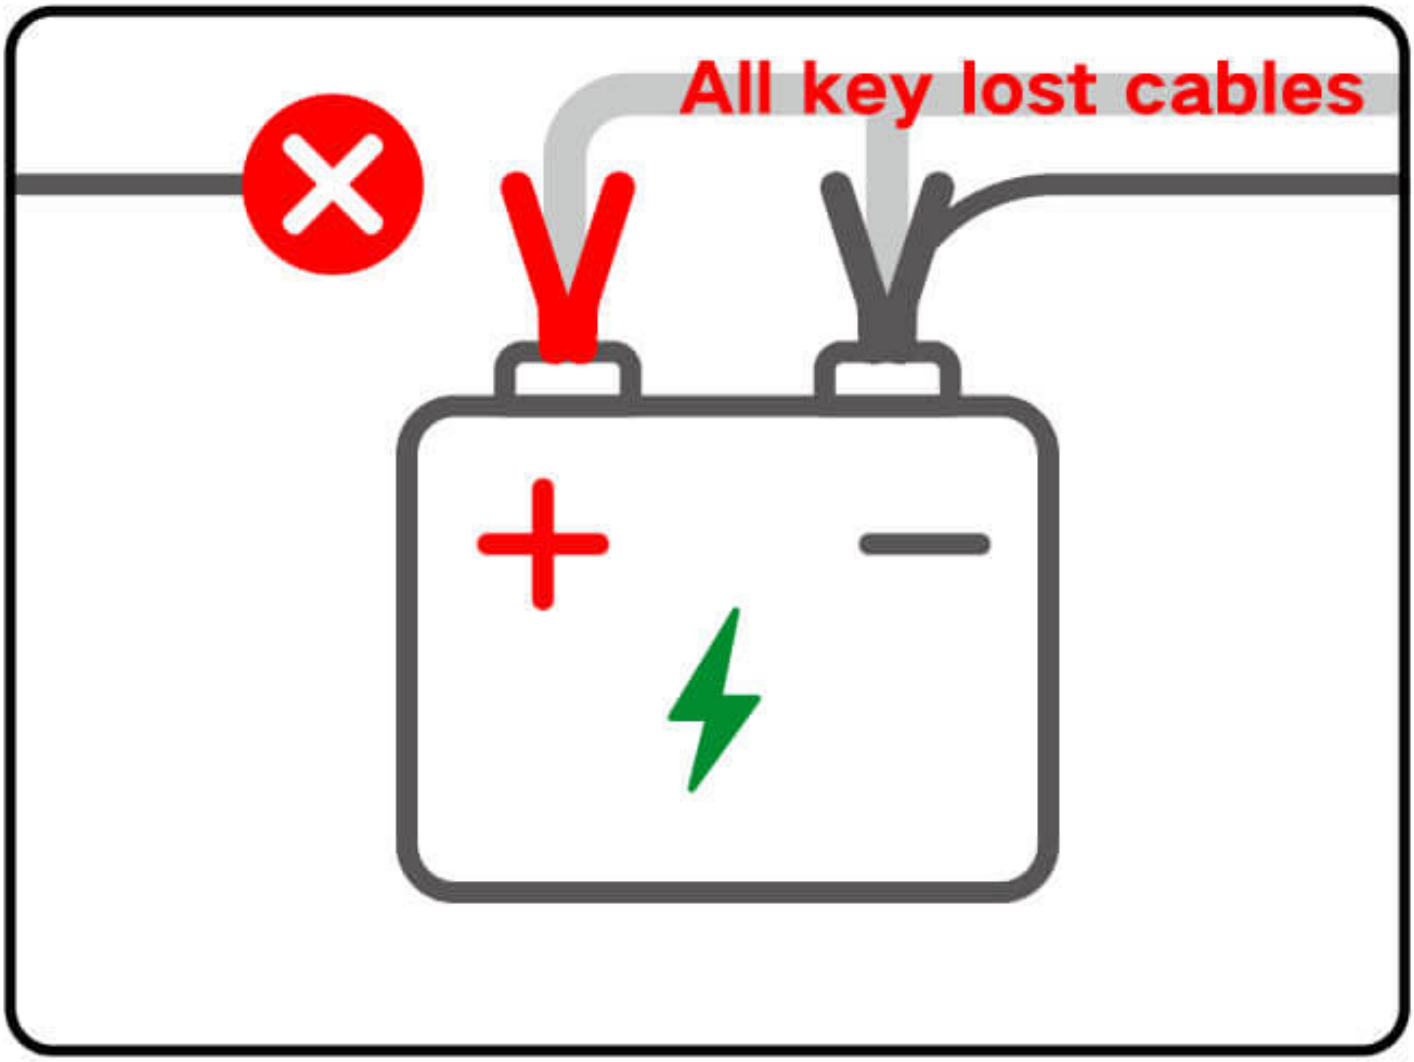
All key lost cables

⑤ Please generate start chip referring to software interface

VVDI

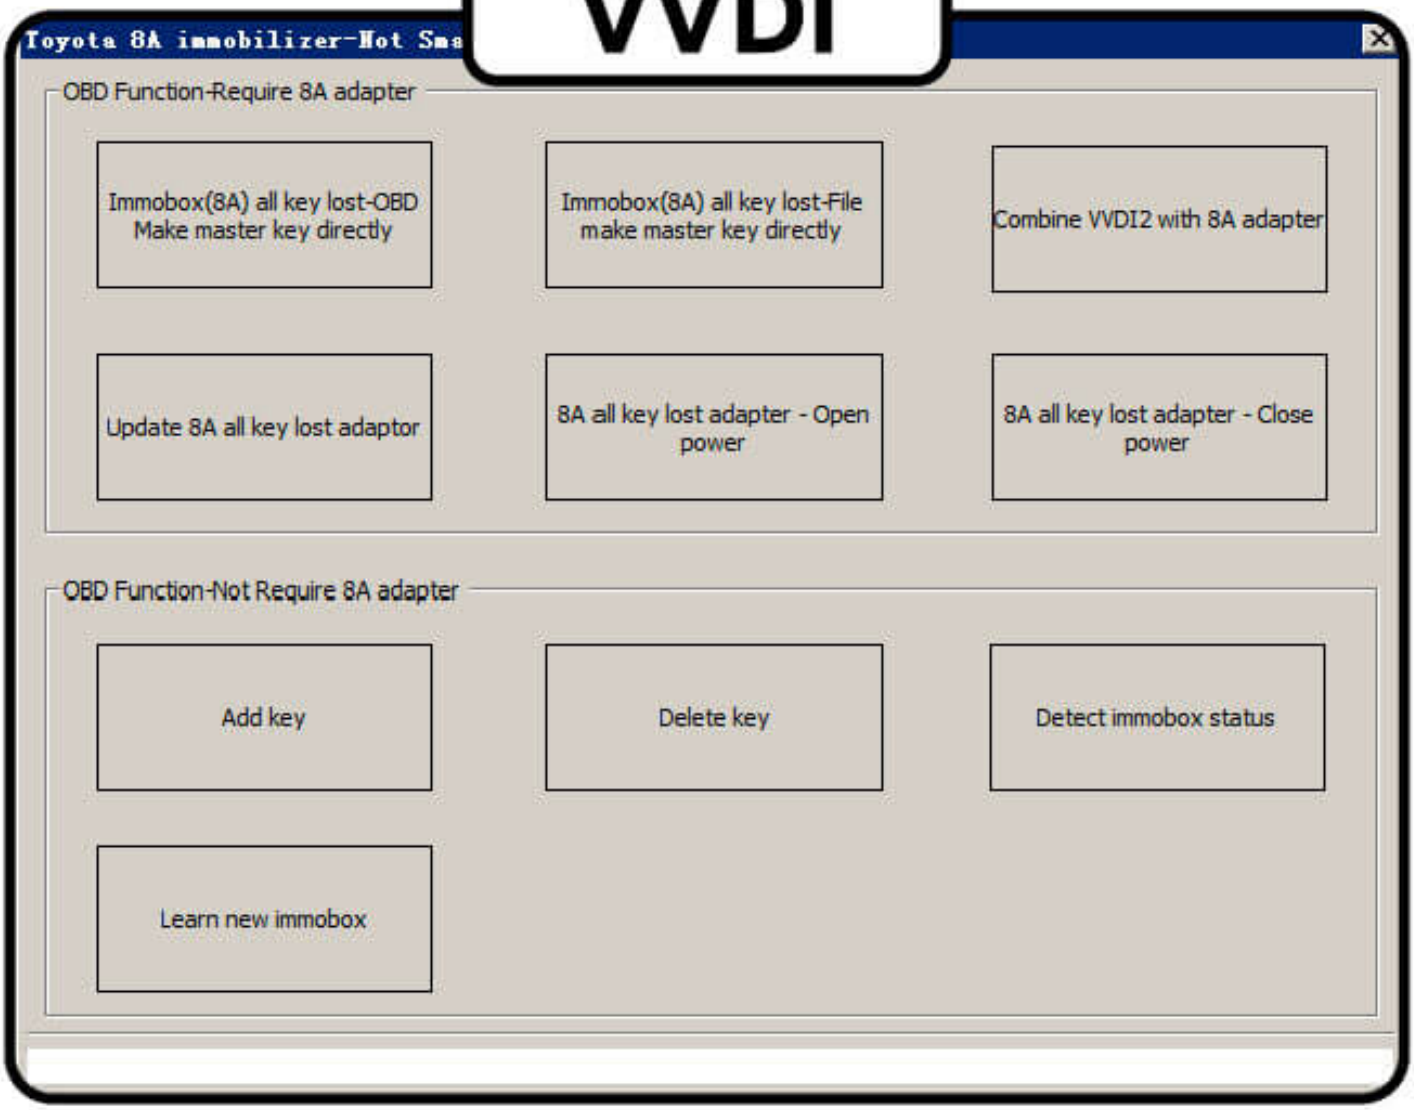
Toyota 8A immobilizer-Not Sma
OBD Function-Require 8A adapter
Immobox(8A) all key lost-OBD Make master key directly
Immobox(8A) all key lost-File make master key directly
Combine VVDI2 with 8A adapter
Update 8A all key lost adaptor
8A all key lost adapter - Open power
8A all key lost adapter - Close power
OBD Function-Not Require 8A adapter
Add key
Delete key
Detect immobox status
Learn new immobox

KEY TOOL MAX &MINI OBD

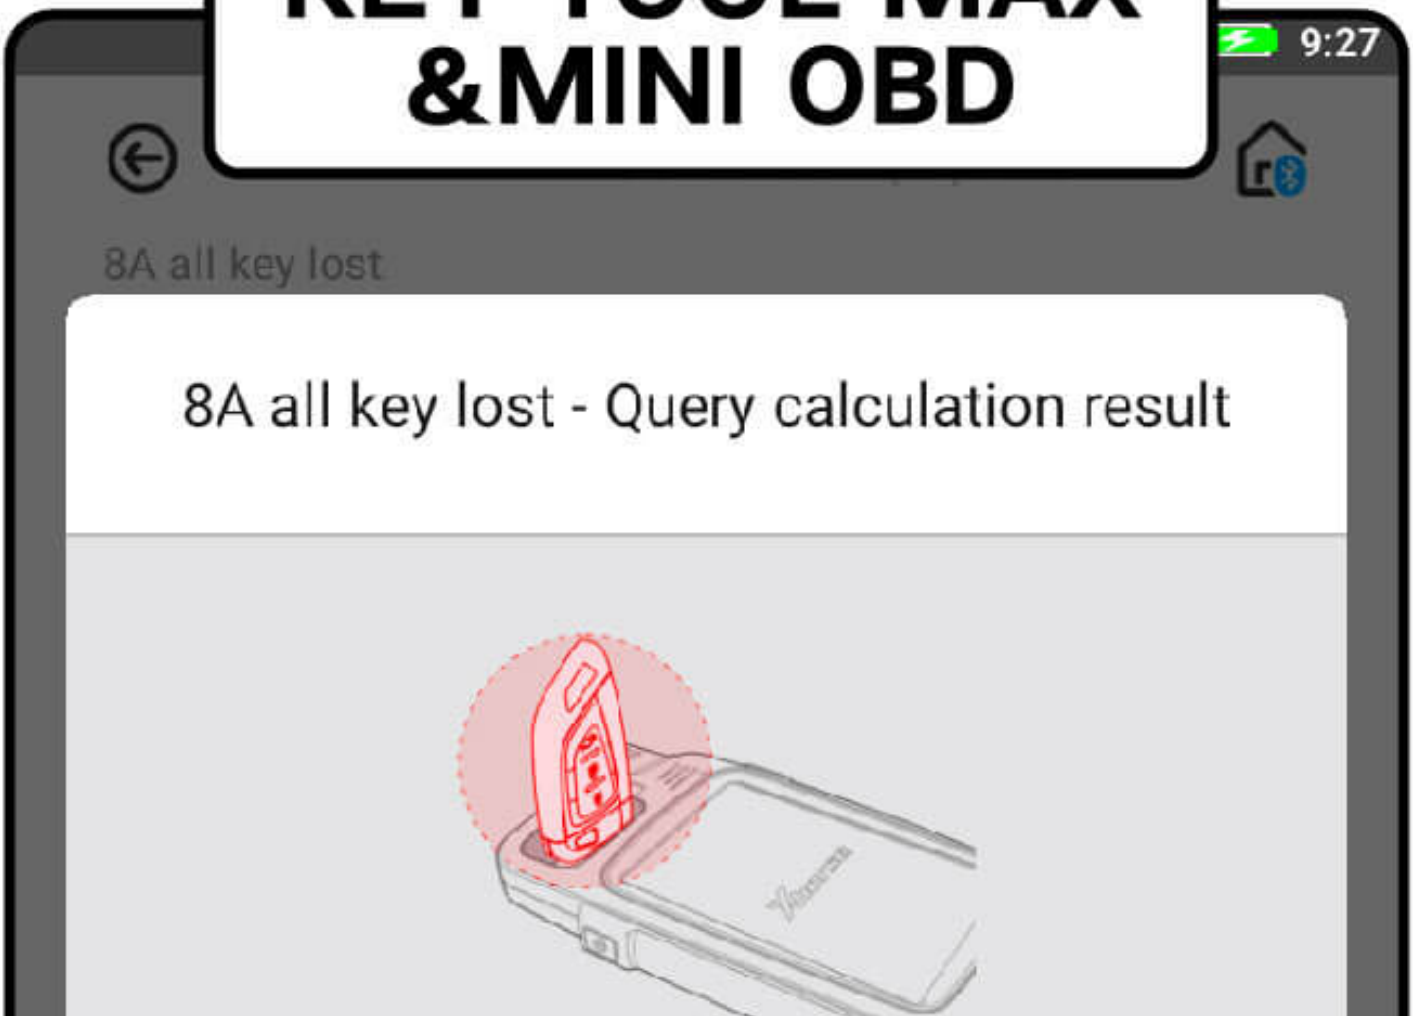
9:27
8A all key lost
8A all key lost - Query calculation result

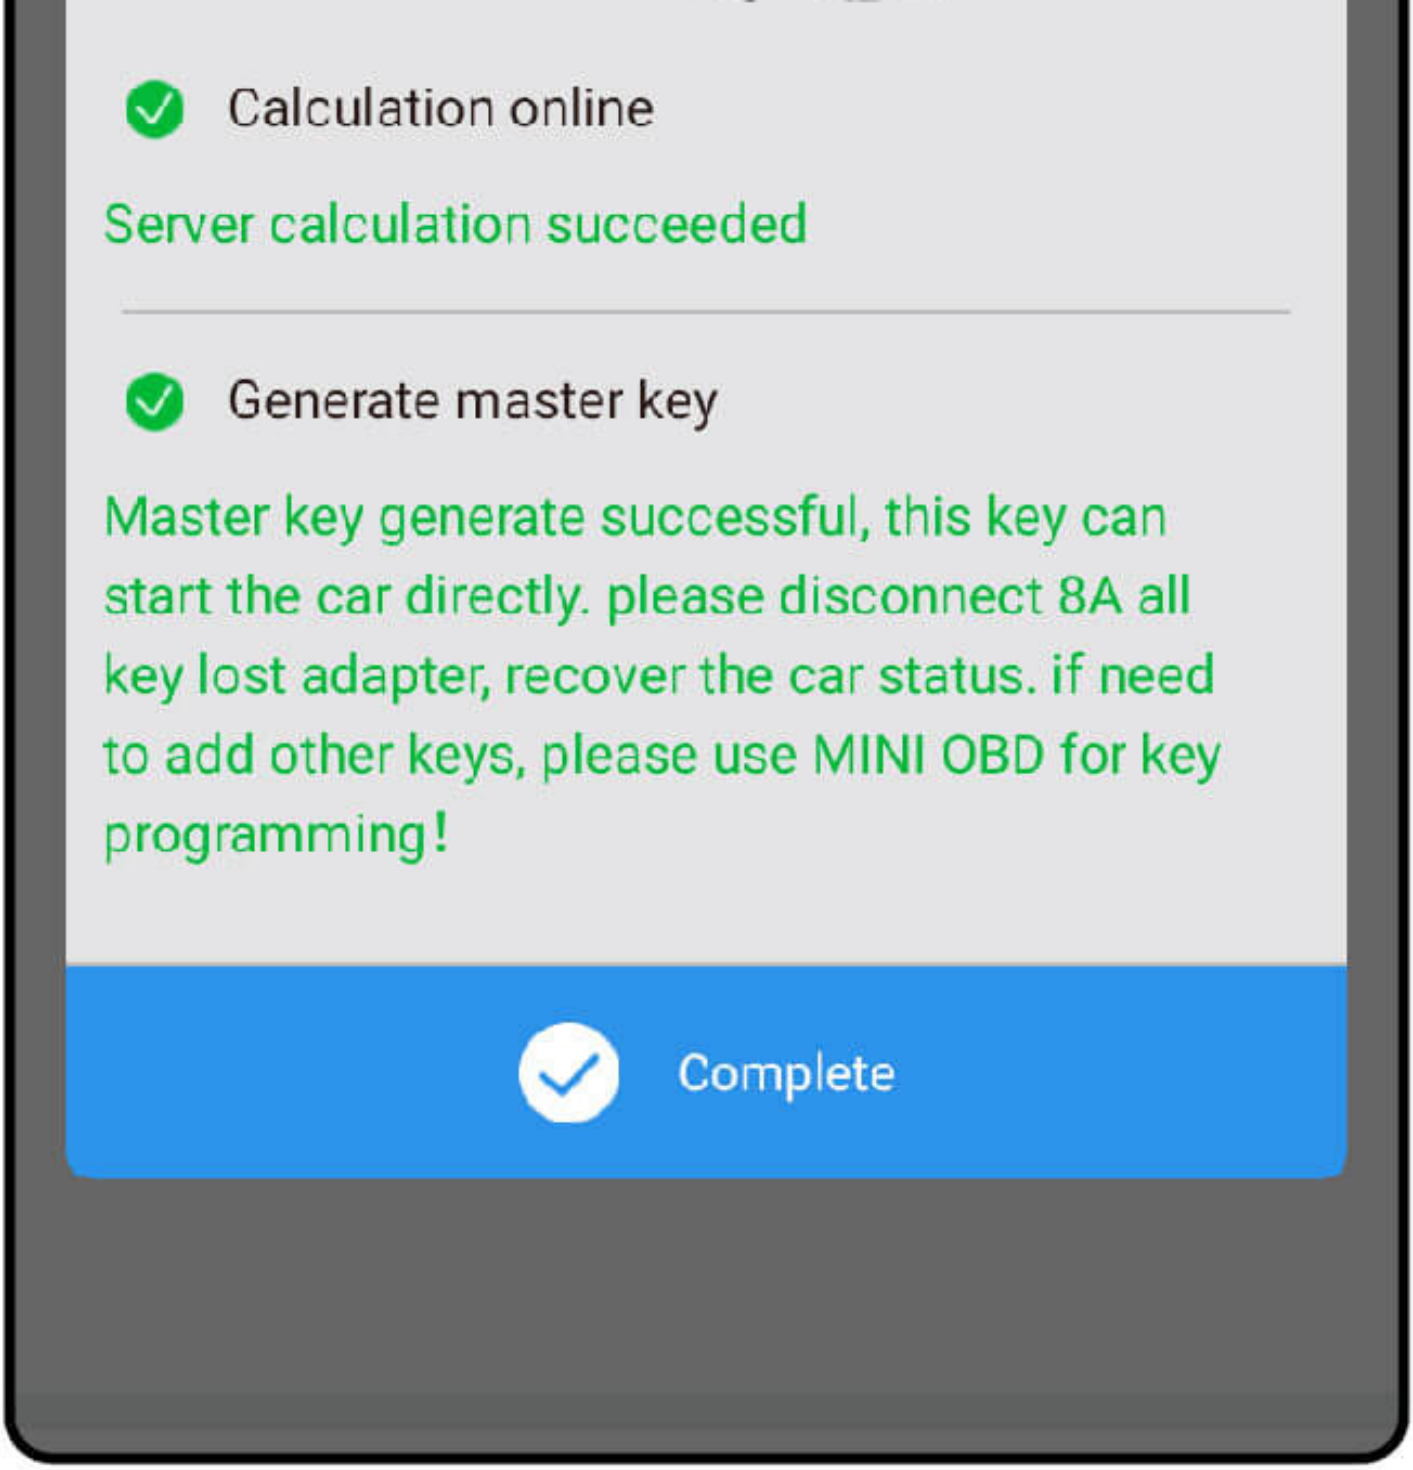

✓ Calculation online

Server calculation succeeded

✓ Generate master key

Master key generate successful, this key can start the car directly. please disconnect 8A all key lost adapter, recover the car status. if need to add other keys, please use MINI OBD for key programming!

⑥ Please disconnect all cables,recover all connection wires as car original status

If the connection wires not recovery to original status and start the car directly, the fuse boxe and device will be burnt

⑦ Test generated transponder

Toyota Camry
(15-16/17YEARS)

Support more models

Toyota Corolla 、Prado、Levin、RAV etc.,

VVDI

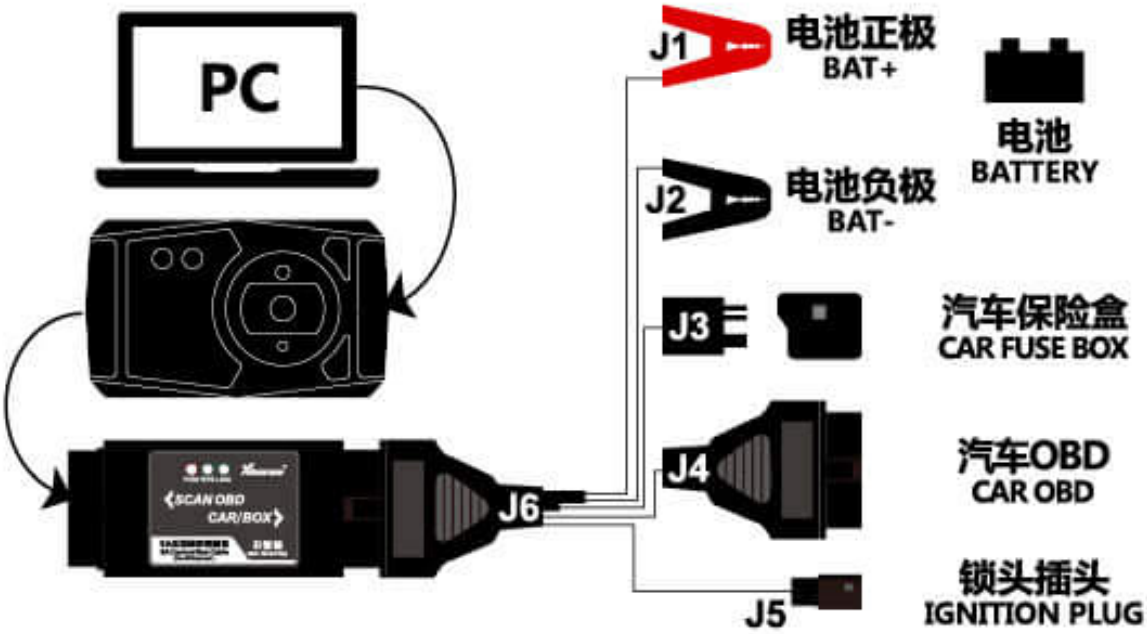
PC
J1
电池正极
BAT+
电池
BATTERY
J2
电池负极
BAT-
J3
汽车保险盒
CAR FUSE BOX
J4
汽车OBD
CAR OBD
SCAN OBD
CAR/BOX
J6
J5
锁头插头
IGNITION PLUG

KEY TOOL MAX & MINI OBD

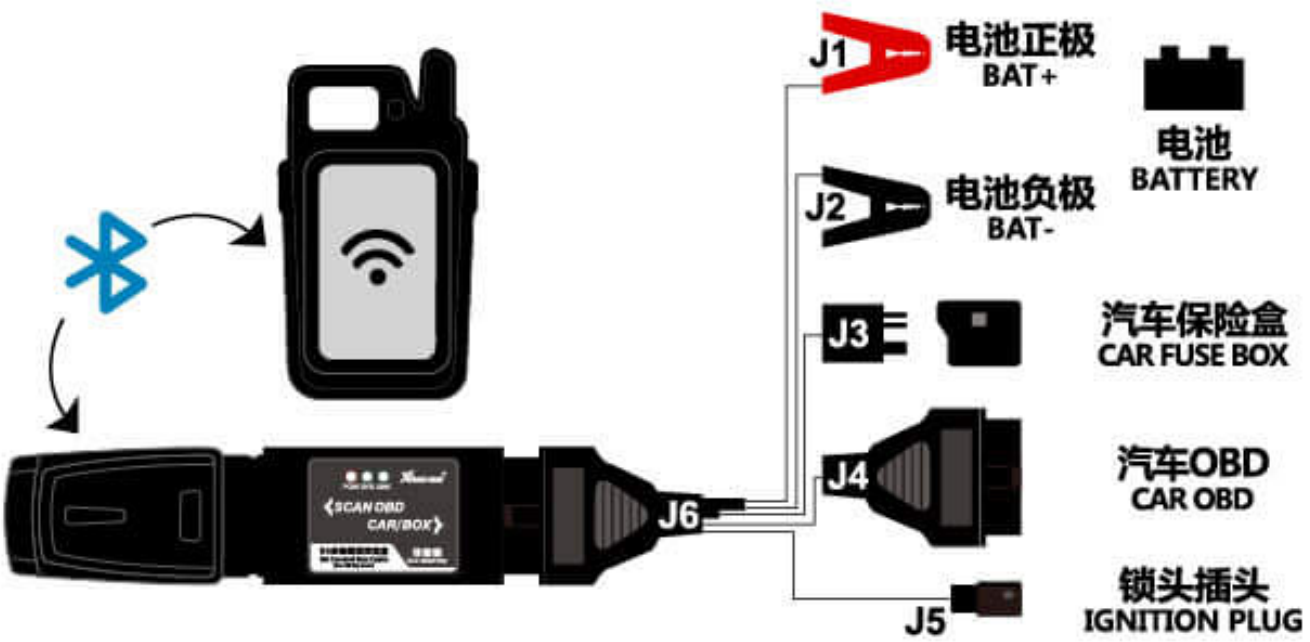
J1
电池正极
BAT+
电池
BATTERY
J2
电池负极
BAT-
J3
汽车保险盒
CAR FUSE BOX
J4
汽车OBD
CAR OBD
J5
锁头插头
IGNITION PLUG
J6
SCAN OBD
CAR/BOX

ⓘ Please update device to latest version for this function

During the process don't insert the key,

please keep ignition off

① Disconnect the positive pole of the car battery to protect the connector and avoid short circuits

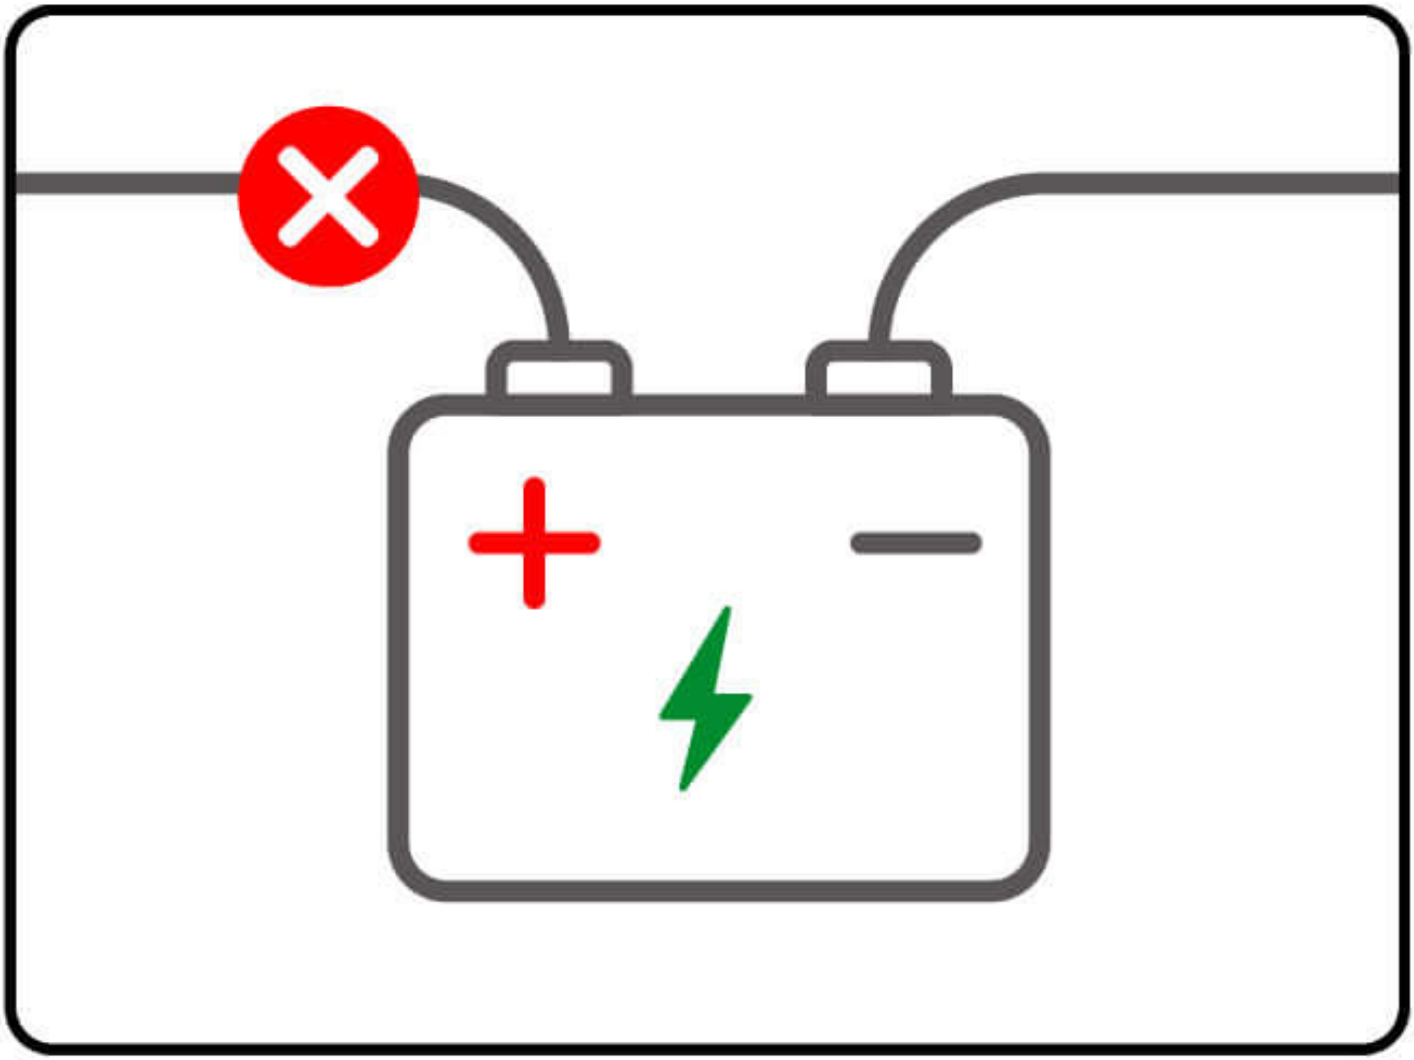

② Please connect to fuse box as the image

15-16 YEARS

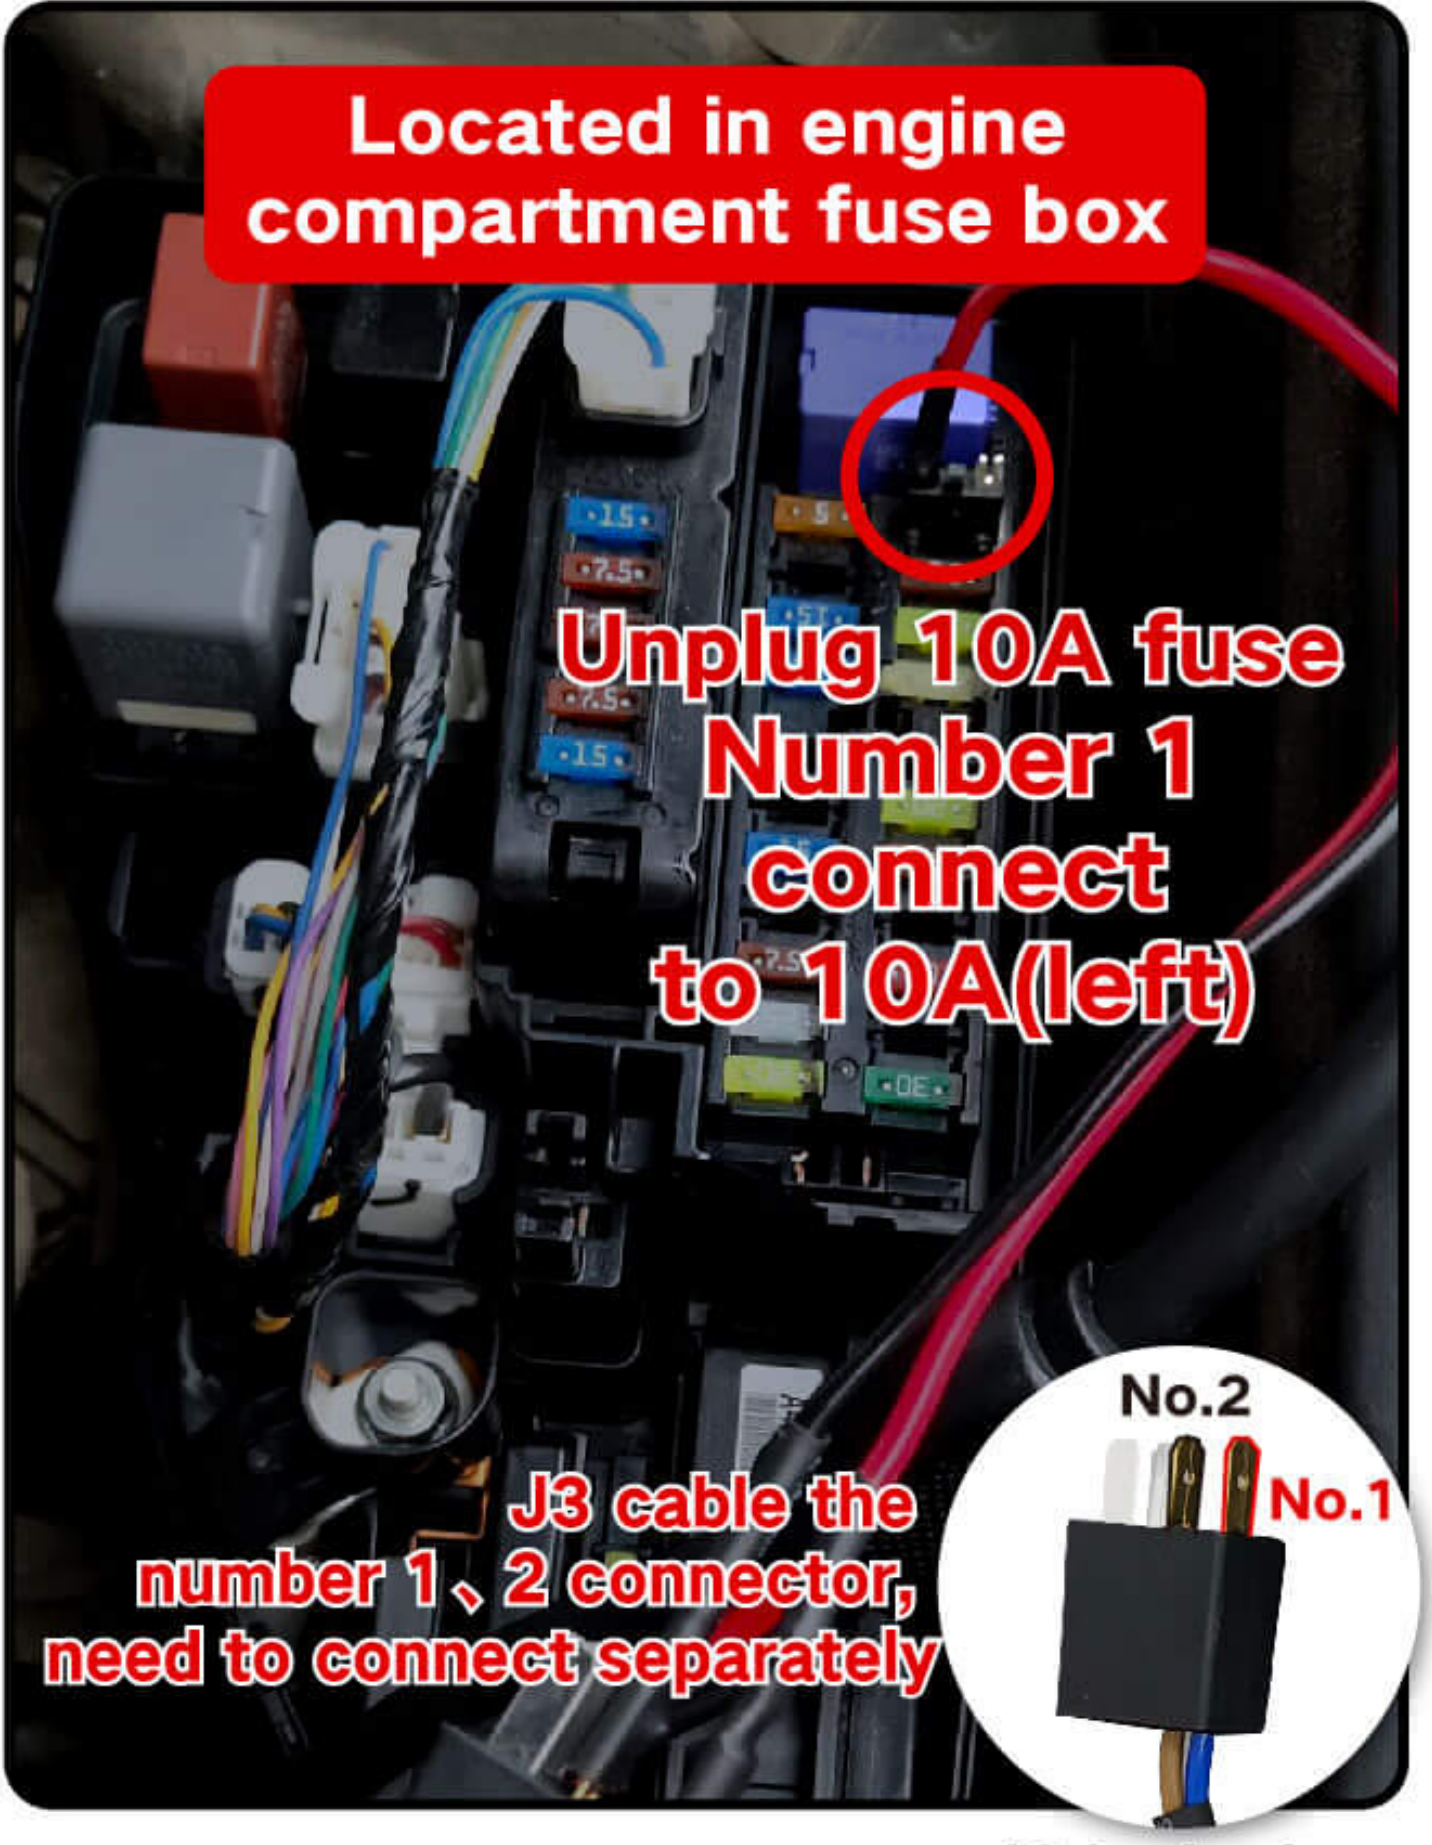

Located in engine compartment fuse box

Unplug 10A fuse Number 1 connect to 10A(left)

J3 cable the number 1、2 connector, need to connect separately

No.2
No.1
J3 lock plug

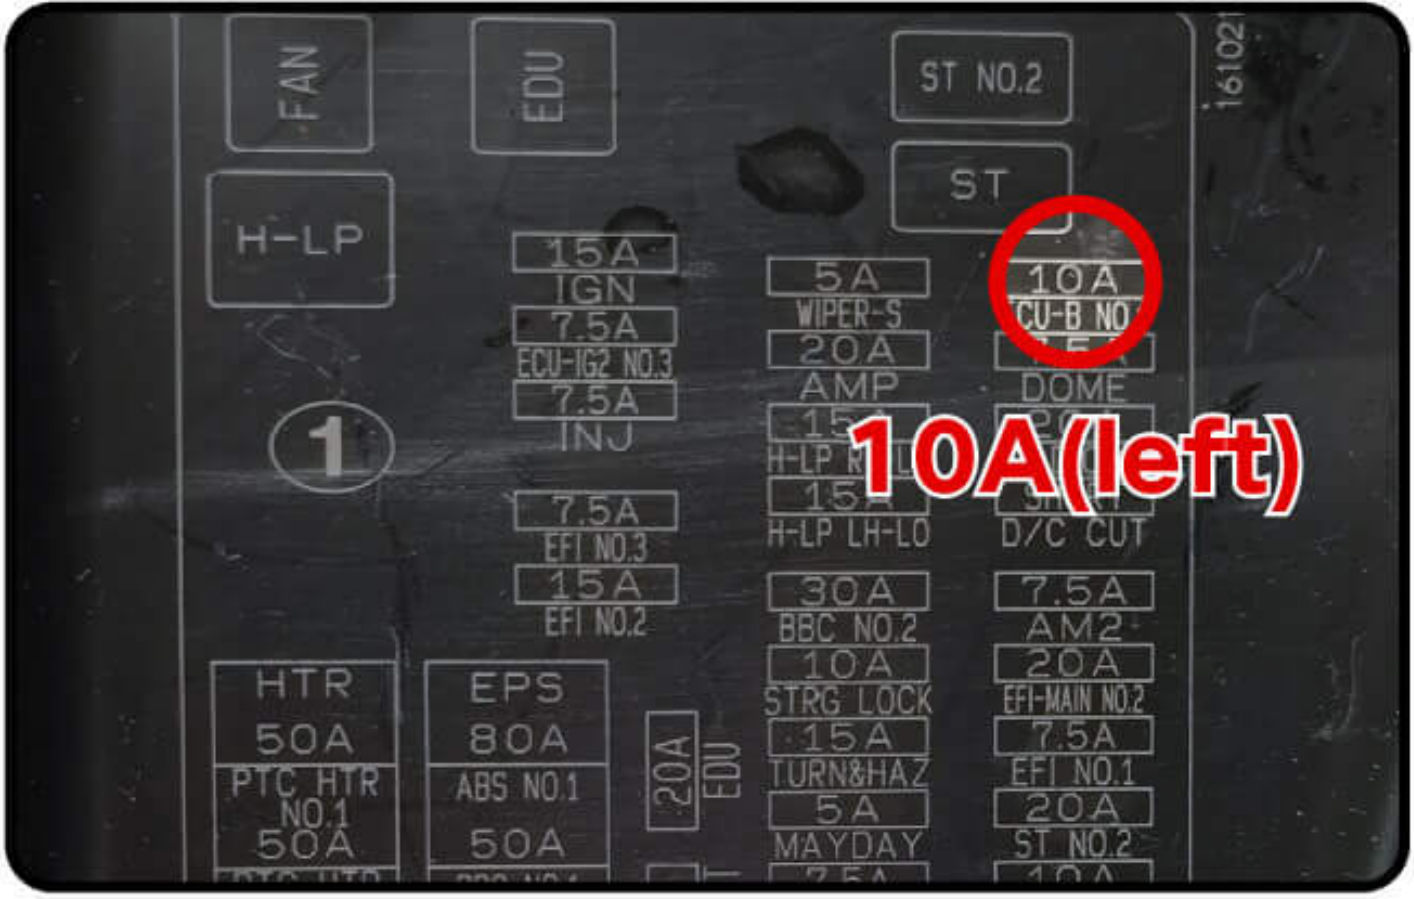
FAN
EDU
ST NO.2
ST
H-LP
15A
IGN
7.5A
ECU-IG2 NO.3
7.5A
INJ
5A
WIPER-S
20A
AMP
10A
CU-B NO
DOME
H-LP LH-LO
D/C CUT
7.5A
EFI NO.3
15A
EFI NO.2
30A
BBC NO.2
7.5A
AM2
10A
STRG LOCK
20A
EFI-MAIN NO.2
15A
TURN&HAZ
7.5A
EFI NO.1
5A
MAYDAY
20A
ST NO.2
HTR
50A
PTC HTR NO.1
50A
EPS
80A
ABS NO.1
50A
20A
EDU
1
161021

10A(left)

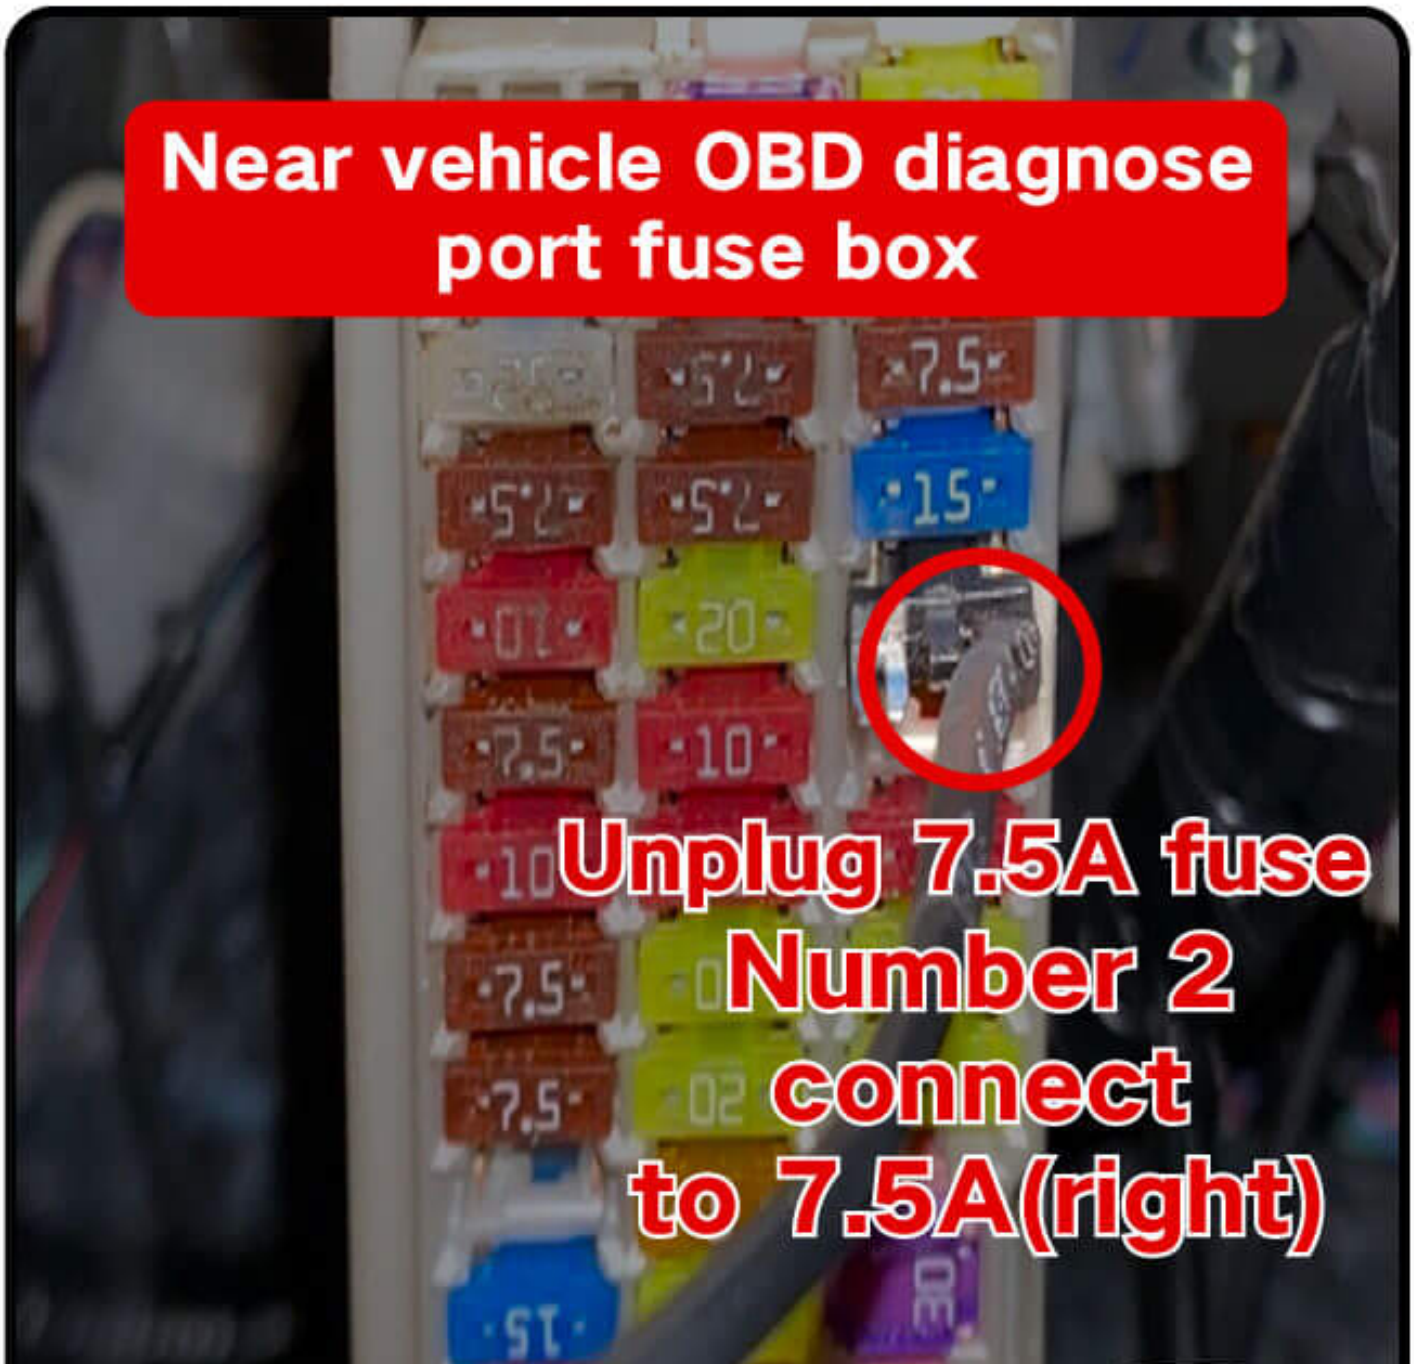
7.5
15
10
20
7.5
10
10
7.5
7.5
15

Near vehicle OBD diagnose port fuse box

Unplug 7.5A fuse Number 2 connect to 7.5A(right)

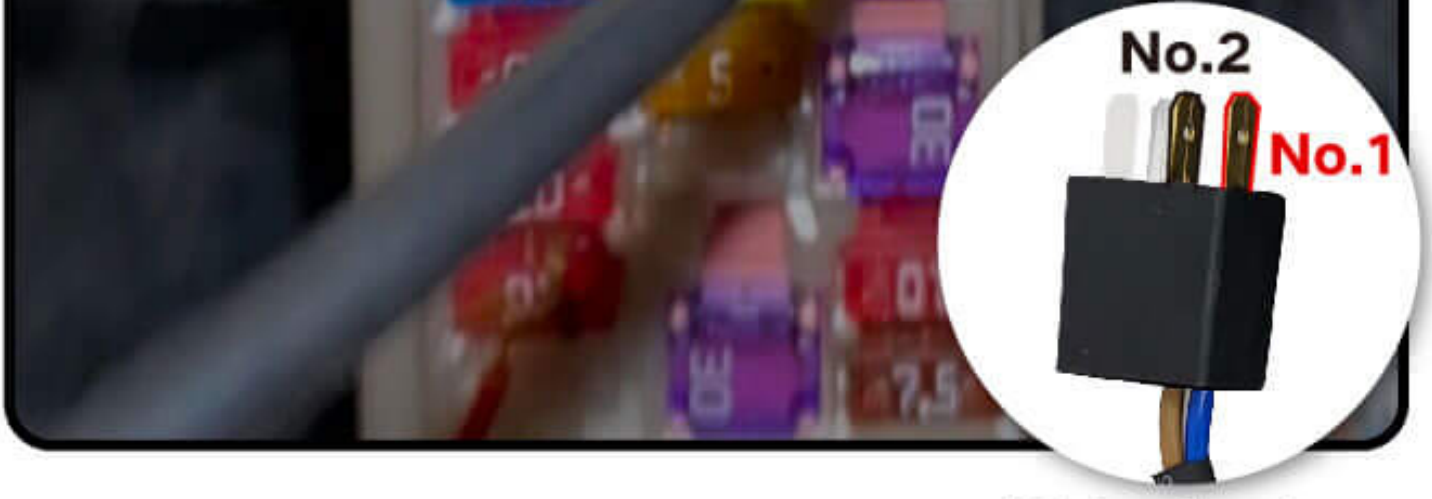

J3 lock plug

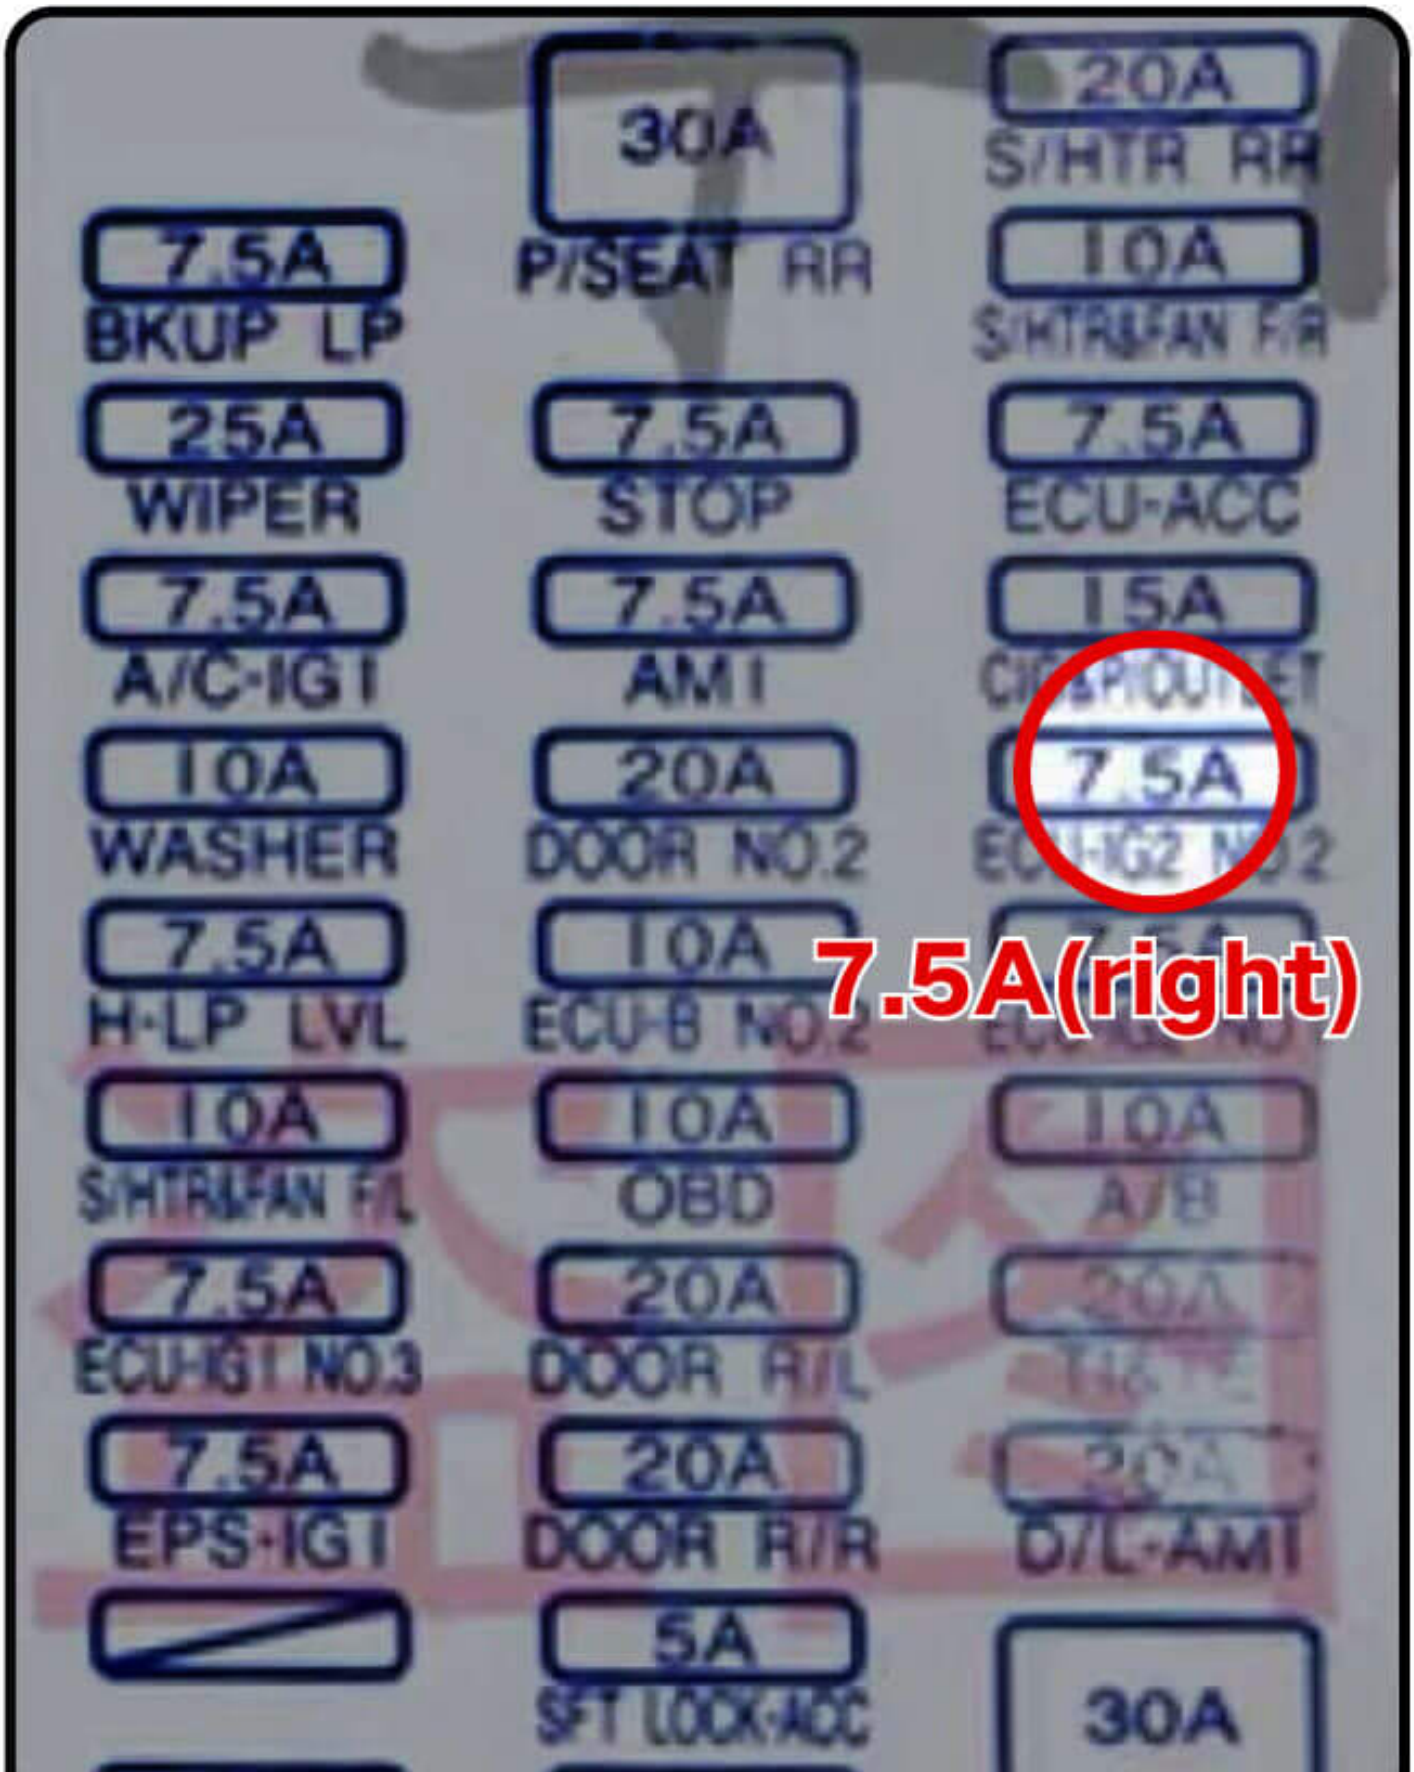

	30A P/SEAT RR	20A S/HTR RR
7.5A BKUP LP		10A S/HTR&FAN F/R
25A WIPER	7.5A STOP	7.5A ECU-ACC
7.5A A/C-IG1	7.5A AM1	15A CIG&P/OUTLET
10A WASHER	20A DOOR NO.2	7.5A ECU-IG2 NO.2
7.5A H-LP LVL	10A ECU-B NO.2	7.5A [illegible]
10A S/HTR&FAN F/L	10A OBD	10A A/B
7.5A ECU-IG1 NO.3	20A DOOR R/L	20A [illegible]
7.5A EPS-IG1	20A DOOR R/R	20A D/L-AM1
	5A SFT LOCK-ACC	30A

7.5A(right)

17YEARS

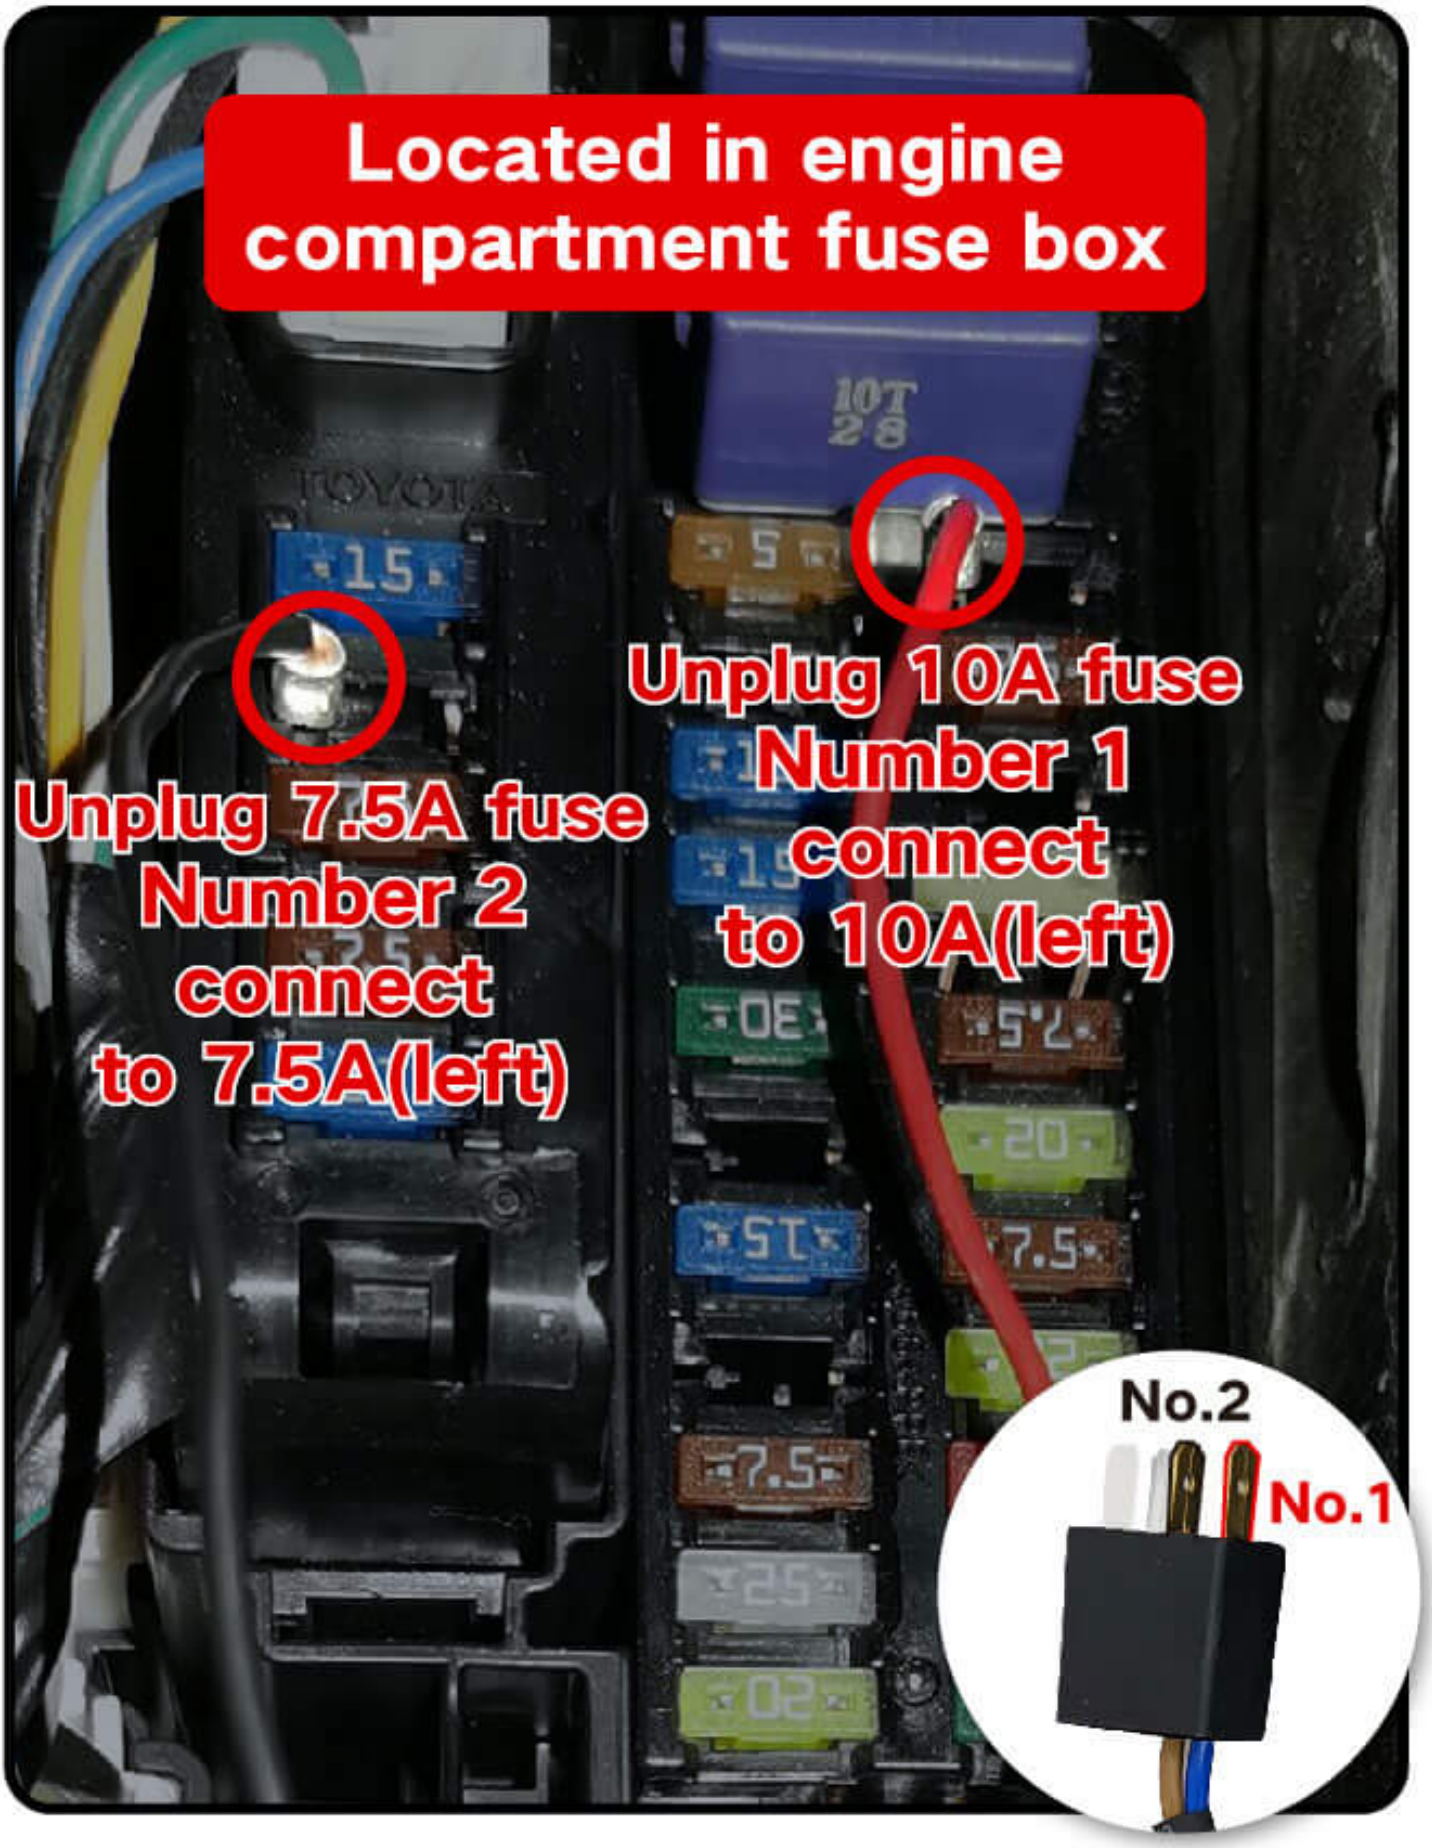

Located in engine compartment fuse box

Unplug 10A fuse Number 1 connect to 10A(left)

Unplug 7.5A fuse Number 2 connect to 7.5A(left)

TOYOTA
10T
28
15
5
30
20
7.5
25
No.2
No.1

J3 lock plug

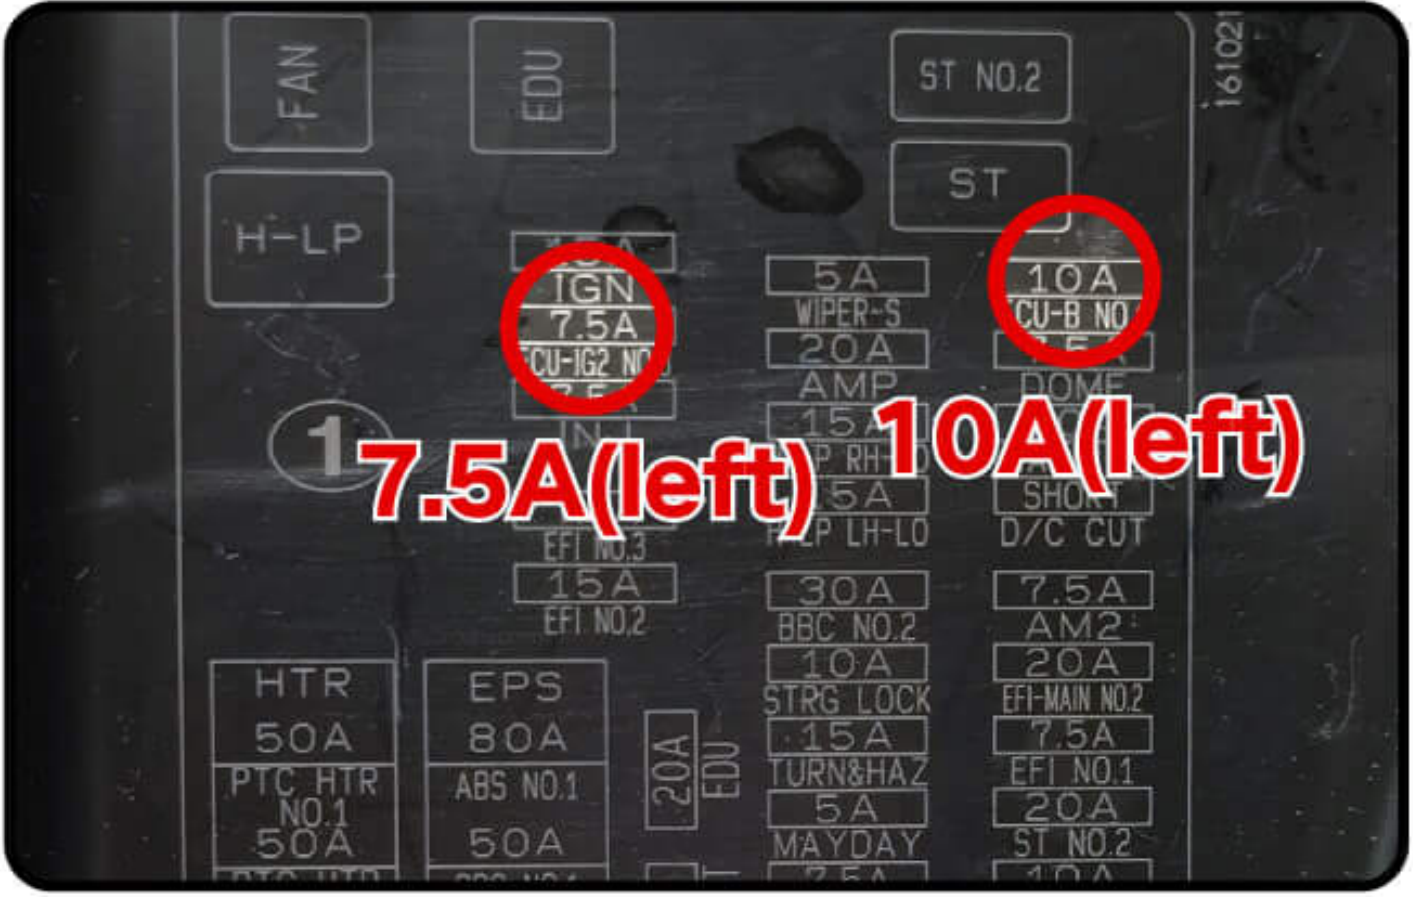
FAN
EDU
ST NO.2
H-LP
ST
IGN
7.5A
CU-IG2 NO
5A
WIPER-S
20A
AMP
10A
CU-B NO
DOME
SHORT
D/C CUT
EFI NO.3
15A
EFI NO.2
30A
BBC NO.2
7.5A
AM2
HTR
50A
PTC HTR NO.1
50A
EPS
80A
ABS NO.1
50A
20A EDU
10A
STRG LOCK
20A
EFI-MAIN NO.2
15A
TURN&HAZ
7.5A
EFI NO.1
5A
MAYDAY
20A
ST NO.2
161021

7.5A(left)

10A(left)

③ Please connect the ELV wires as shown

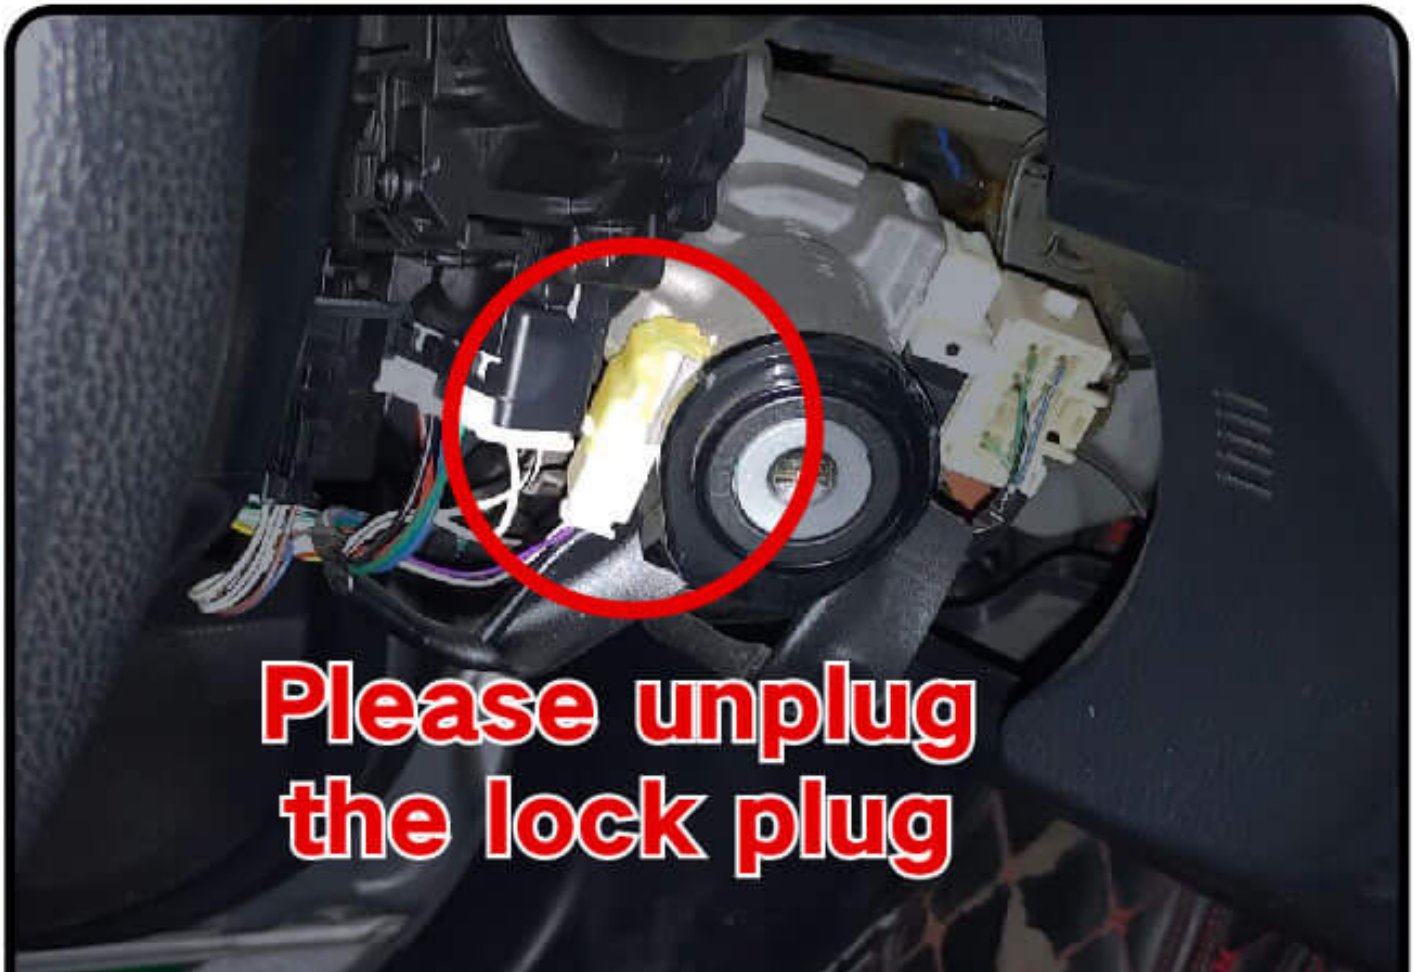

Please unplug the lock plug



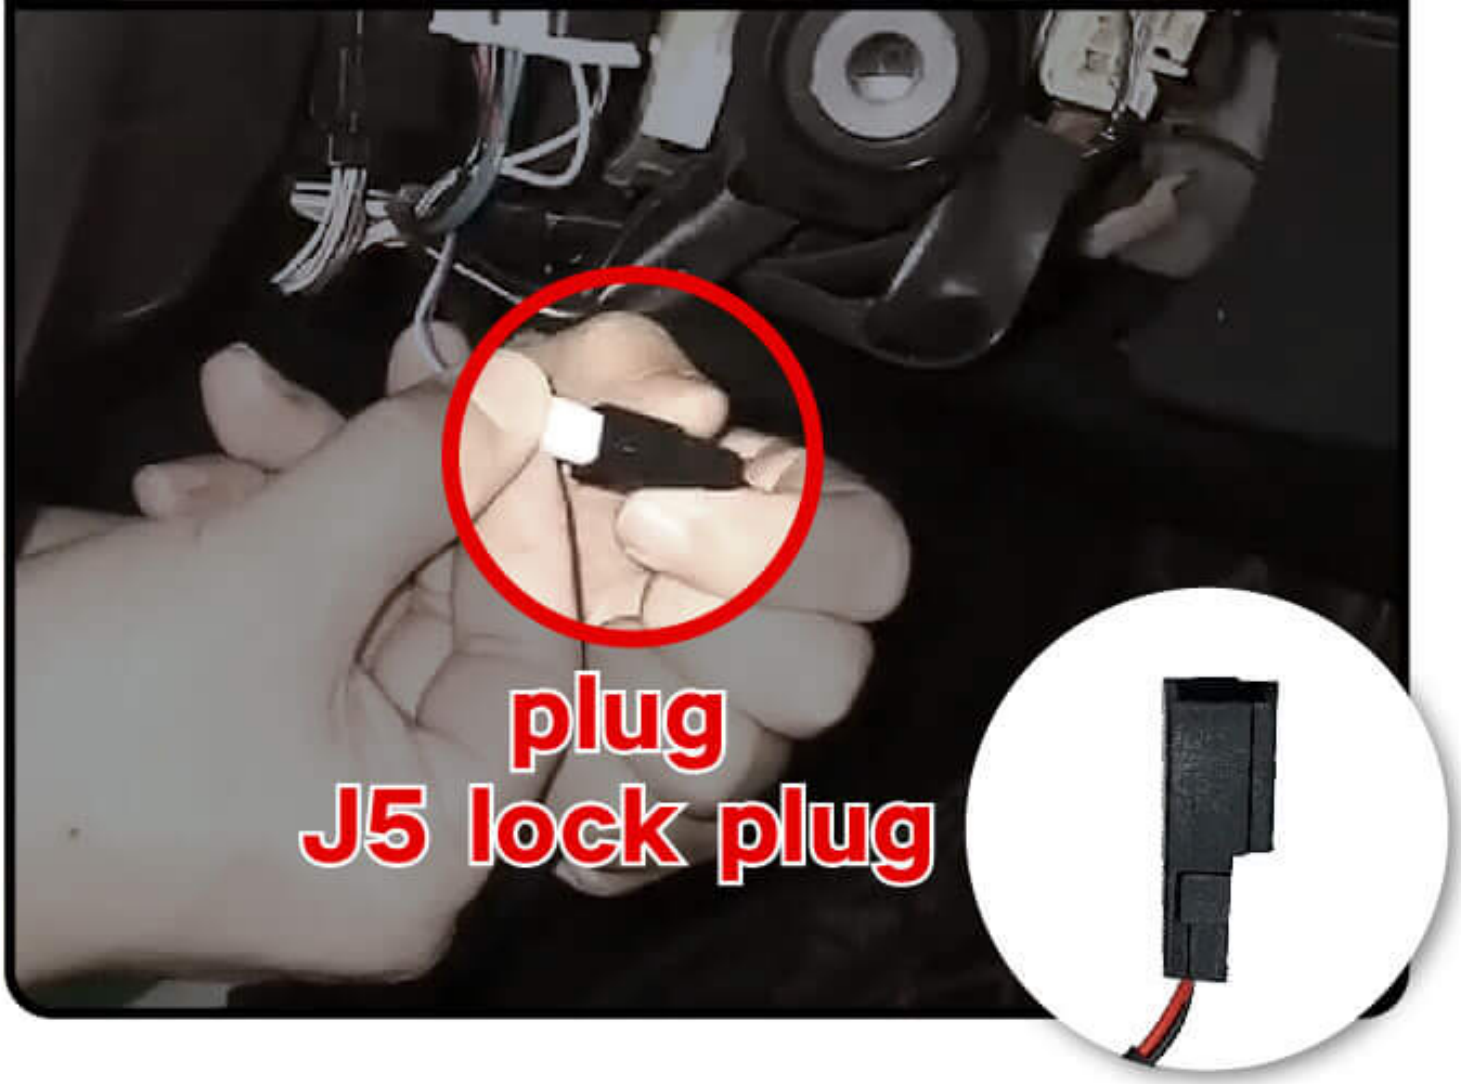
plug
J5 lock plug

J5 lock plug

④ Please connect to car OBD,
all key lost cables and car battery

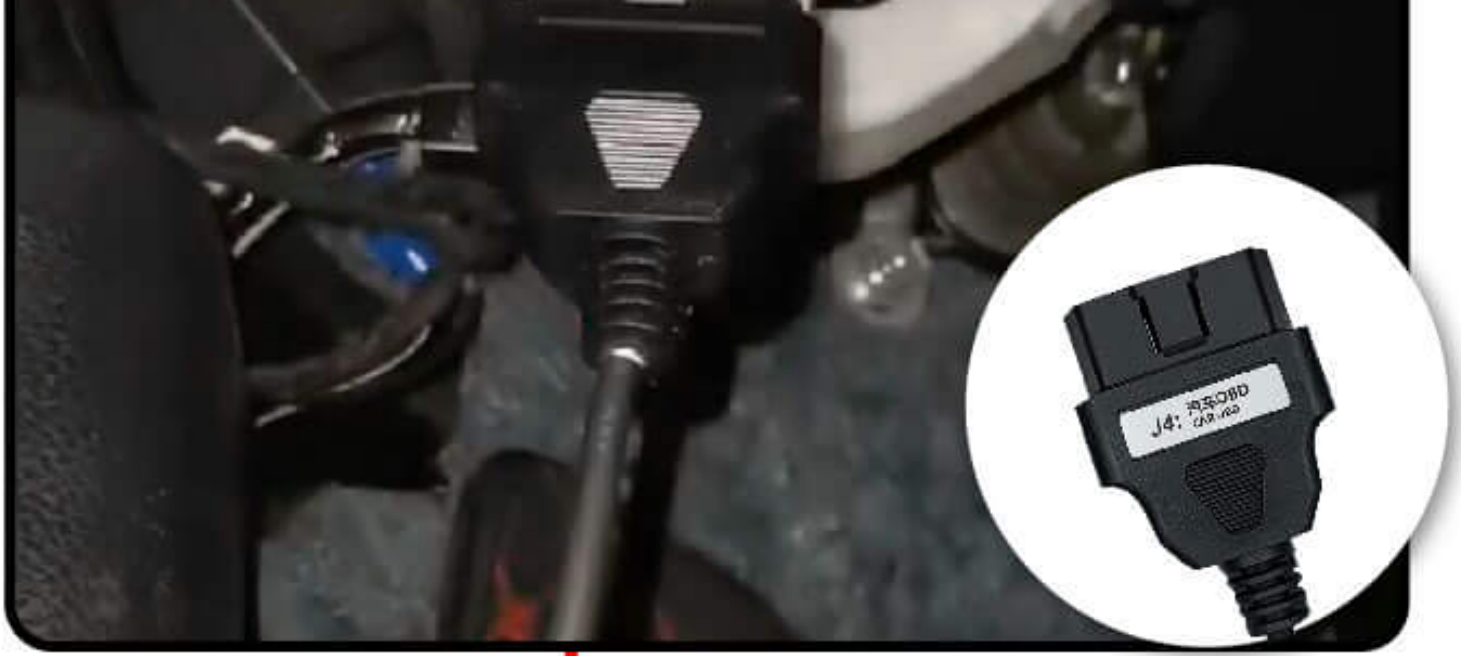

J4 lock plug

VVDI

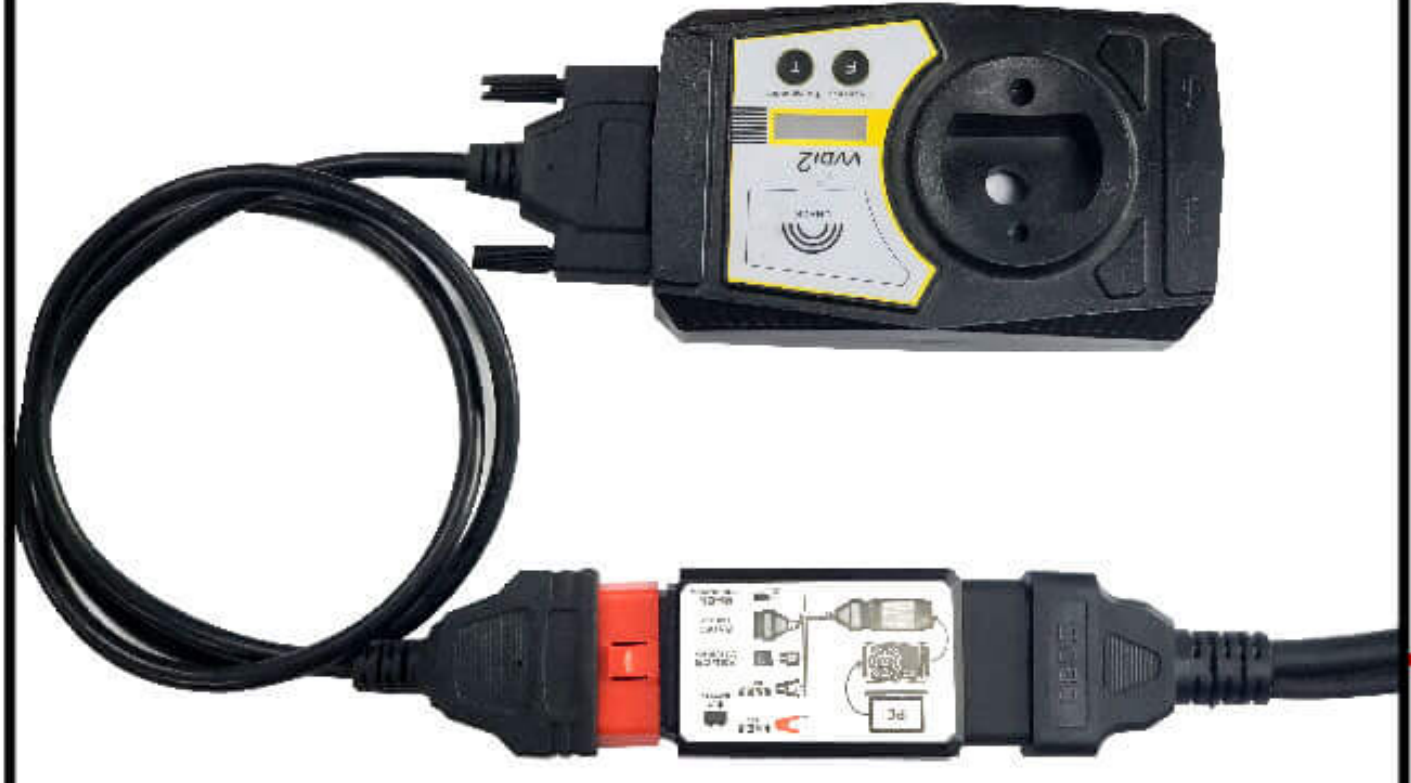

J6 lock plug

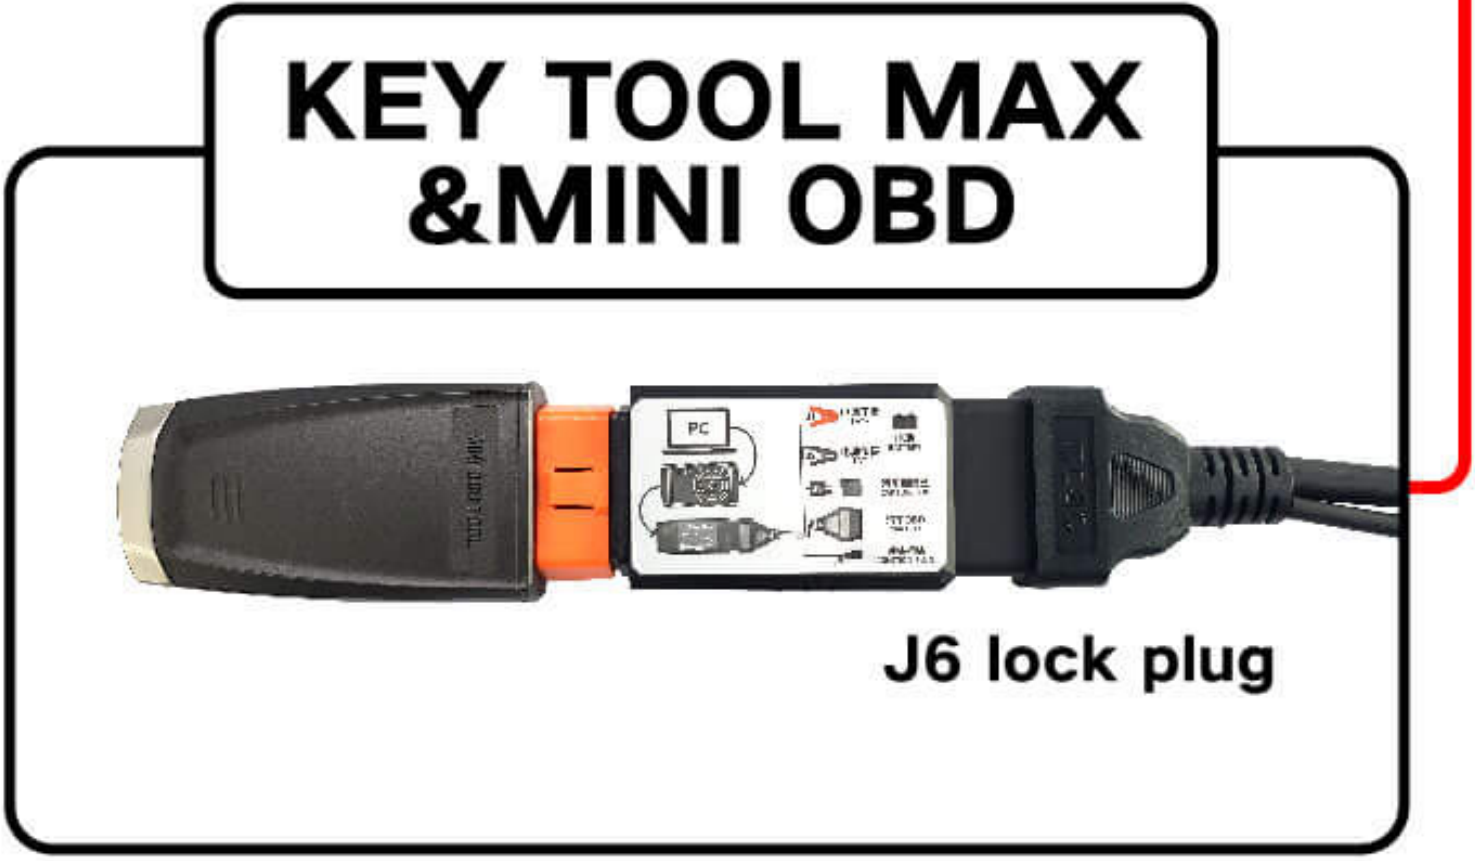
KEY TOOL MAX
&MINI OBD
J6 lock plug

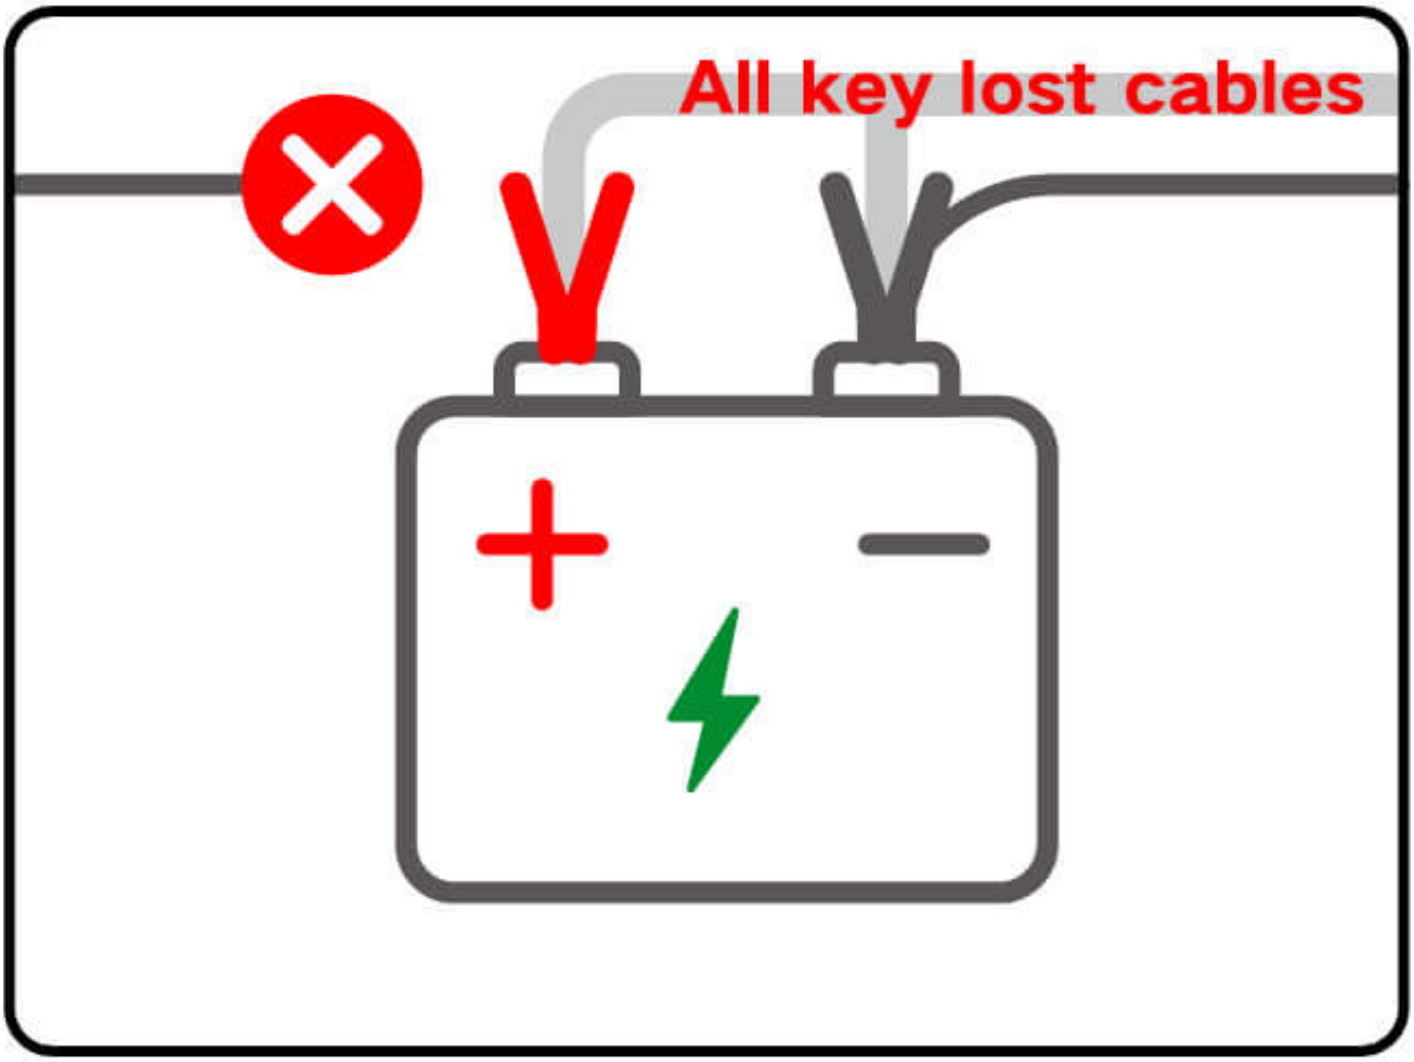
All key lost cables
+
−

⑤ Please generate start chip referring to software interface

VVDI

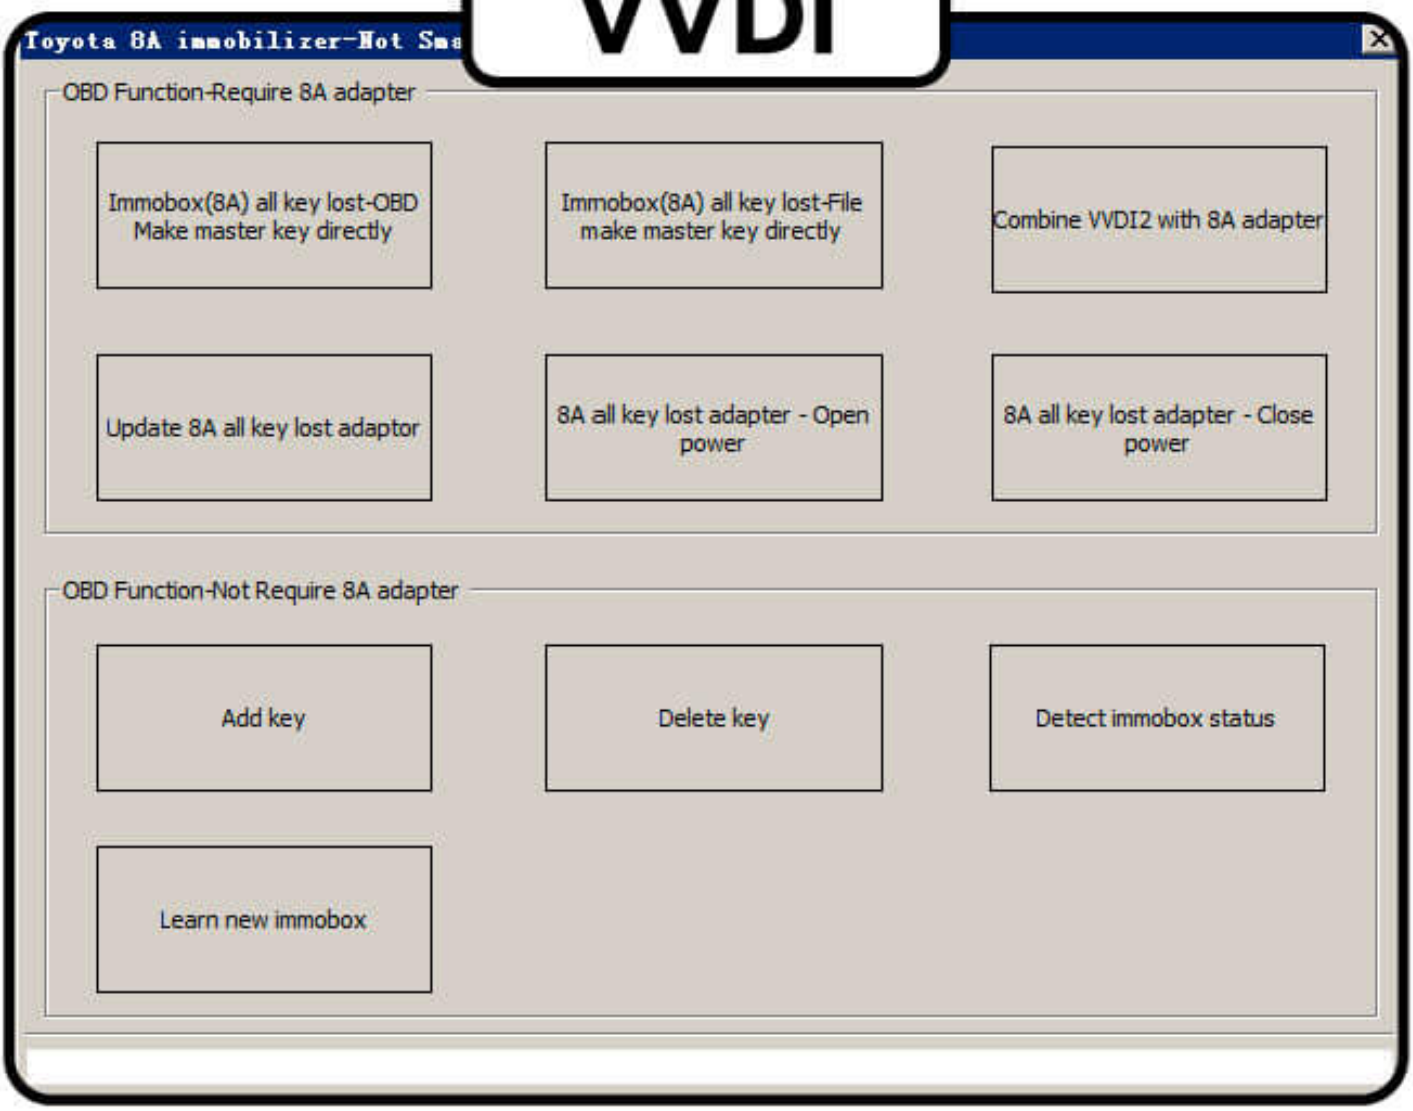
Toyota 8A immobilizer-Not Sma
OBD Function-Require 8A adapter
Immobox(8A) all key lost-OBD Make master key directly
Immobox(8A) all key lost-File make master key directly
Combine VVDI2 with 8A adapter
Update 8A all key lost adaptor
8A all key lost adapter - Open power
8A all key lost adapter - Close power
OBD Function-Not Require 8A adapter
Add key
Delete key
Detect immobox status
Learn new immobox

KEY TOOL MAX &MINI OBD

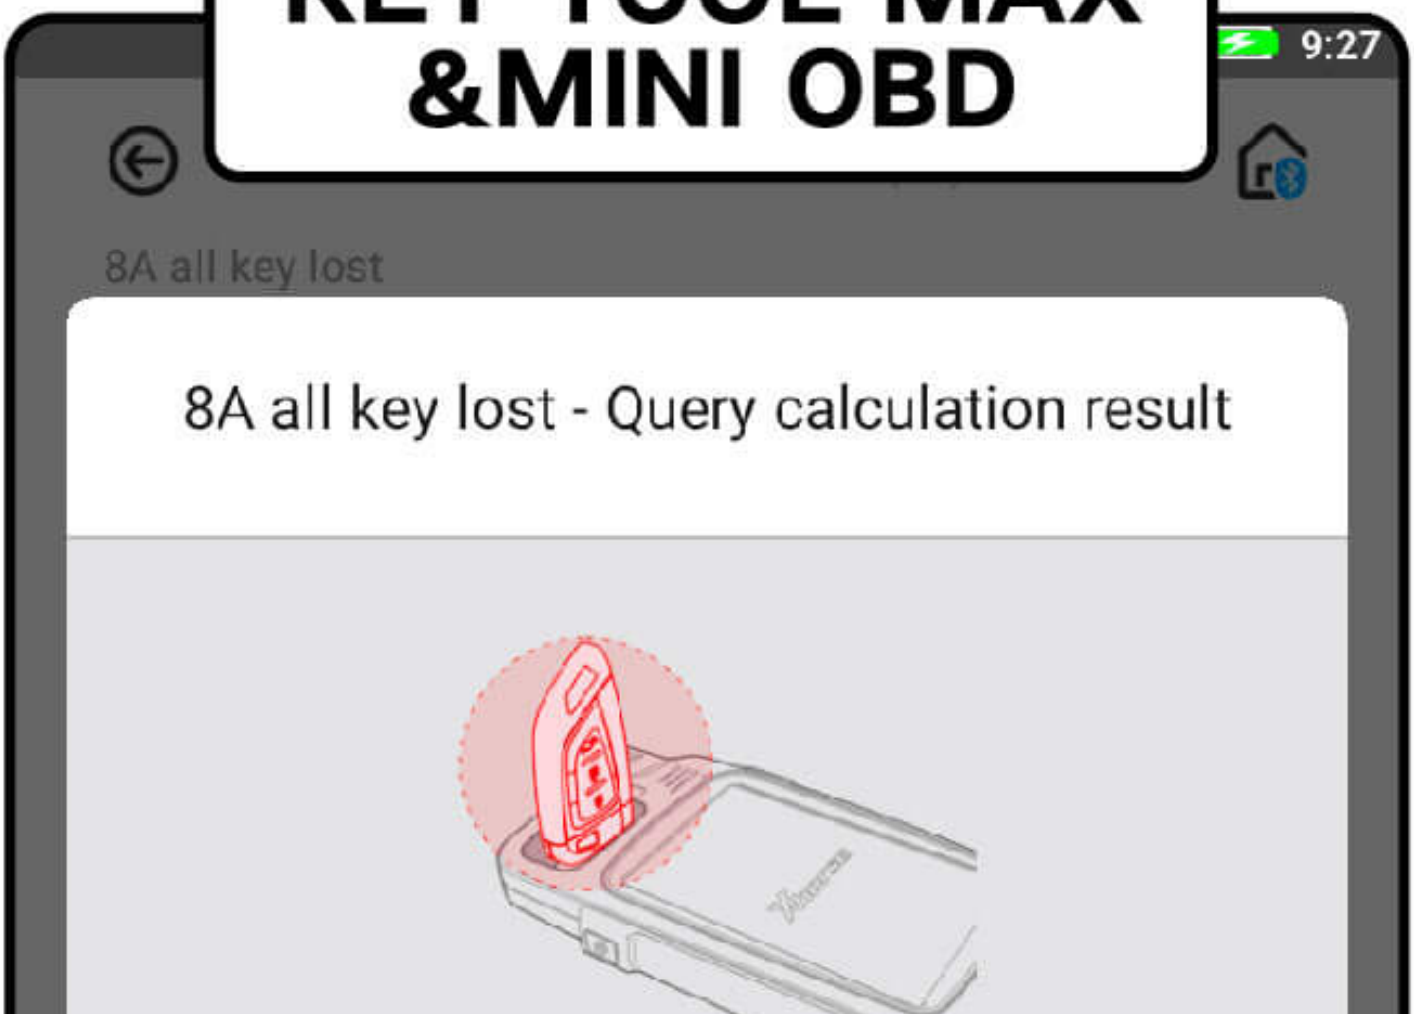
9:27
8A all key lost
8A all key lost - Query calculation result

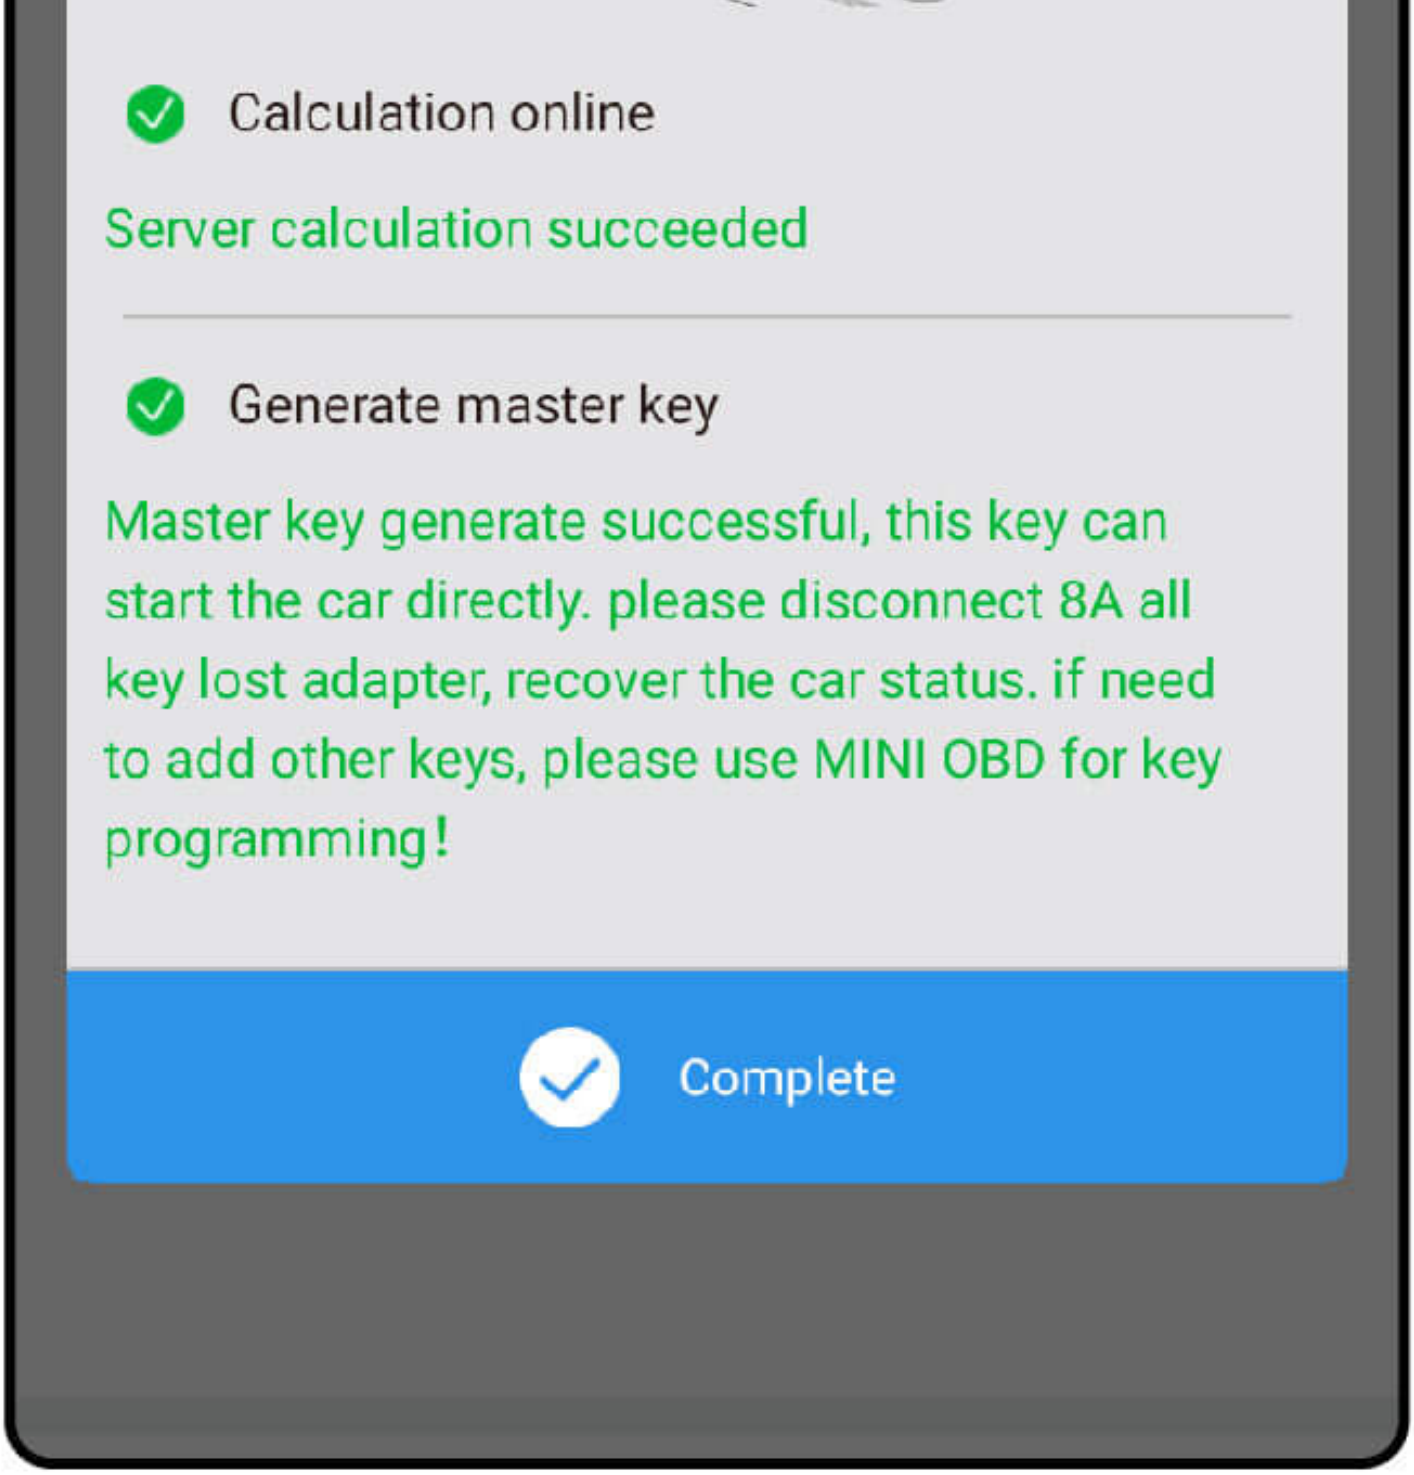

✓ Calculation online

Server calculation succeeded

✓ Generate master key

Master key generate successful, this key can start the car directly. please disconnect 8A all key lost adapter, recover the car status. if need to add other keys, please use MINI OBD for key programming!

⑥ Please disconnect all cables,recover all connection wires as car original status

If the connection wires not recovery to original status and start the car directly, the fuse boxe and device will be burnt

⑦ Test generated transponder